


Bliss® Smart Blinds

App guide

iOS v2.2.x

Android v2.2.x

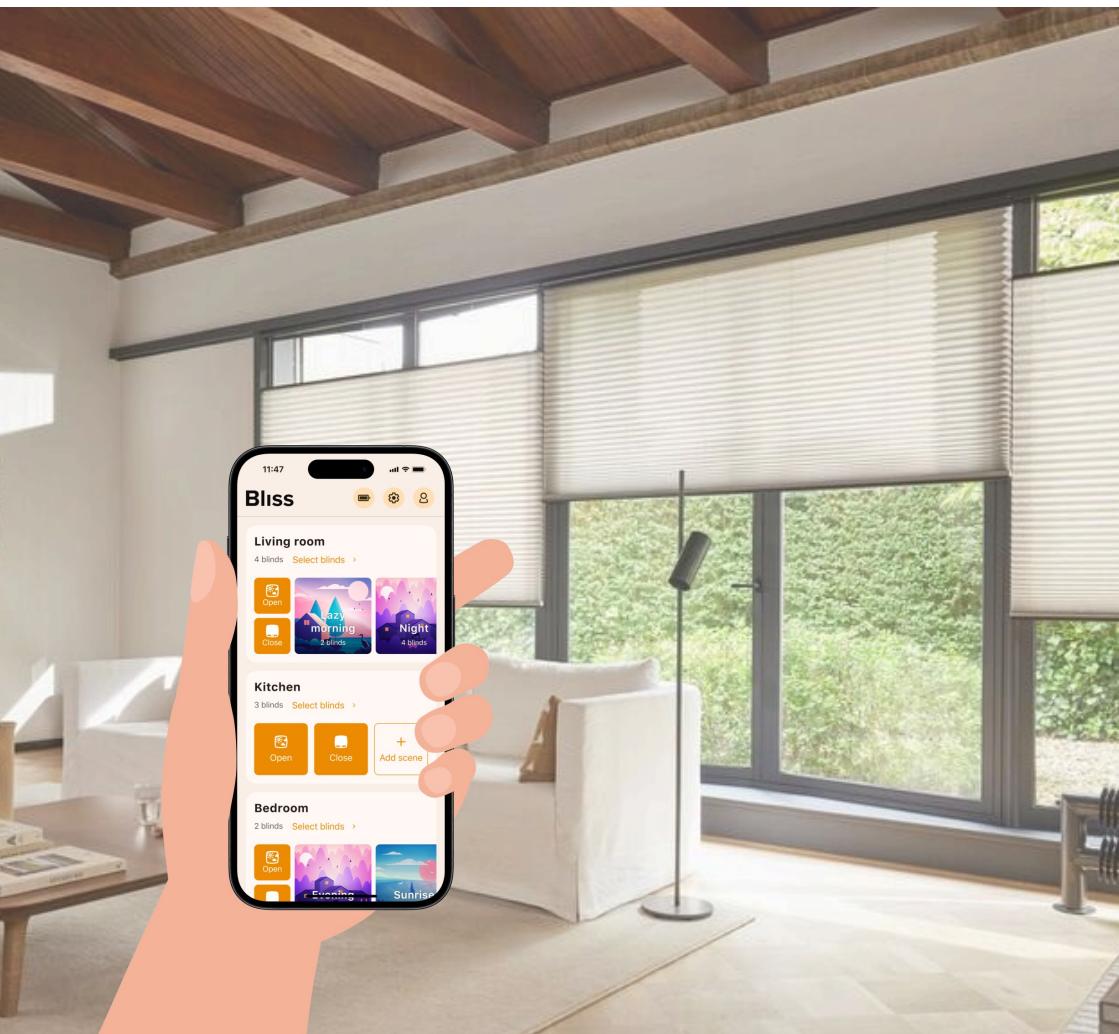

Contents

1	Getting started	
1.1	Installing the app	4
1.2	Creating an account	5
2	Home screen	
2.1	Features and controls	7
3	Adding blinds	
3.1	Activate blind	8
3.2	Add first blind	10
3.3	Scan QR code	11
3.4	Add blind name	12
3.5	Add room name	13
3.6	Automatic sub-branding	14
4	Customise blind settings	
4.1	Add a remote control	15
4.2	Add a favourite position (Gen 2)	18
4.3	Change motor speed (Gen 2)	21
5	Battery health	
5.1	Check battery status	23
6	Operating blinds	
6.1	Operate individual and groups of blinds	25
7	Scenes and timers	
7.1	Add a scene and timer (from home screen)	27
7.2	Add a scene and timer (from settings screen)	32
7.3	Changing scene name	38
7.4	Changing scene theme	41
7.5	Updating timers	44
7.6	Operating scenes	47
8	Synchronising	
8.1	Synchronise blind timers	49

Contents

9	Over-The-Air updates	
9.1	Updating motor firmware	53
10	Favourite position (Gen 2)	
10.1	Change and save to new favourite position	59
10.2	Delete favourite position - Option 1	63
10.3	Delete favourite position - Option 2	66
11	End limits	
11.1	Set new end limit position (Gen 1 and Gen 2)	70
11.2	Set fabric open position (Gen 1 and Gen 2).....	75
11.3	Adjust top limit position (Gen 2)	76
11.4	Adjust bottom limit position (Gen 2)	81
12	Room order	
12.1	Change room order appearance	86
13	Appearance	
13.1	Changing between light and dark mode.....	89
14	Siri Shortcuts	
14.1	Creating a Shortcut for blind movement.....	91
14.2	Creating a Shortcut for scene movement.....	97
14.3	Operating Shortcuts - manual control.....	102
14.4	Operating Shortcuts - voice control	103
15	Deleting and resetting	
15.1	Deleting a remote control	104
15.2	Deleting blinds	108
15.3	Deleting and resetting blinds	111
15.4	Reset account password	114
15.5	Delete account.....	117
16	Support & troubleshooting	
16.1	FAQs	119
16.2	App guide	123

1 Getting started



1.1 Installing the app

Search for and download the free 'Bliss Smart Blinds' App onto your smartphone. Available on:

- Apple® App Store, iOS version 15.0 and later.
- Google Play Store, Android version 9.0 and up.
- Alternatively, scan the below QR code or visit: www.bliss-smartblinds.com/app



bliss-smartblinds.com/app

1 Getting started




1.2 Creating an account

To setup, operate blinds and share the account with other users, a Bliss® Account is required.

1.2.1 From the start-up screen, tap 'Create Account'.

1.2.2 Enter a valid email address, create a password and accept the Terms of Use. Tap 'Sign Up'.


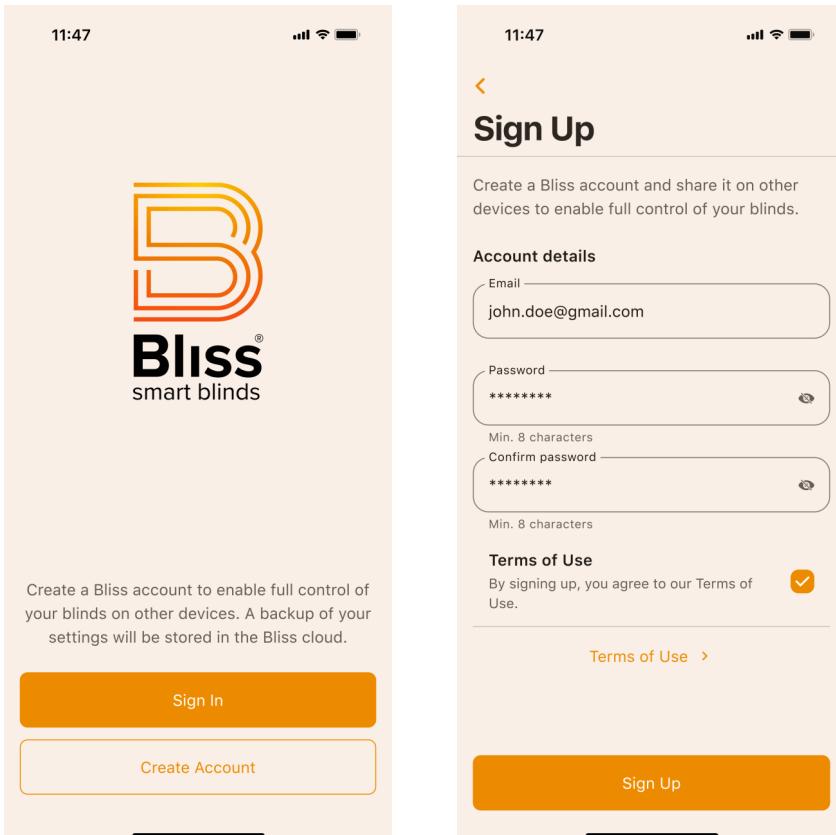


1 Getting started



1.2 Creating an account

- 1.2.3 A confirmation message will appear stating the account was successfully created. Tap '**Continue**'.
- 1.2.4 Tap '**Continue**' for Bluetooth permission.

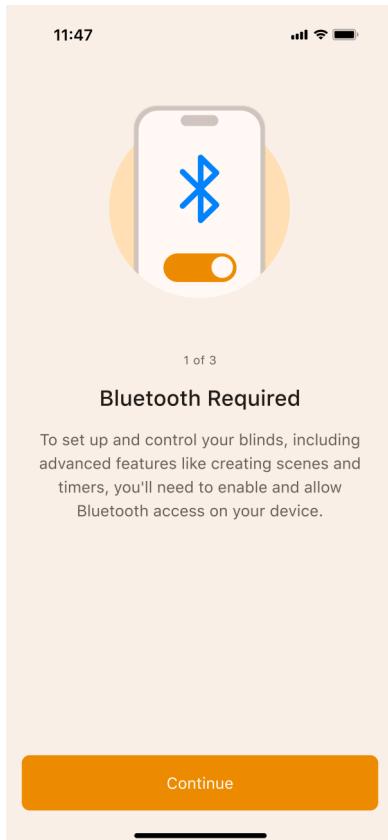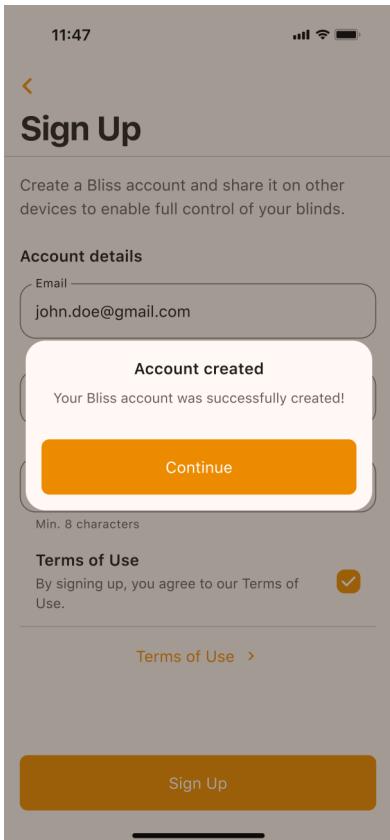


2 Home screen



2.1 Features and controls

Ref.	Item	Ref.	Item
1	Battery status	5	Open all blinds
2	Profile menu	6	Activate scene
3	Settings menu	7	Close all blinds
4	Manual control screen	8	Add new scene

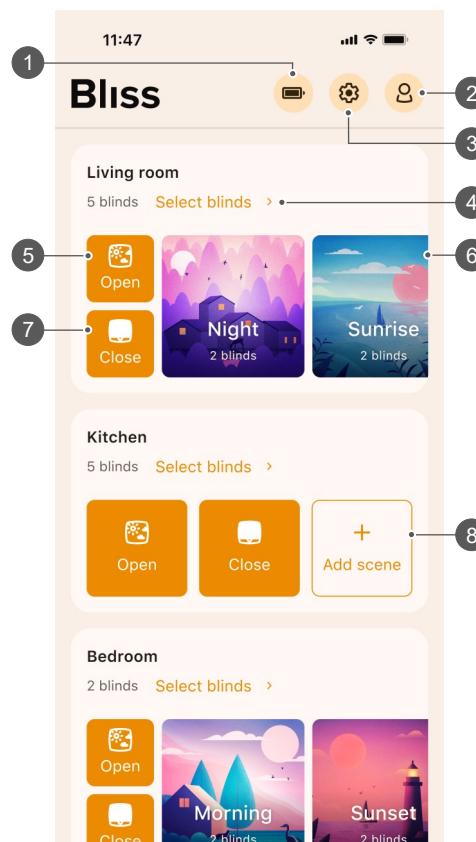

3 Adding blinds




3.1 Activate blind

Prepare blind for adding to the app. Remove the red pin and QR code product ID label.

Depending on the generation of blind, there are two different labels available, Gen 1 blinds are shipped with the dark orange label, while Gen 2 blinds are shipped with the pale orange label containing specific motor start-up instructions.



Gen 1

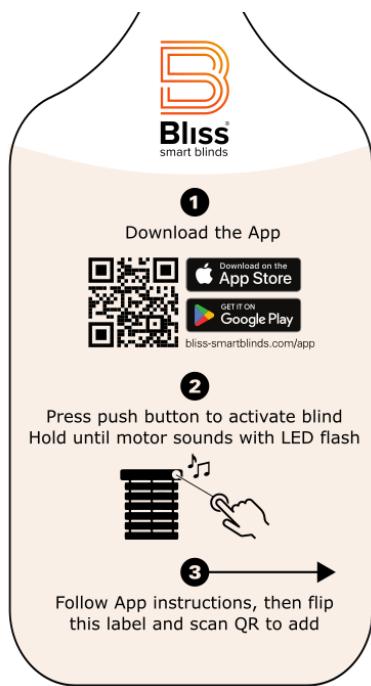

Gen 2

3 Adding blinds



3.1 Activate blind


Roller Blinds

Double Roller Blinds

Shangri-La Blinds

If motor has an ON/OFF switch, slide to the ON position (Gen1 / Gen 2). Motor will sound 1x buzzer noise after removing the red pin (Gen1).

If no ON/OFF switch, press and hold the settings button for 6 seconds until the motor sounds and LED flashes red 4x (Gen 2).

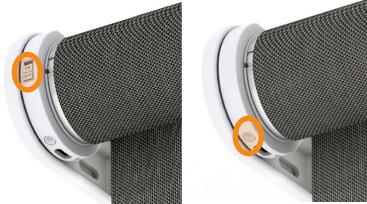

Pleated Blinds (Top-Down, Bottom-Up)

Honeycomb Blinds (Top Down, Bottom-Up)

Press and hold settings button for 6 seconds until the motor sounds and LED flashes red 4x (Gen 2).



Pleated Blinds

Honeycomb Blinds

Venetian Blinds

Roman Blinds

Motor will sound 1x buzzer noise after removing the red pin (Gen 1).

Press and hold settings button for 6 seconds until the motor sounds and LED flashes red 4x (Gen 2).




3 Adding blinds



3.2 Add first blind

3.2.1 Tap '**Add my first blind**'.

3.2.2 Tap '**Allow**' for camera permission.

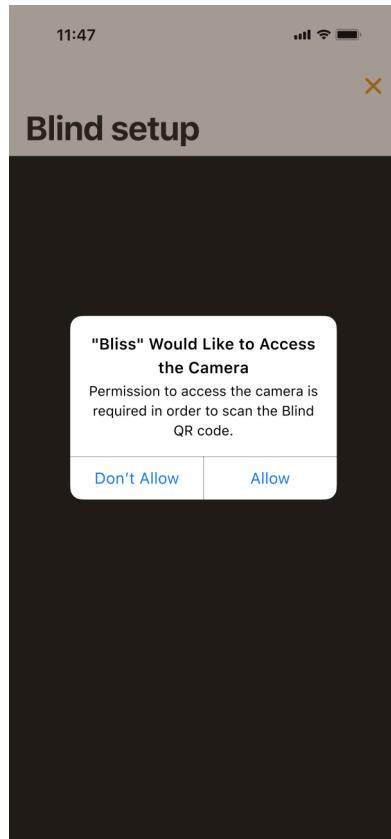


3 Adding blinds



3.3 Scan QR code

3.3.1 Scan the QR code product ID label. Blind will jog after being found by the app.

3.3.2 Tap 'Found it!'

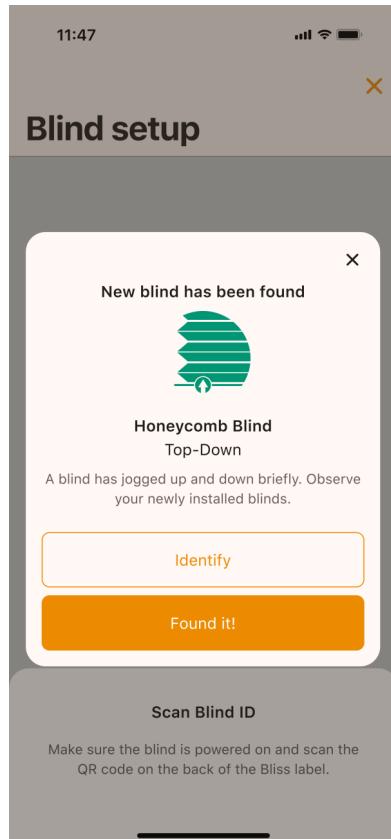



3 Adding blinds



3.4 Add blind name

3.4.1 Tap entry field box and create new blind name.

3.4.2 Select 'Choose room' and tap 'Add room'.

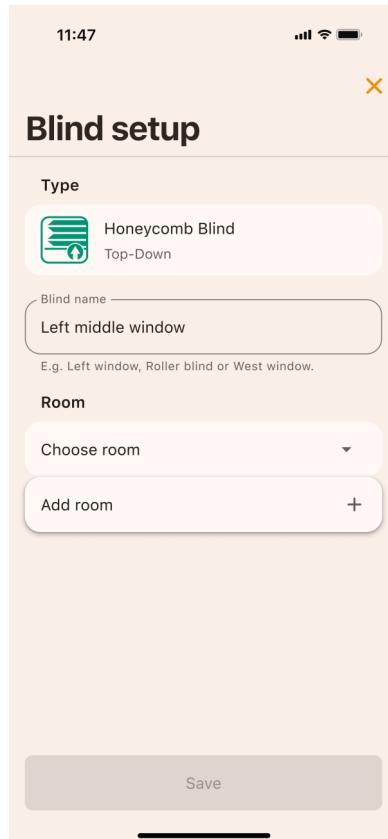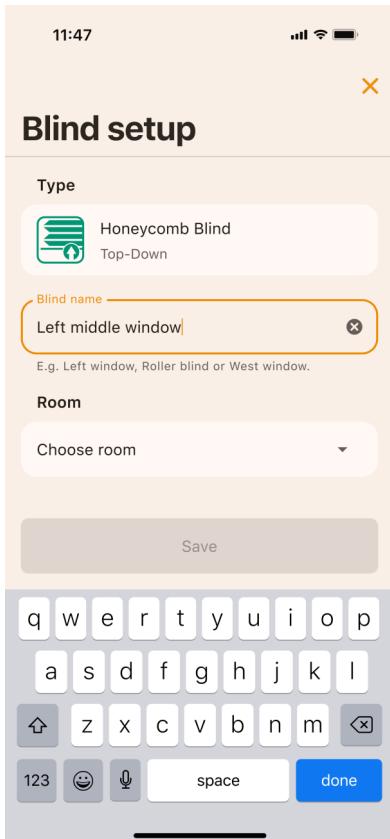



3 Adding blinds



3.5 Add room name

3.5.1 Tap entry field box and create new room name. Tap ‘Done’.

3.5.2 Tap ‘Save’.

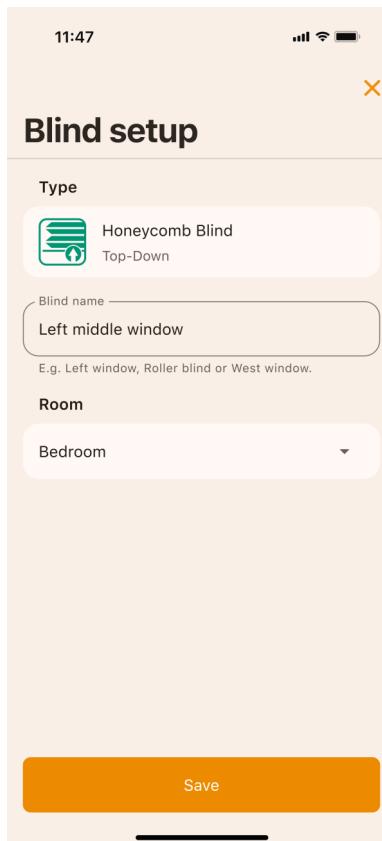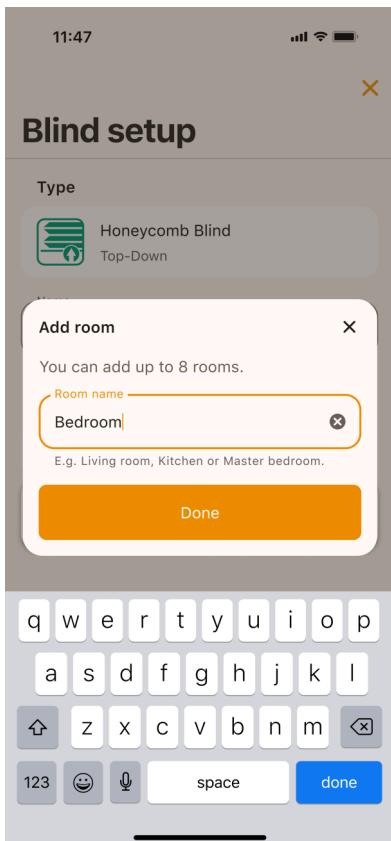

3 Adding blinds



3.6 Automatic sub-branding

For an enhanced customer experience, if the blind is pre-programmed and assigned with sub-branding, the app will detect this and automatically change the look and feel after adding and saving the room name during blind setup.

- 3.6.1 Sub-brand page and contact details are shown. Tap '**Next**'.
- 3.6.2 App logo and colours will change to specific sub-brand appearance.

Blind setup

To enhance your experience, the app has detected a new blind specific to the below branding. The look and feel of the app will change accordingly from the default settings.

Next

Battery check

The Bliss App hasn't been connected to some of your blinds for a while. No problem, but we do recommend you run a health check, to ensure your blinds perform at their best.

Check now

Bedroom

1 blind [Select blinds >](#)

Open **Close** **Add scene**



4 Customise blind settings



4.1 Add a remote control

4.1.1 Tap 'Connect to a remote'.

4.1.2 Tap 'Next'. App will connect to the blind.

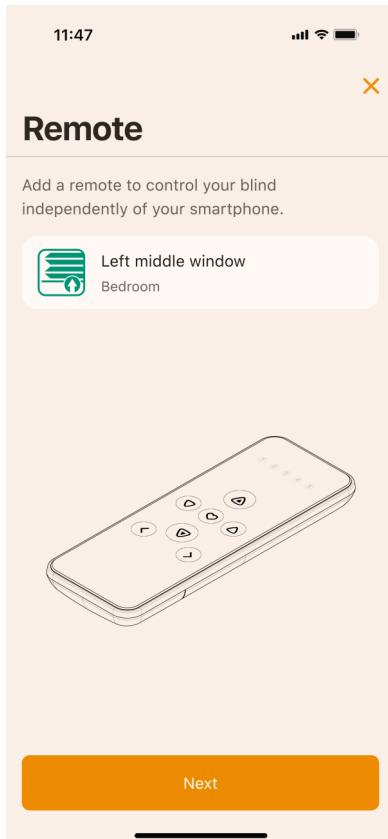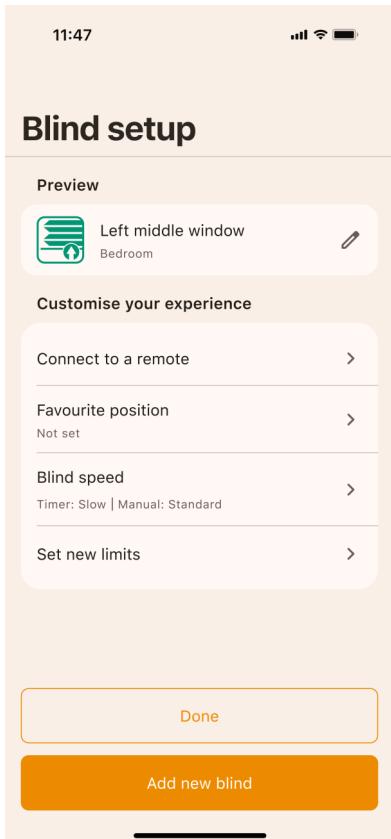



4 Customise blind settings



4.1 Add a remote control

4.1.3 Choose a channel number on the remote. Tap 'Next'.

4.1.4 Remove battery cover and locate button 'C'.

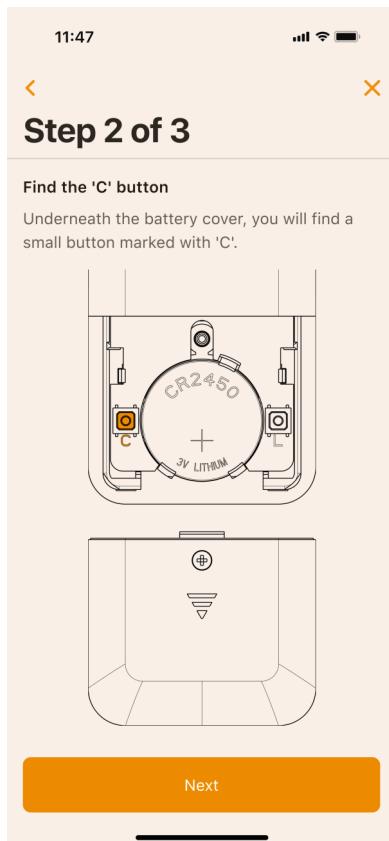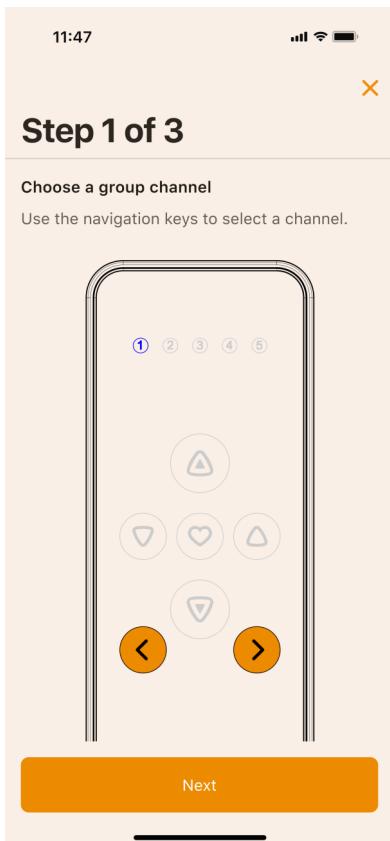

4 Customise blind settings





4.1 Add a remote control

4.1.5 Tap 'Enter pairing mode'.

Motor will sound (Gen 1/Gen 2) plus red LED blink (Gen 2).

Press and release 'C' button on the back of the remote before the progress bar runs out. Motor will jog (Gen1/Gen2) plus buzzer noise and 4x green LED (Gen2) to confirm remote pairing is complete.¹

¹ If no motor jog or buzzer noise / green LED, remote control is not saved.

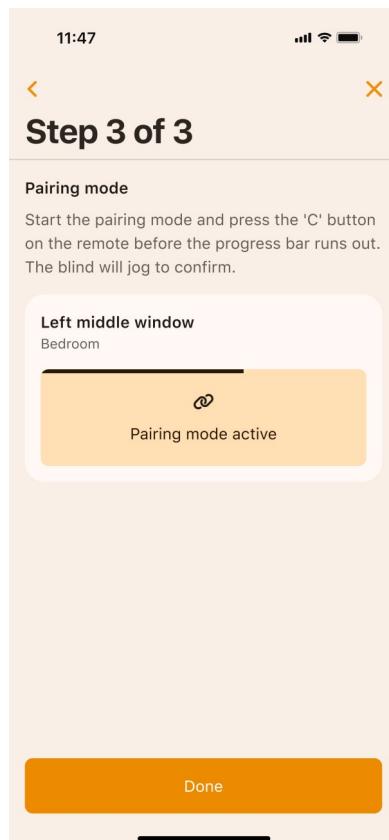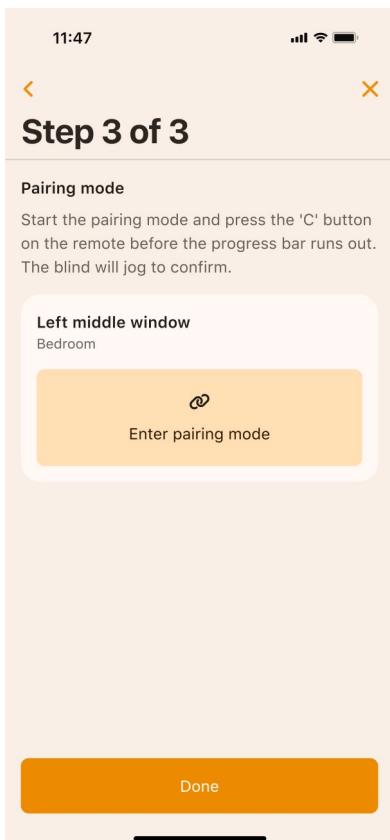

4 Customise blind settings




4.2 Add a favourite position (Gen 2)

4.2.1 Tap 'Favourite position'.

4.2.2 Operate blind to desired favourite position by:

- Moving the slider 1 up or down.
- Pressing the direction arrow button 2.¹
- Entering a percentage value into precise movement box 3.


¹ Tap button to enable / disable arrow buttons.

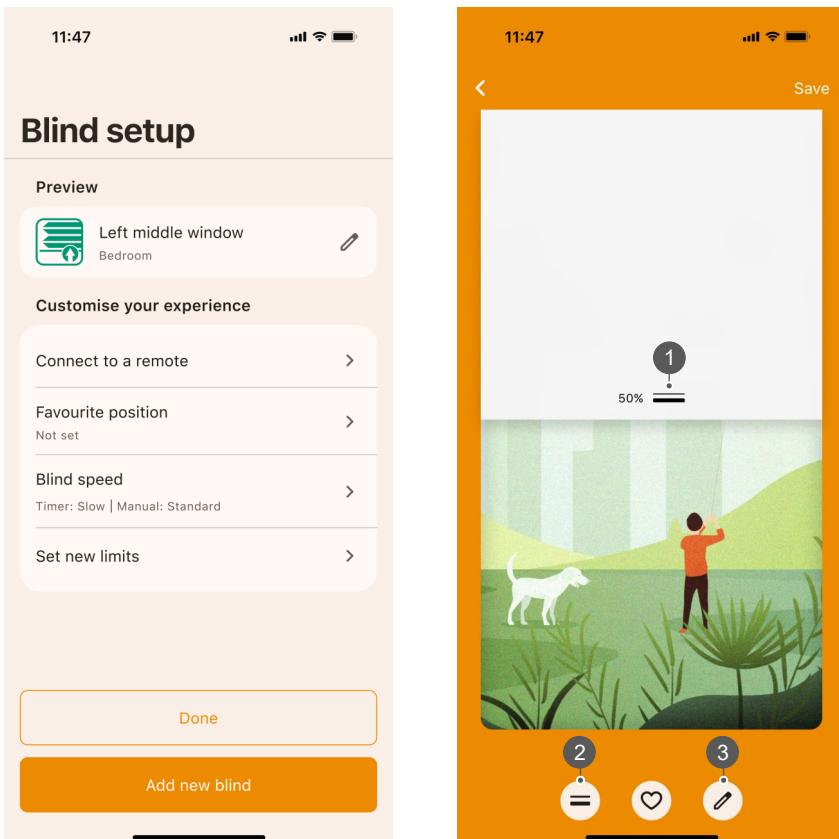

4 Customise blind settings




- 4.2 Add a favourite position (Gen 2)
- 4.2.3 Tap the favourite button 4.
- 4.2.4 Tap 'Set'. Blind will jog and motor will sound plus 4x green LED to confirm favourite position is saved.

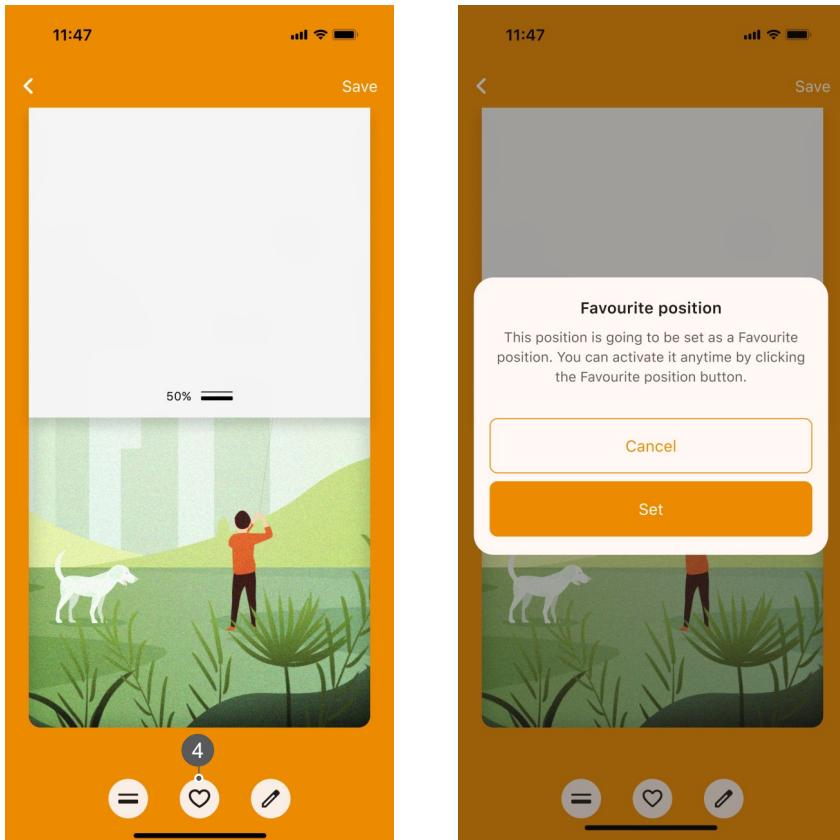

4 Customise blind settings



- 4.2 Add a favourite position (Gen 2)
- 4.2.5 Tap the back arrow.
- 4.2.6 Saved favourite position shown in the blind setup menu.

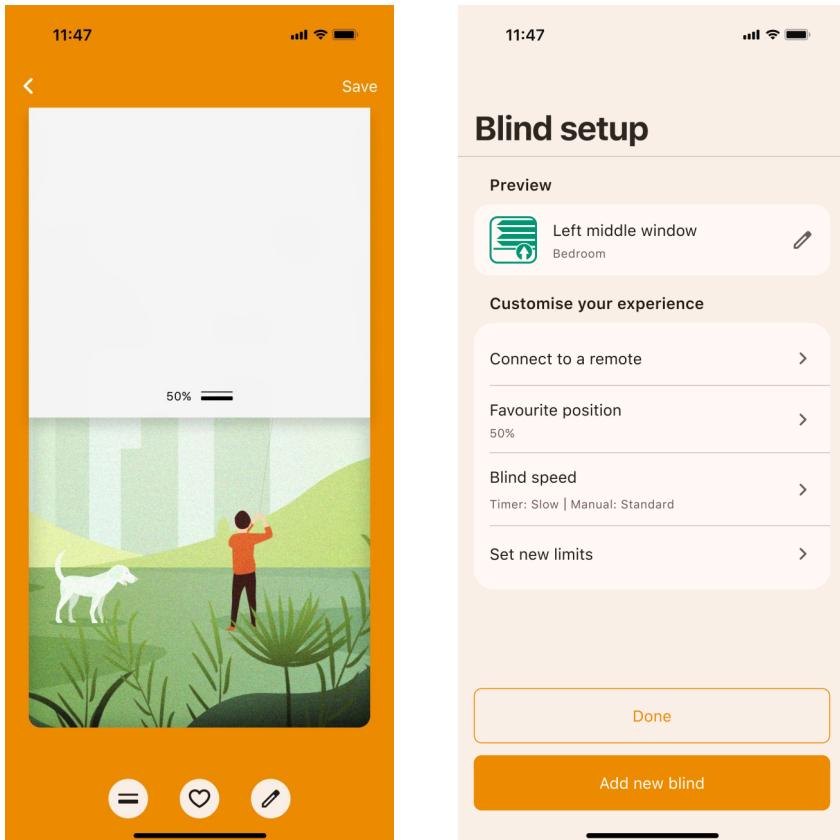

4 Customise blind settings



4.3 Change motor speed (Gen 2)

4.3.1 Tap 'Blind speed'.

4.3.2 Select Slow, Comfort or Standard blind speed for timer activation and manual control. Tap 'Check blind speed' to visually inspect real-time blind speed movement via the manual control screen.¹

¹ Default speeds: Timer = Slow, Manual control = Standard.

Blind setup

Preview

Left middle window
Bedroom

Customise your experience

Connect to a remote

Favourite position
50%

Blind speed
Timer: Slow | Manual: Standard

Set new limits

Done

Add new blind

Blind speed

Timer

Set timer activation blind speed

» Slow

» Comfort

» Standard

Manual control

Set manual control blind speed

» Slow

» Comfort

» Standard


Check blind speed

4 Customise blind settings



4.3 Change motor speed (Gen 2)

4.3.3 Saved motor speeds shown in the blind setup menu. To add further blinds, tap ‘Add new blind’ or ‘Done’ to finish.

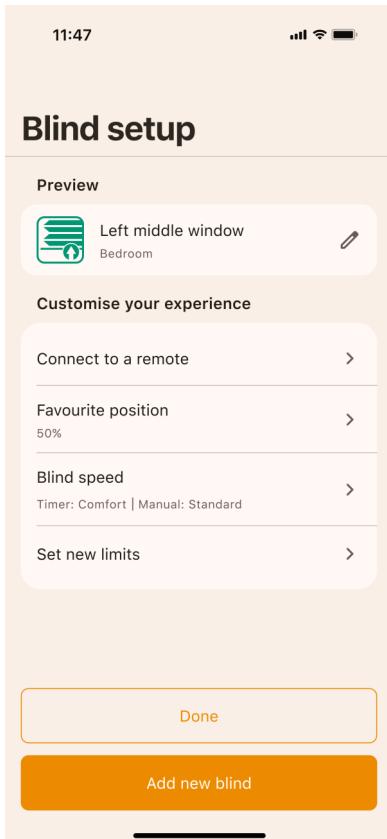



5 Battery health



5.1 Check battery status

5.1.1 Tap ‘Check now’ or tap the battery status icon 1.

5.1.2 Battery status is shown. Tap ‘Update’.

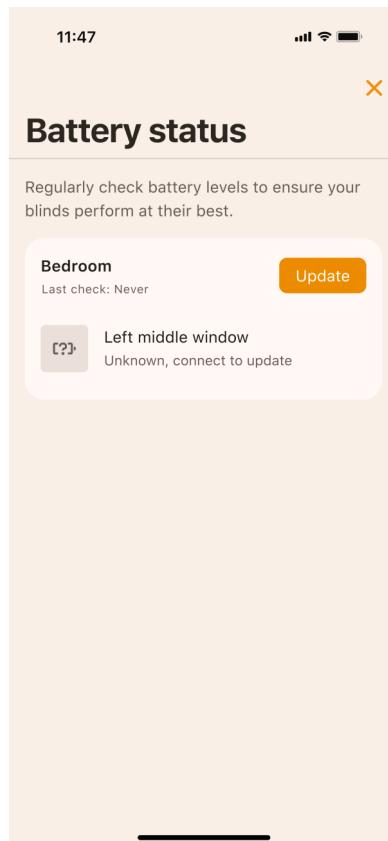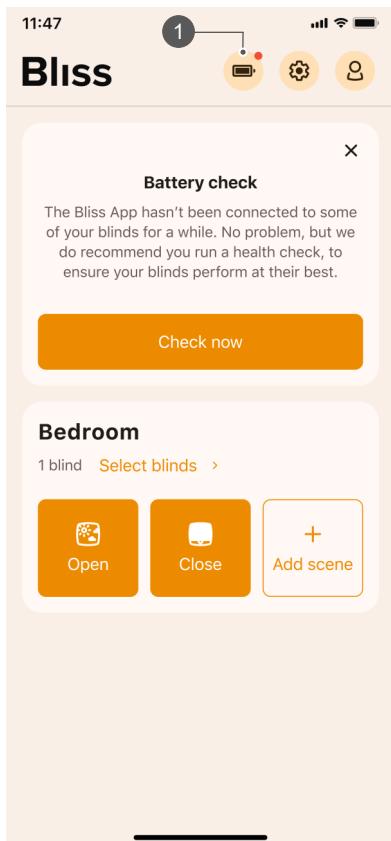



5 Battery health



5.1 Check battery status

5.1.3 App will connect to the blind and update the battery status.

5.1.4 Updated battery status is shown.

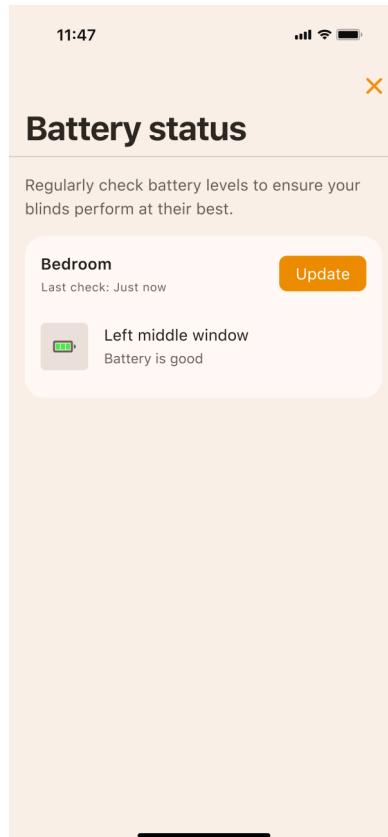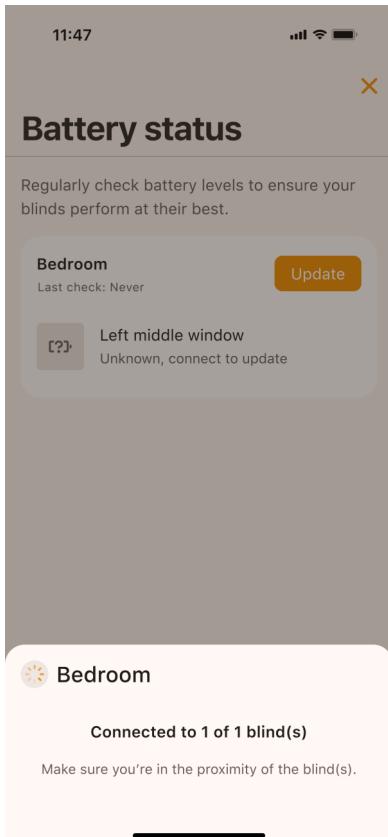


6 Operating blinds



6.1 Operate individual and groups of blinds

- 6.1.1 Tap 'Open' 1 or 'Close' 2 to operate all blinds in the room to the open or close position.
- 6.1.2 Tap 'Select blinds' 3 and choose blinds for manual control. Tap 'Next'.¹

¹ If only one blind is added to a room, app will navigate user to the manual control screen.

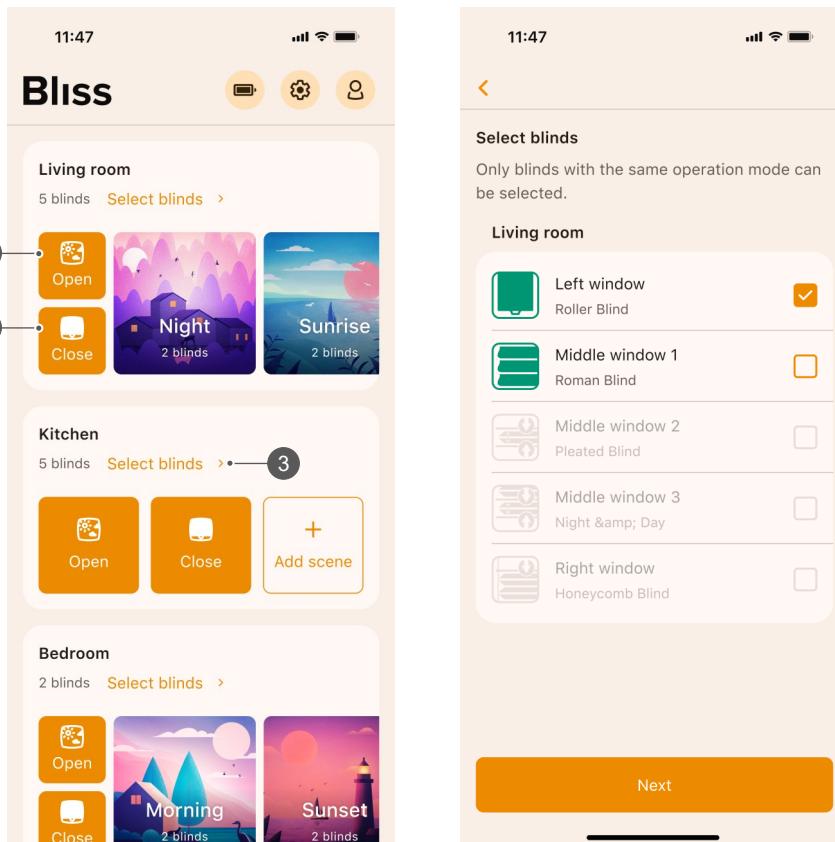

6 Operating blinds




6.1 Operate individual and groups of blinds

6.1.3 Manual control screen options:

- Moving the slider 4 up or down.
- Pressing the direction arrow buttons 5.²
- Pressing the Favourite button 6 (Gen 2).
- Entering a percentage value into precise movement box 7.



² Tap the up or down arrow 1x to step up / down (Gen 1) or move at slow adjustment blind speed (Gen 2).

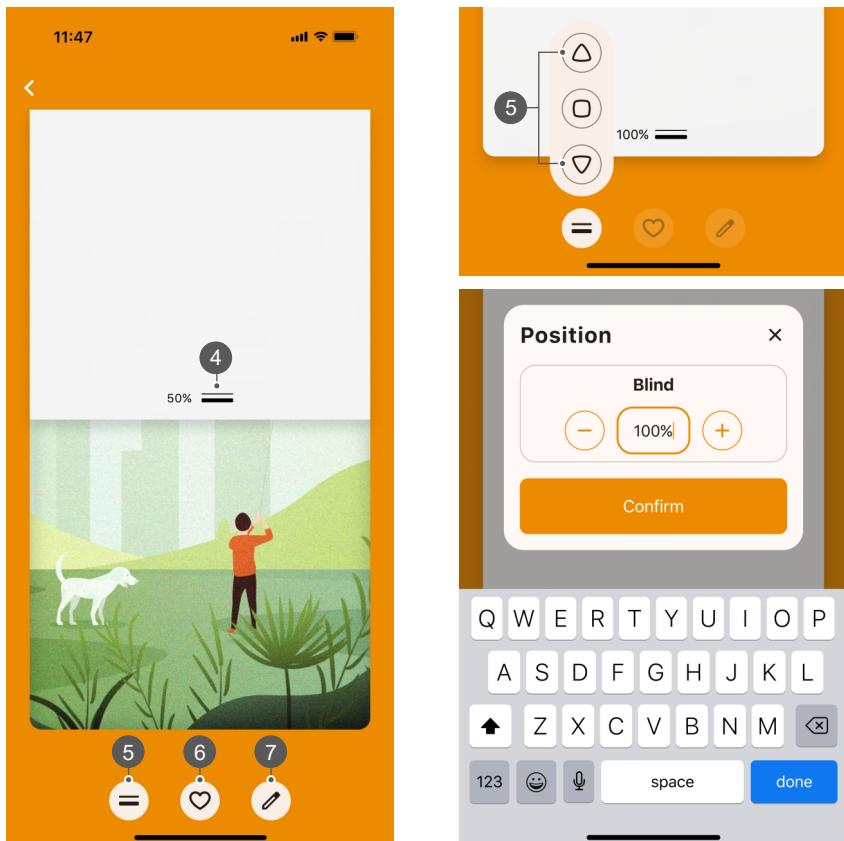

7 Scenes and timers



- 7.1 Add a scene and timer (from home screen)
- 7.1.1 Tap 'Add scene' ① in room name wanting a new scene added.
- 7.1.2 Choose a theme image to use with the scene name.

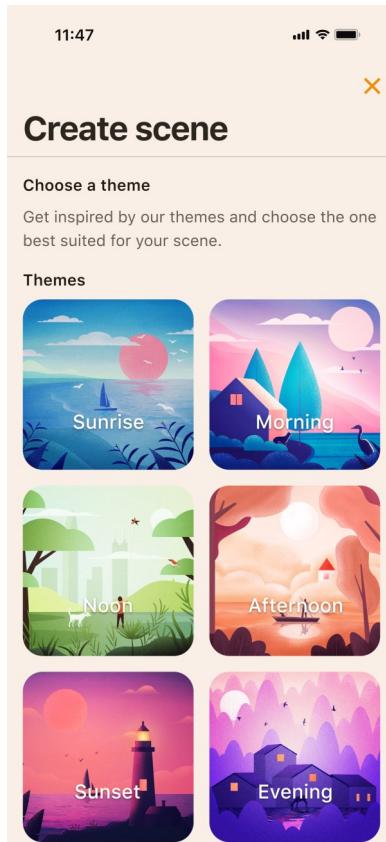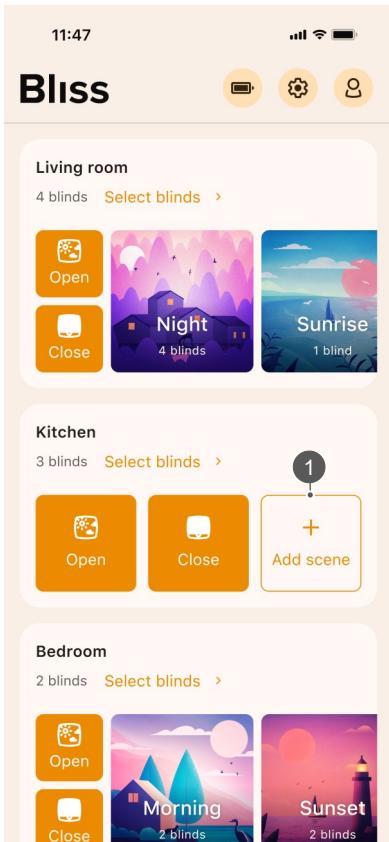



7 Scenes and timers



7.1 Add a scene and timer (from home screen)

7.1.3 Enter a scene name. Tap 'Next'.

7.1.4 Select blind to be added to scene name.

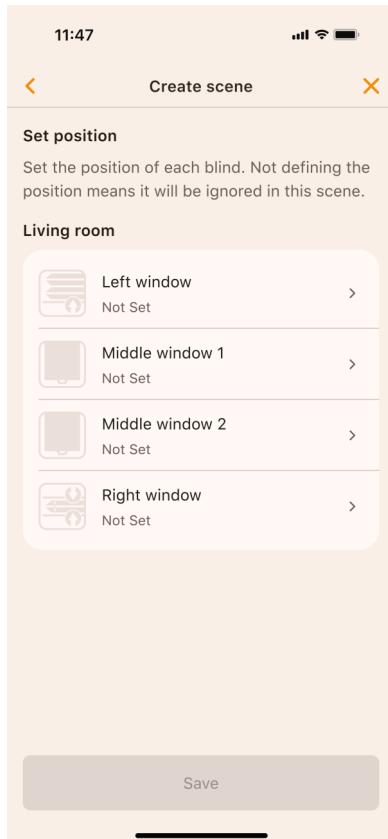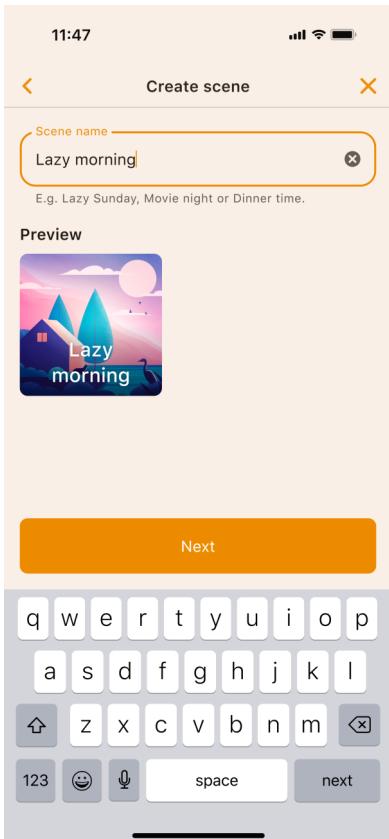

7 Scenes and timers




7.1 Add a scene and timer (from home screen)

7.1.5 Operate blind to desired scene position by:

- Moving the slider ② up or down.
- Pressing the direction arrow button ③.¹
- Entering a percentage value into precise movement box ④.

7.1.6 Tap 'Save'. Select additional blinds to add to the scene name, or tap 'Save'.

¹ Tap button to enable / disable arrow buttons.


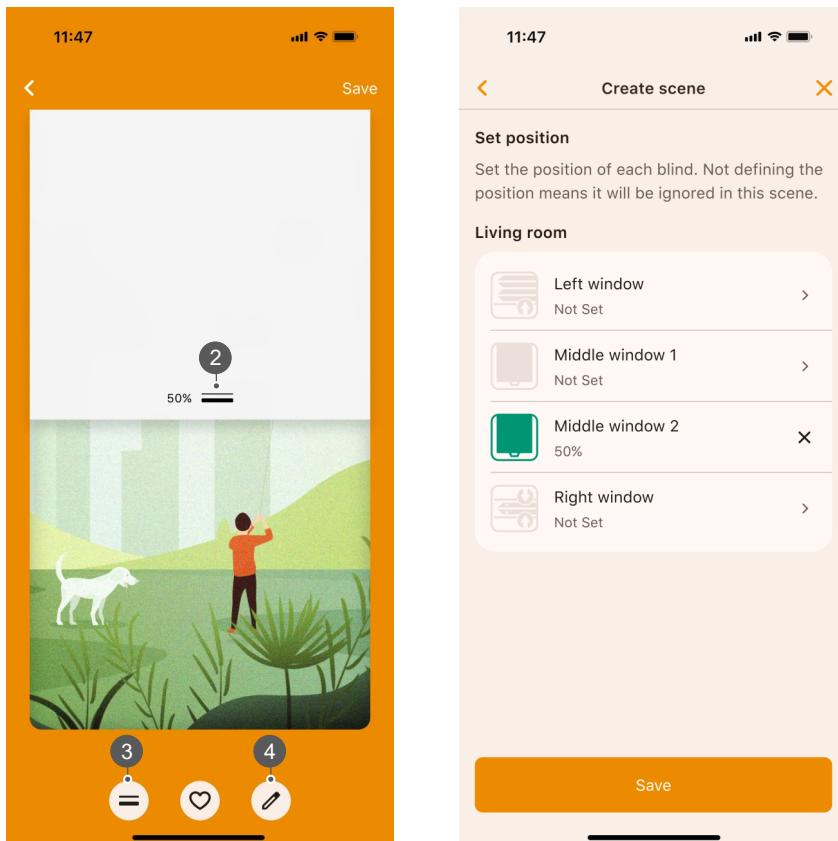


7 Scenes and timers



- 7.1 Add a scene and timer (from home screen)
- 7.1.7 Tap 'Add timer'.
- 7.1.8 Select activation time and days of the week. Tap 'Save'. Motor will jog (Gen 1 / Gen 2) plus buzzer noise and 4x green LED (Gen 2) to confirm timer is saved.¹

¹ If no motor jog or buzzer noise / green LED, timer is not saved.

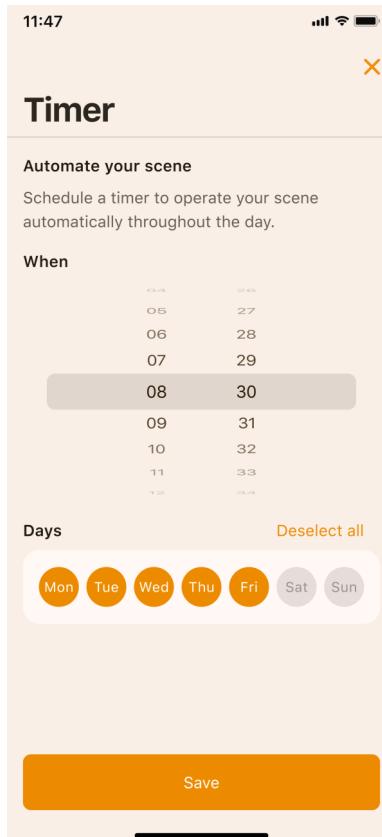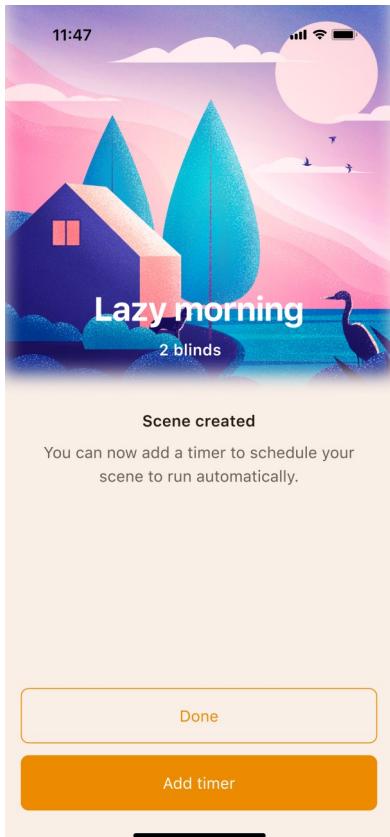


7 Scenes and timers



7.1 Add a scene and timer (from home screen)

7.1.9 New scene name added to the room on home screen.

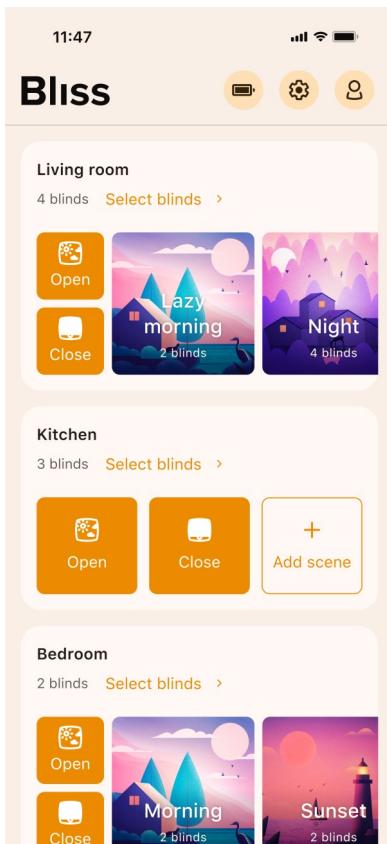


7 Scenes and timers



7.2 Add a scene and timer (from settings screen)

7.2.1 Tap the settings gear icon ①.

7.2.2 Tap ‘Scenes’ or ‘Add scene’ in room name wanting a new scene added.

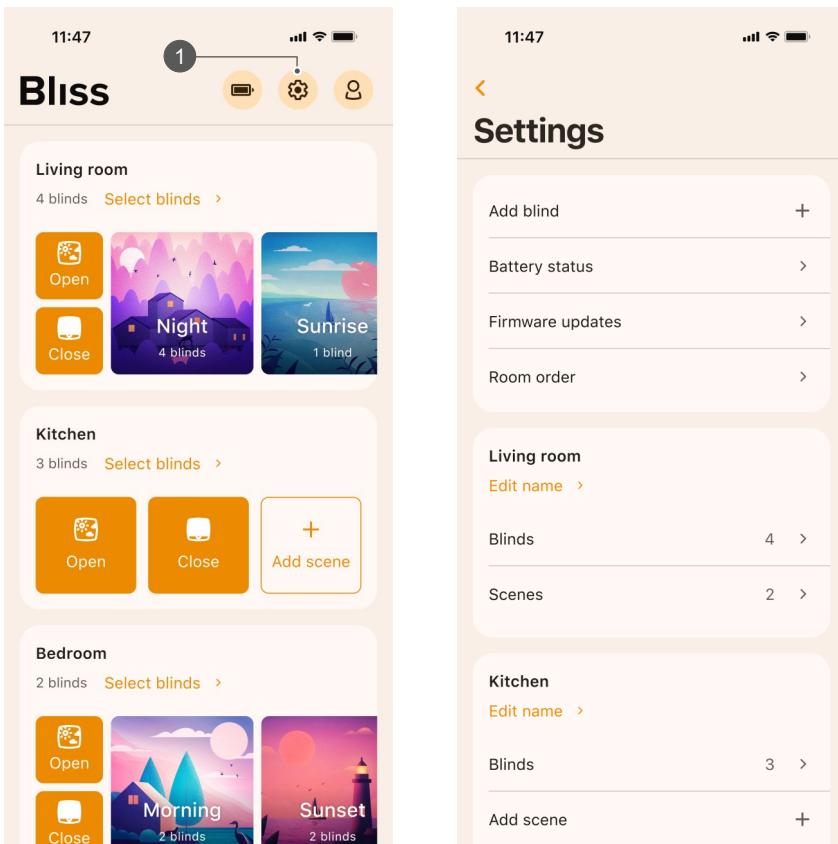



7 Scenes and timers



7.2 Add a scene and timer (from settings screen)

7.2.3 Tap 'Add scene'.

7.2.4 Choose a theme image to use with the scene name.

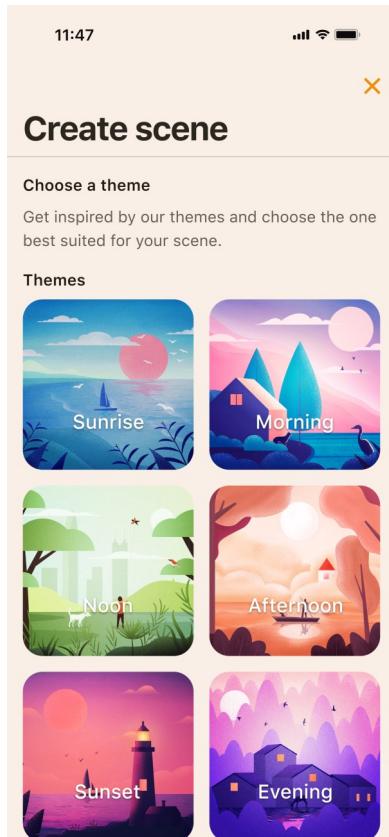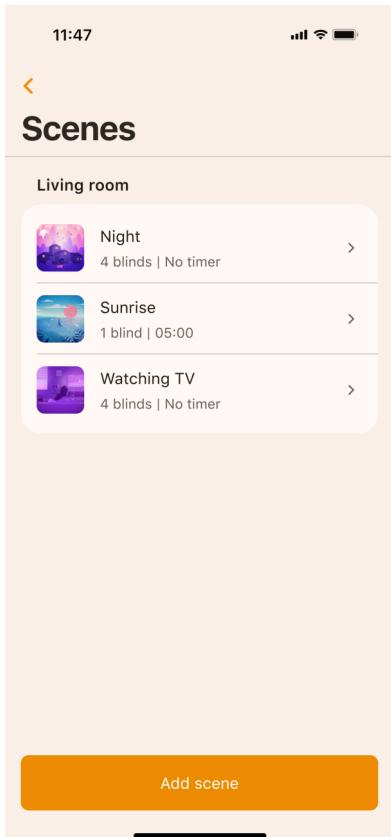



7 Scenes and timers



7.2 Add a scene and timer (from settings screen)

7.2.5 Enter a scene name. Tap 'Next'.

7.2.6 Select blind to be added to scene name.

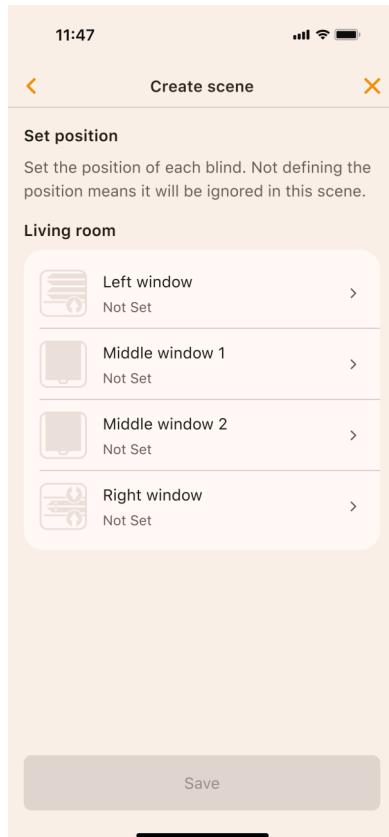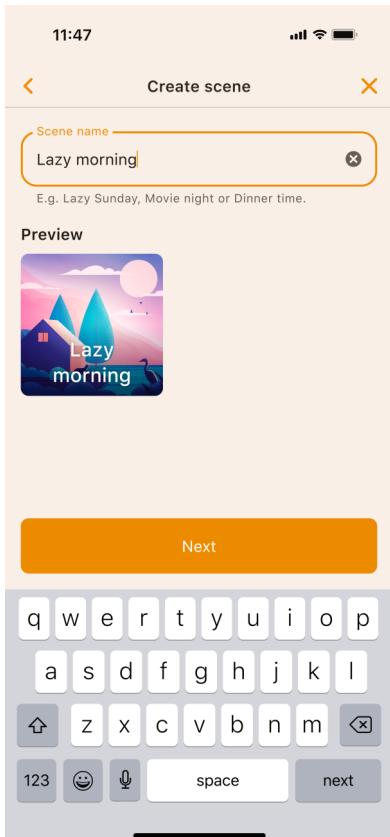

7 Scenes and timers




7.2 Add a scene and timer (from settings screen)

7.2.7 Operate blind to desired scene position by:

- Moving the slider ② up or down.
- Pressing the direction arrow button ③.¹
- Entering a percentage value into precise movement box ④.

7.2.8 Tap 'Save'. Select additional blinds to add to the scene name, or tap 'Save'.

¹ Tap button to enable / disable arrow buttons.

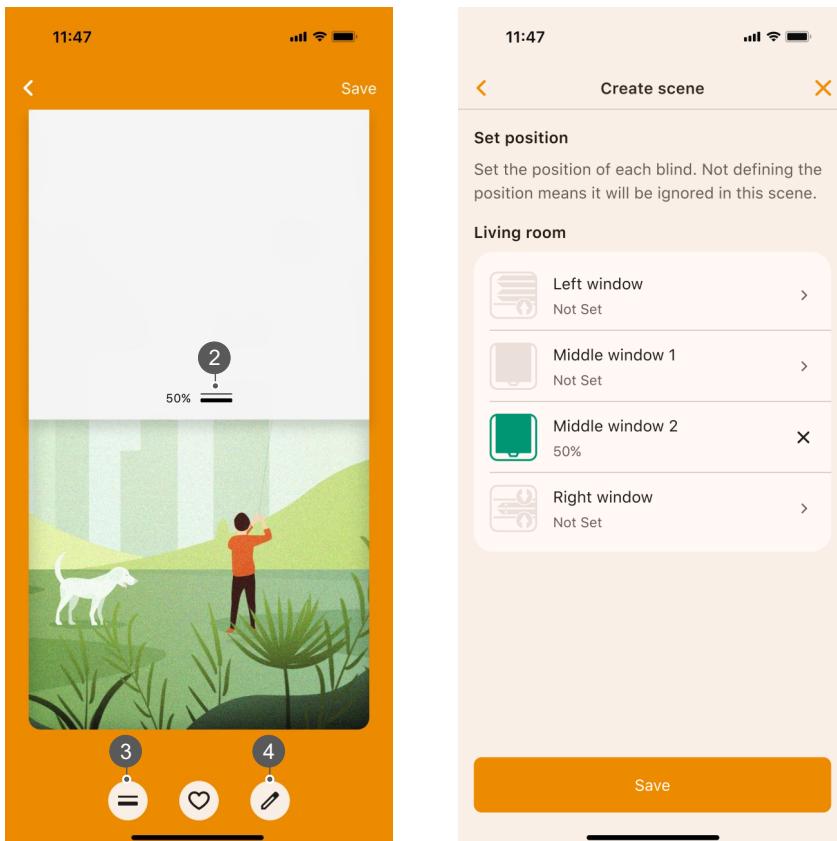

7 Scenes and timers





7.2 Add a scene and timer (from settings screen)

7.2.9 Tap 'Add timer'.

7.2.10 Select activation time and days of the week. Tap 'Save'. Motor will jog (Gen 1 / Gen 2) plus buzzer noise and 4x green LED (Gen 2) to confirm timer is saved.¹

¹ If no motor jog or buzzer noise / green LED, timer is not saved.

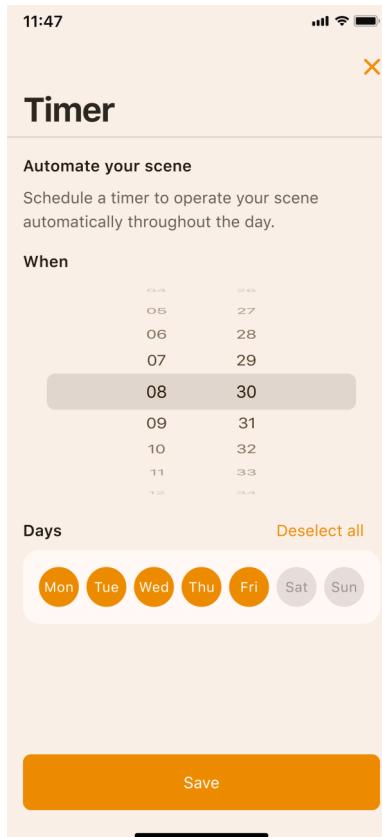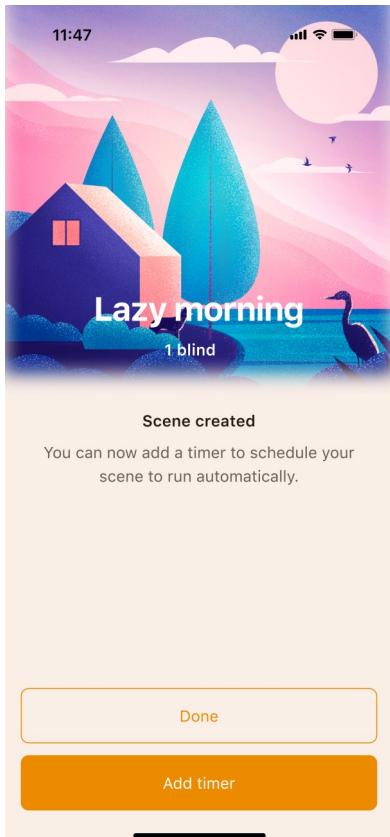


7 Scenes and timers



7.2 Add a scene and timer (from settings screen)

7.2.11 New scene name added to the Scenes overview screen.

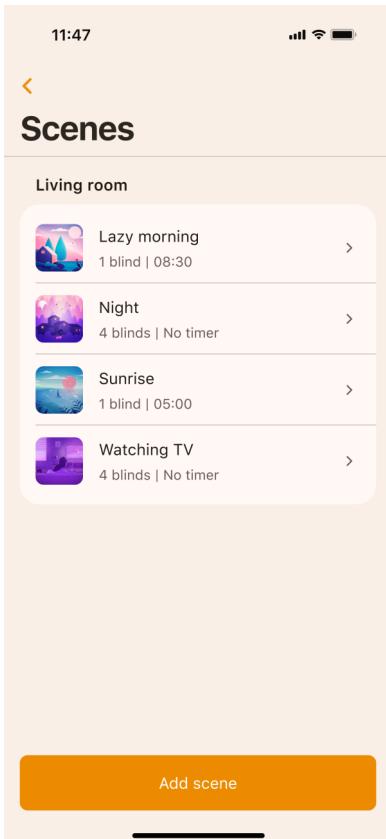


7 Scenes and timers



7.3 Changing scene name

7.3.1 Tap the settings gear icon ①.

7.3.2 Tap 'Scenes' in room name with existing scene added.

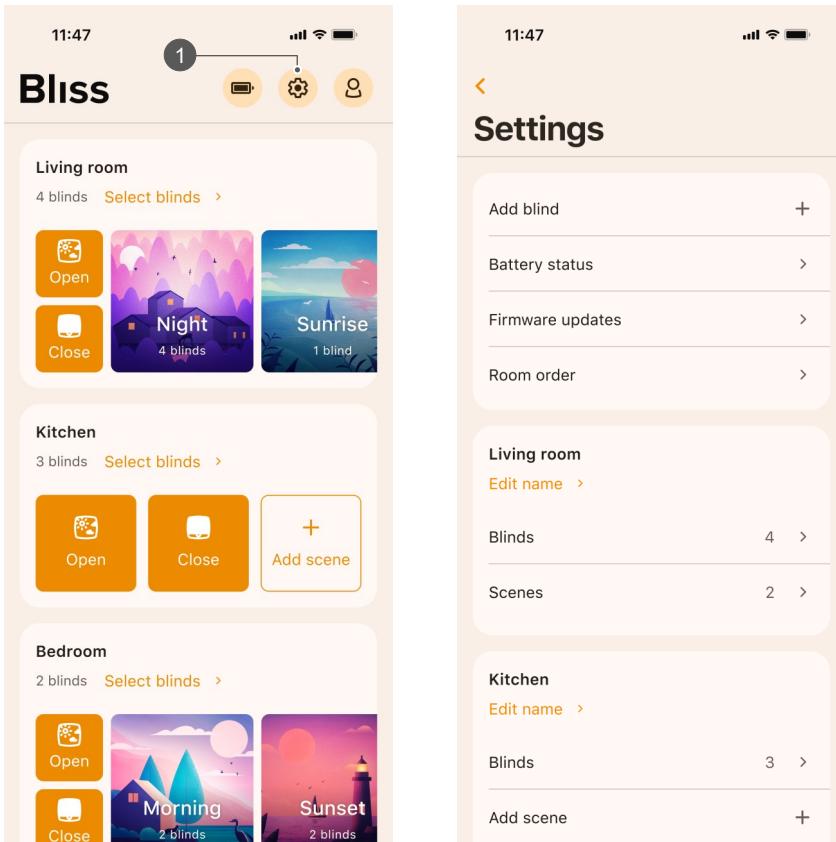



7 Scenes and timers



7.3 Changing scene name

7.3.3 Select scene name to change.

7.3.4 Tap 'Name'.

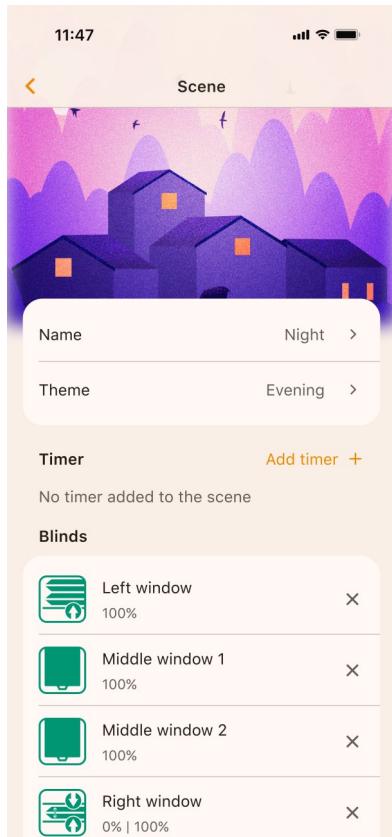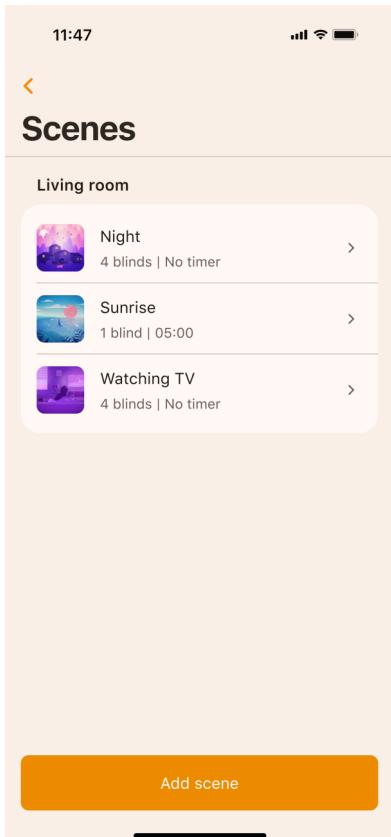



7 **Scenes and timers**



7.3 Changing scene name

7.3.5 Tap the entry field box.

7.3.6 Change the scene name. Tap ‘Save’ to finish.

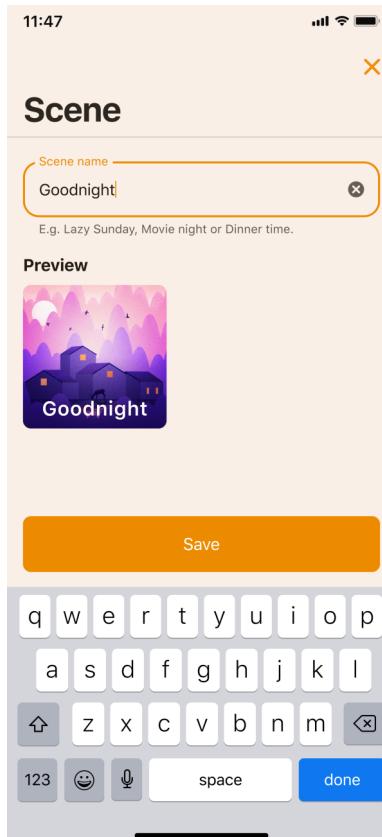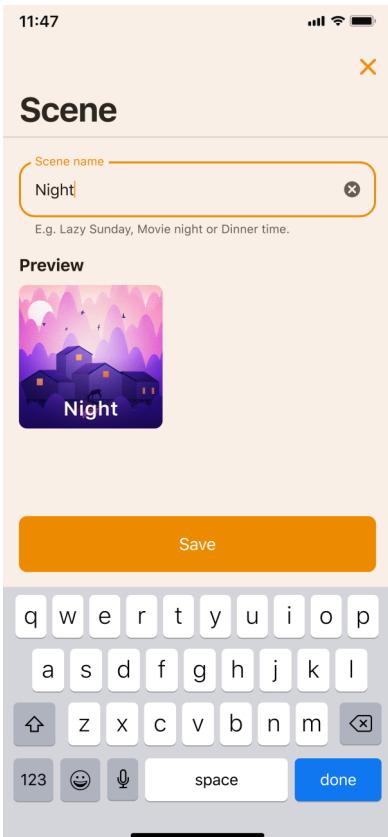


7 Scenes and timers



7.4 Changing scene theme

7.4.1 Tap the settings gear icon ①.

7.4.2 Tap ‘Scenes’ in room name wanting scene image changed.

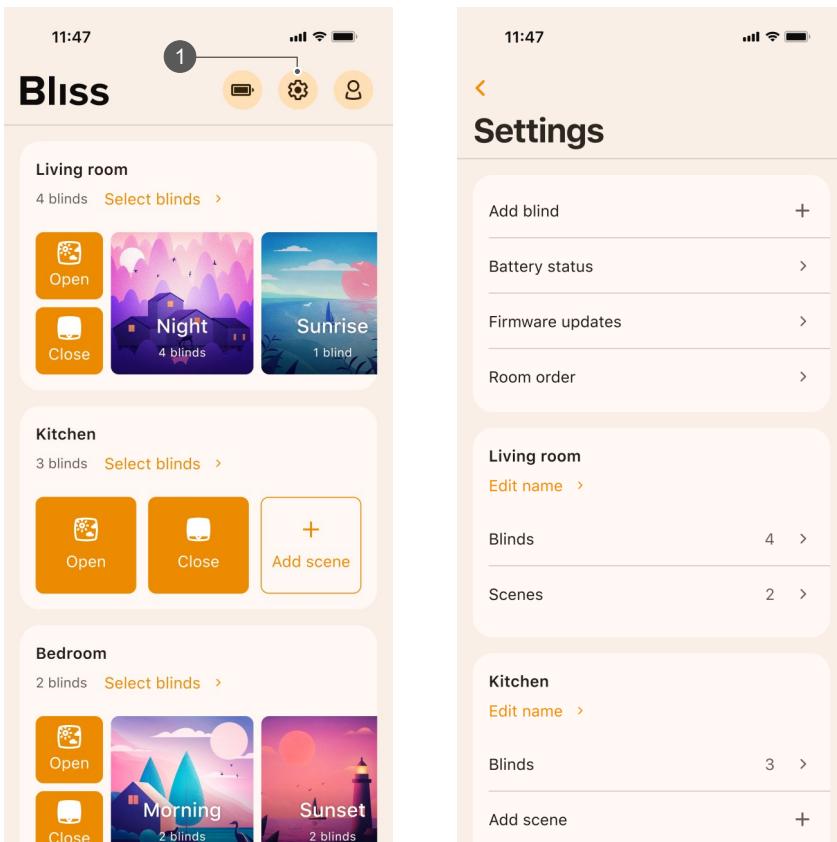



7 Scenes and timers



7.4 Changing scene theme

7.4.3 Select scene name / image to change.

7.4.4 Tap 'Theme'.

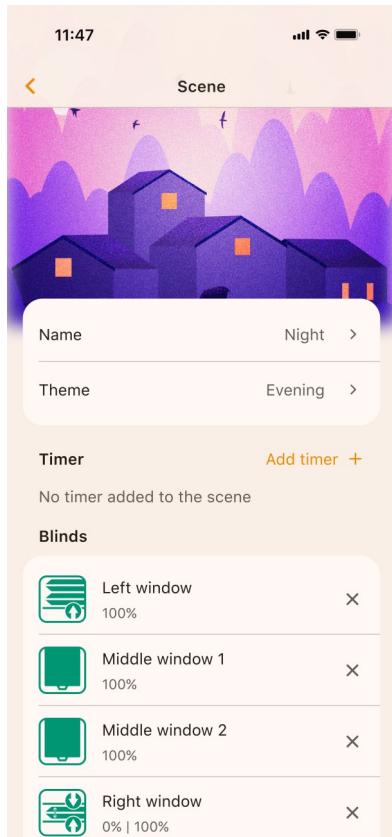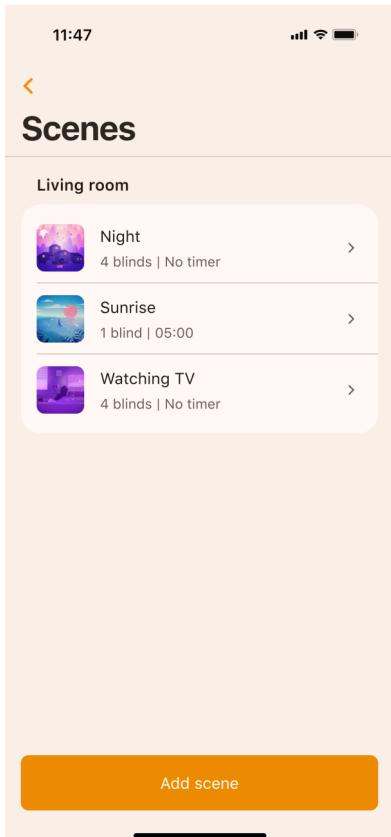


7 Scenes and timers



7.4 Changing scene theme

7.4.5 Select new theme image. Tap 'Save' to finish.

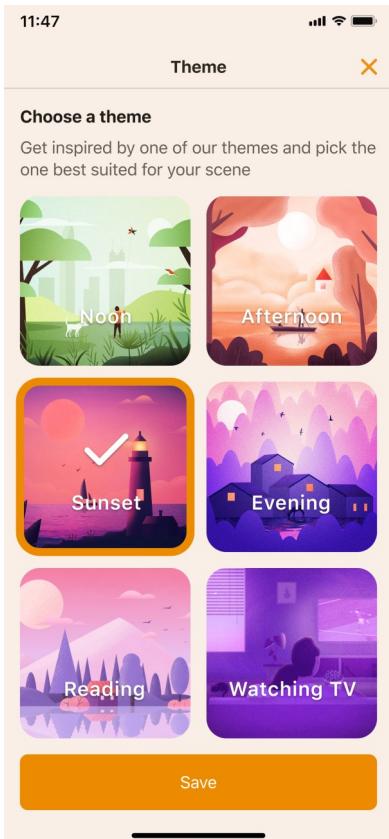


7 Scenes and timers



7.5 Updating timers

7.5.1 Tap the settings gear icon ①.

7.5.2 Tap ‘Scenes’ in room name wanting timer updated.

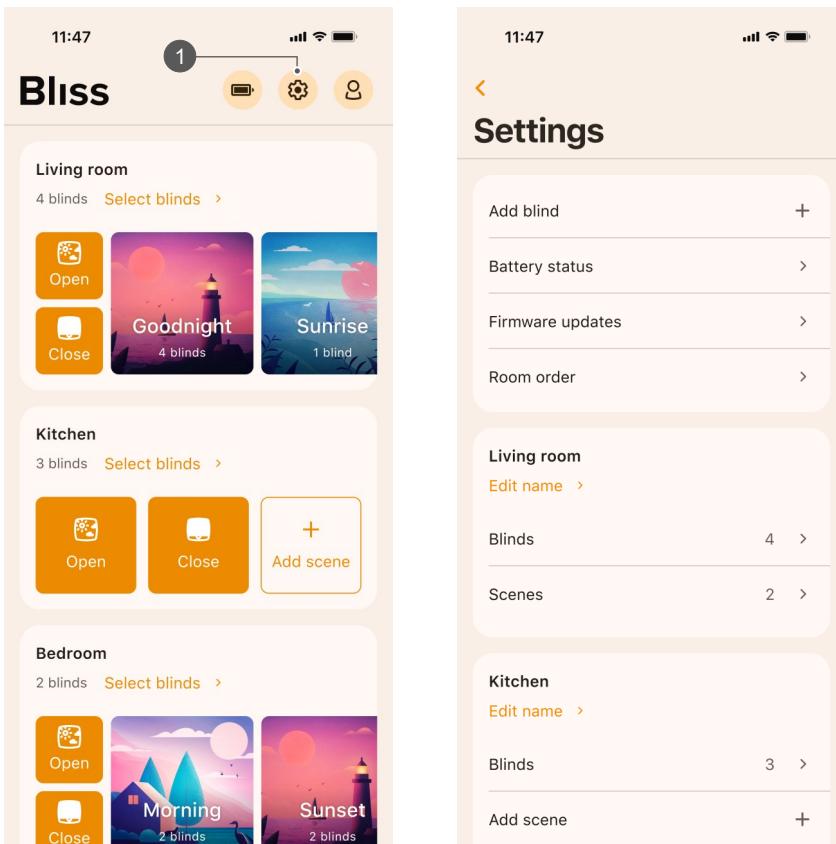



7 Scenes and timers



7.5 Updating timers

7.5.3 Select scene name.

7.5.4 Tap activation time and days of the week 'Timer' button.

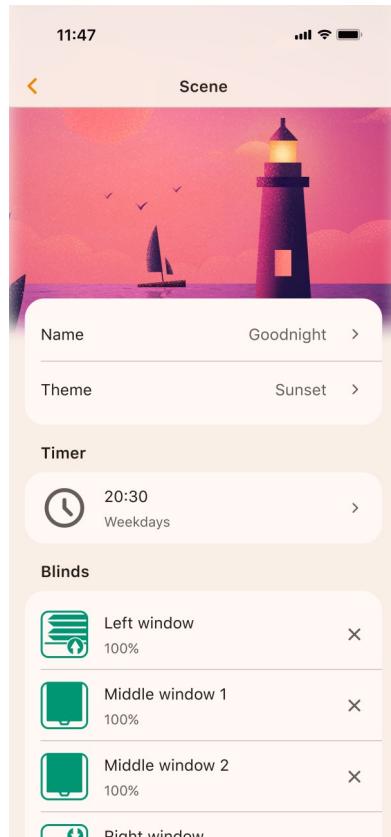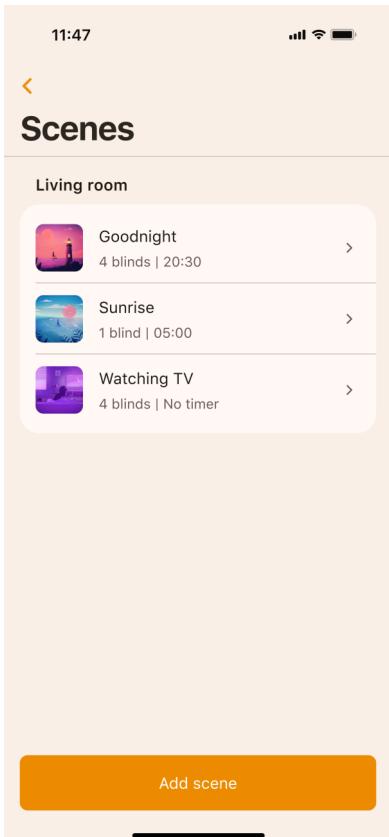

7 Scenes and timers




7.5 Updating timers

7.5.5 Select new activation time and days of the week.

Tap 'Save'. Motor will jog (Gen 1 / Gen 2) plus buzzer noise and 4x green LED (Gen 2) to confirm timer is saved.¹

¹ If no motor jog or buzzer noise / green LED, timer is not saved.

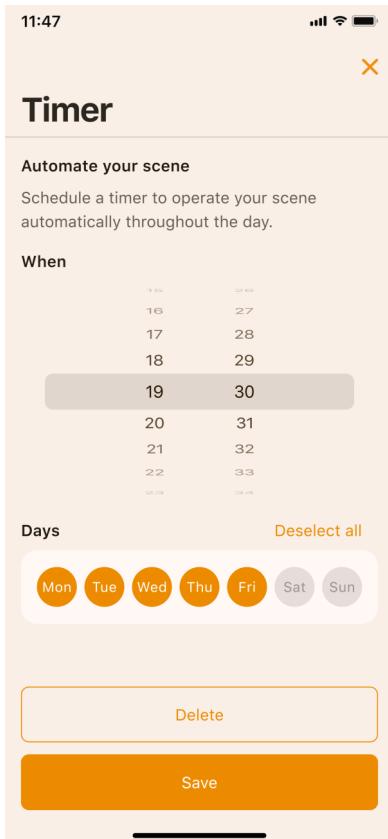


7 Scenes and timers



7.6 Operating scenes

7.6.1 Tap a scene name 1 on the home screen. App will connect to all blinds in the scene and start operating to the saved scene position.

7.6.2 Pressing the 'Stop' button will stop all blind movement.

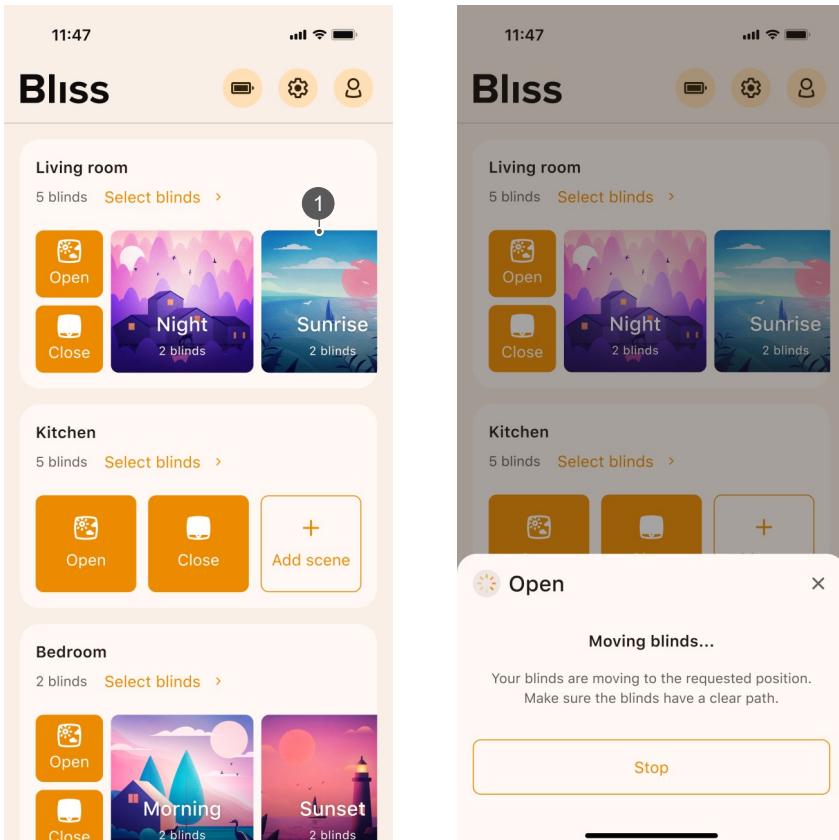



7 Scenes and timers



7.6 Operating scenes

7.6.3 Press ‘Hold to resume’ button, to re-start blind movement again.

7.6.4 Completion message appears after all blinds have stopped moving.

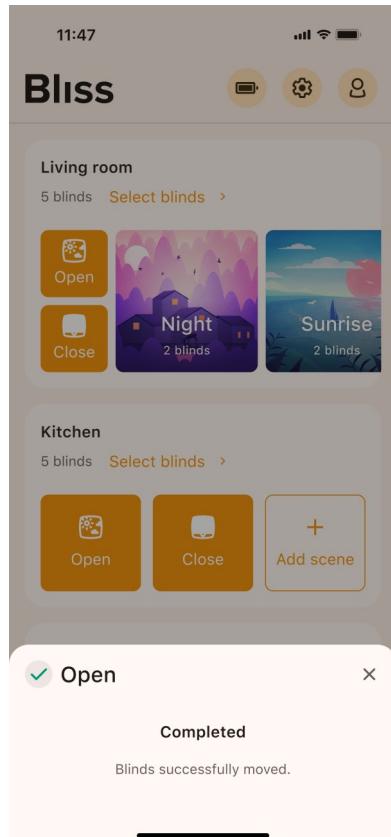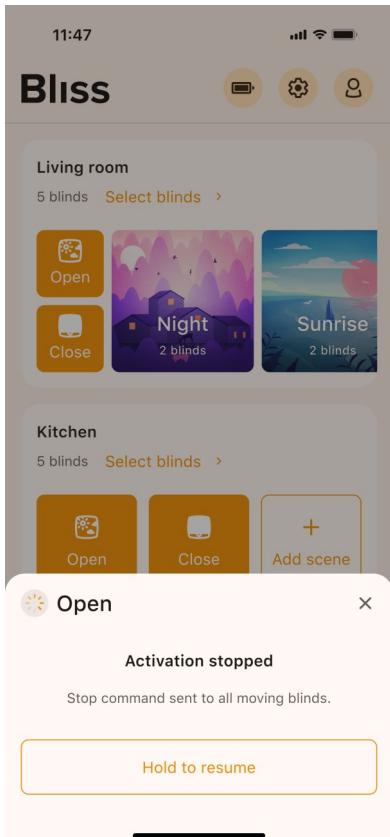

8 Synchronising




8.1 Synchronise blind timers

8.1.1 Tap the synchronisation icon 1.¹

8.1.2 Tap 'Continue'.

¹ Rooms that require timers to be synchronised, will show a synchronisation icon next to the room name. When icon is showing, scenes cannot be added or operated until the room has been synchronised.

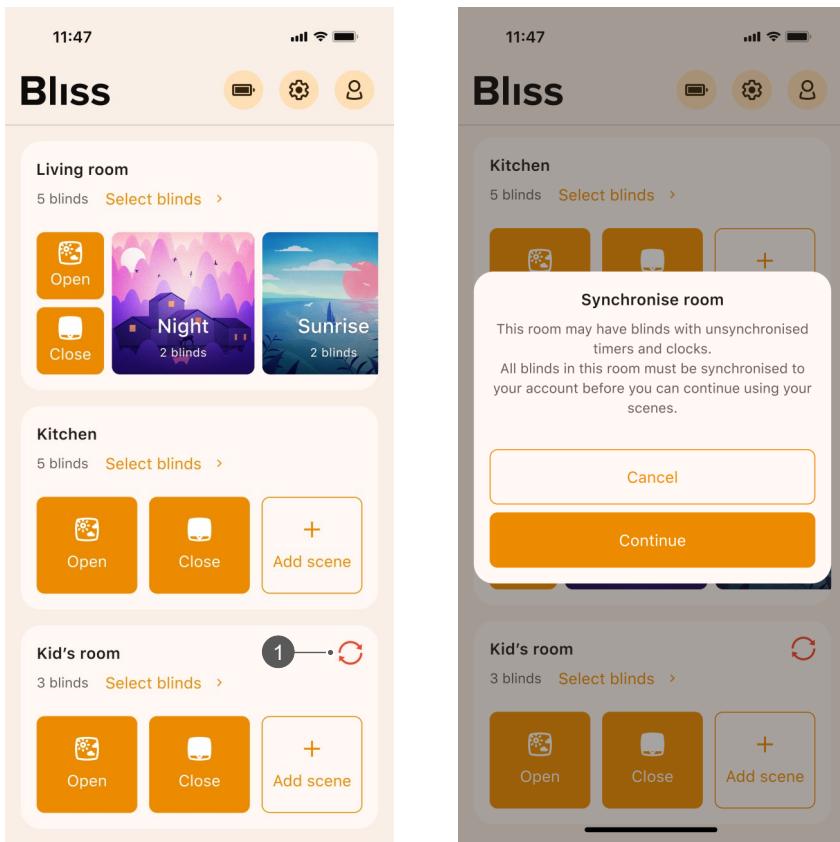



8 Synchronising



8.1 Synchronise blind timers

8.1.3 Tap '**Continue**' to start the synchronisation process.

8.1.4 App will connect to the first blind in the room.

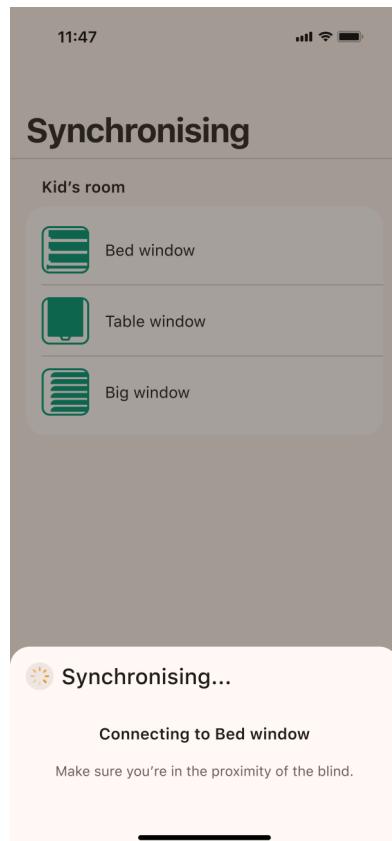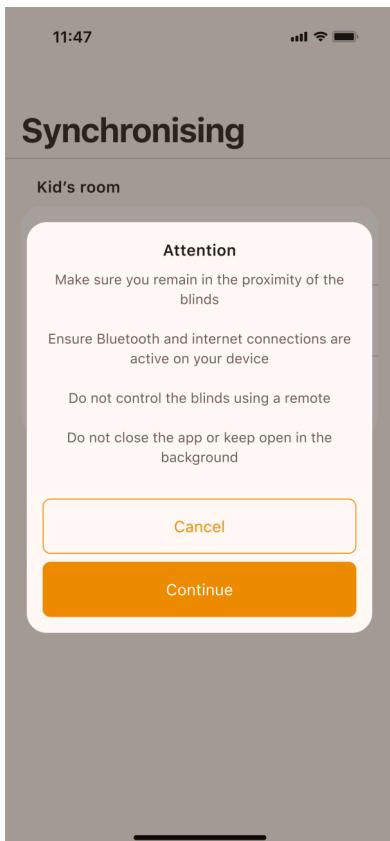


8 Synchronising



8.1 Synchronise blind timers

8.1.5 A check mark will appear next to the first blind name indicating timers synchronised for that blind. App will connect to the next blind and repeat the same process for all remaining blinds.

8.1.6 A success message will appear after synchronising all blinds. Tap '**Return**'.

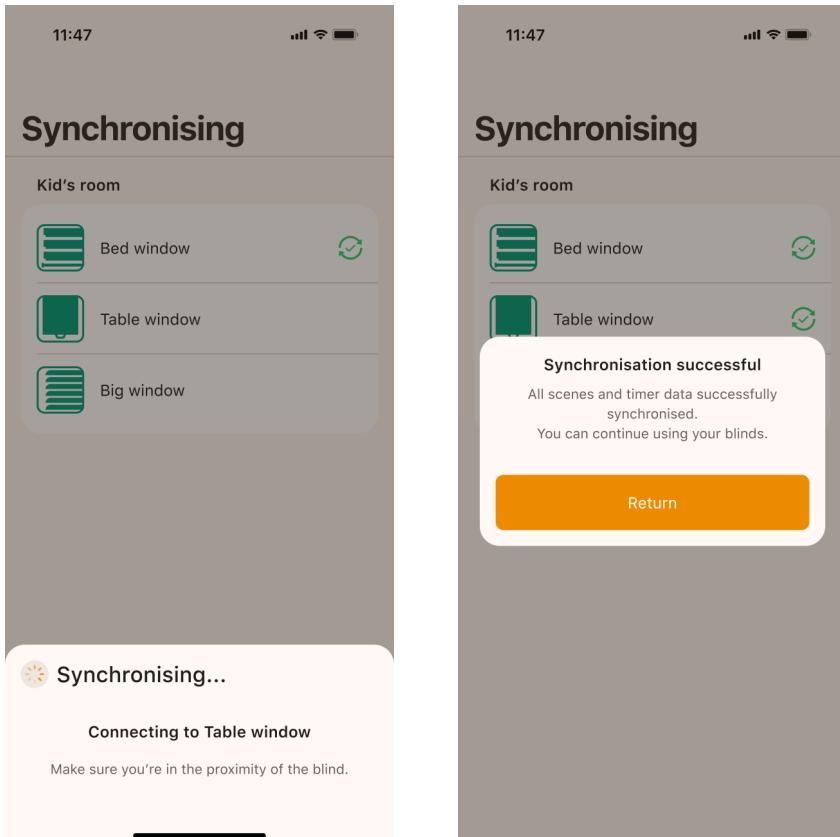

8 Synchronising




8.1 Synchronise blind timers

8.1.7 Synchronisation icon is removed next to room name. Scenes can be added and manually operated again.

8.1.8 Synchronisation failure can be caused by the following:

- Multiple / unused accounts being used
- No internet or Bluetooth connection
- Low battery
- App will allow user three attempts to synchronise blind timers before advising next step.

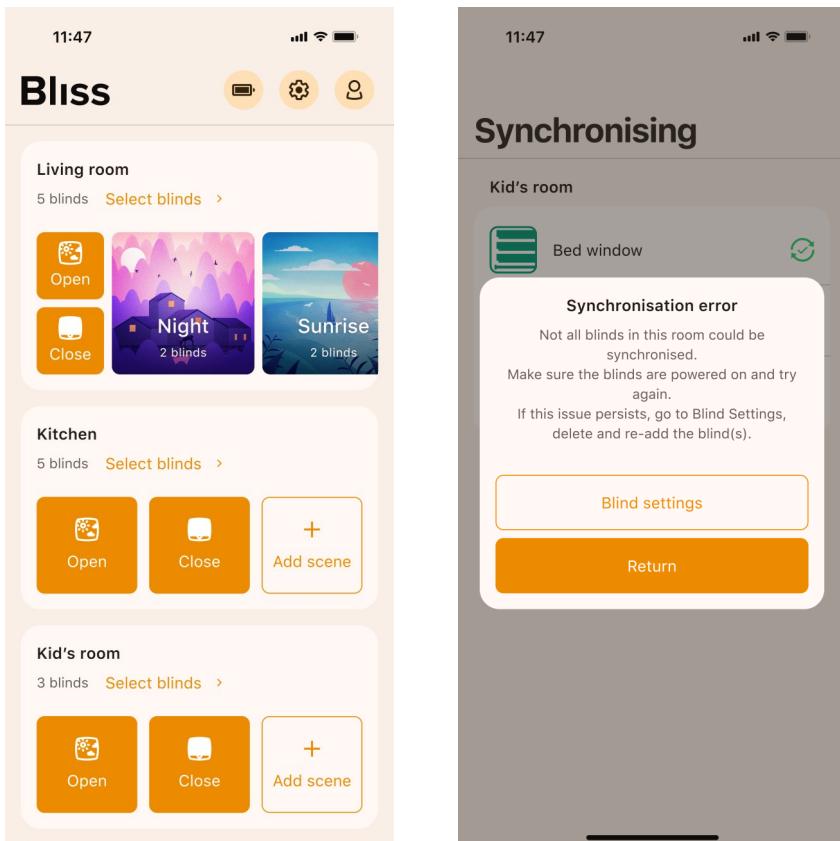

9 Over-The-Air updates




9.1 Updating motor firmware

9.1.1 Tap the settings gear icon ①.¹

9.1.2 If a mandatory firmware update is required, pressing any of the room buttons such as 'Open' or 'Close' will show a message informing user of next step. Tap 'Settings'.

¹ Mandatory firmware updates will limit blind functionality to all blinds in the room, until motor firmware has been updated.

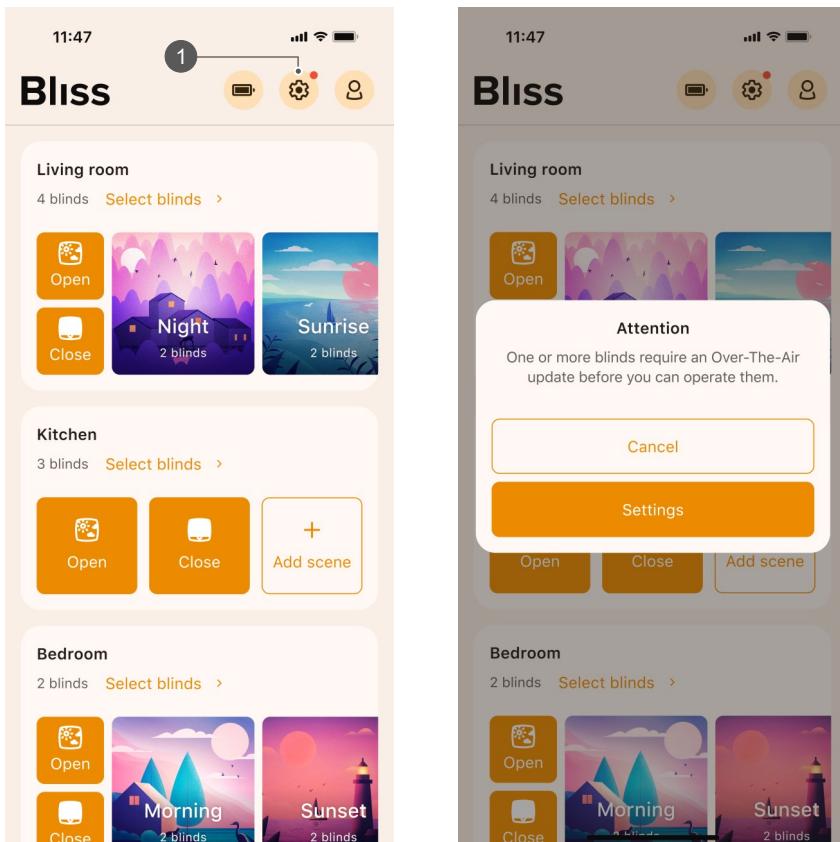

9 Over-The-Air updates



9.1 Updating motor firmware

9.1.3 Notification dot signifies firmware update available.

Tap '**Firmware updates**'.

9.1.4 Firmware update icons are shown as orange for Optional and red for Mandatory. Tap '**Update**'.²

² If a room has both Optional and Mandatory updates available, all blinds will be updated when pressing the 'Update' button.

Settings

- Add blind +
- Battery status >
- Firmware updates • >
- Room order >

Living room

[Edit name >](#)

- Blinds 4 >
- Scenes 2 >

Kitchen

[Edit name >](#)

- Blinds 3 >
- Add scene +

Firmware updates

Ensure the firmware is up-to-date to keep your blinds operating at their best.

Living room

[Update](#)

	Left window v14 Optional	
	Middle window 1 v12 Mandatory	
	Middle window 2 v9 Up-to-date	
	Right window v9 Up-to-date	

Kitchen

	Left window 2 v12 Up-to-date	
	Middle window 3 v12 Up-to-date	



9 Over-The-Air updates



9.1 Updating motor firmware

9.1.5 Tap 'Continue'.

9.1.6 App will connect to the first blind.

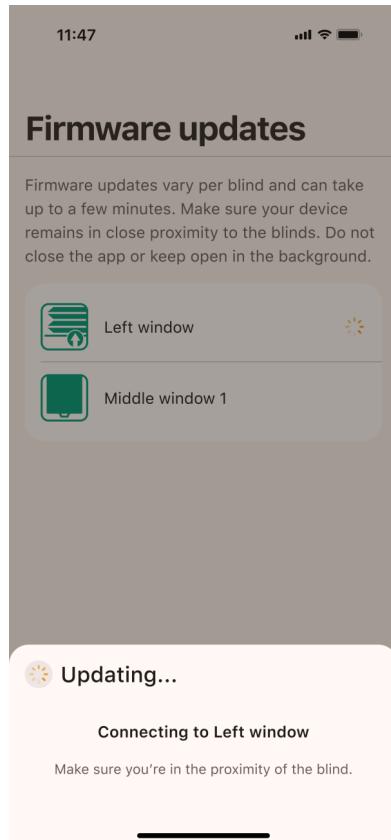
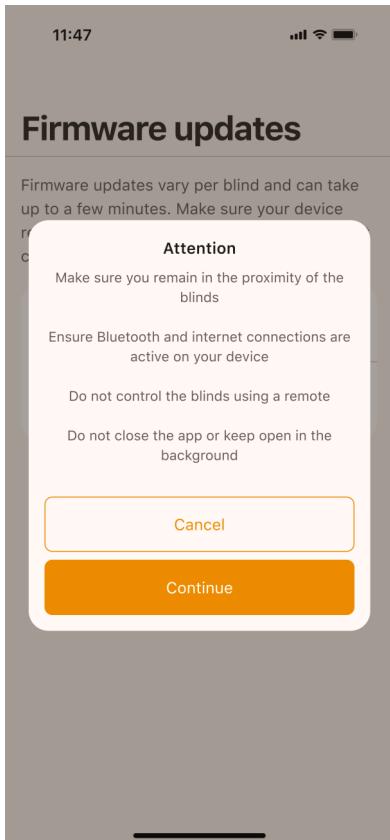


9 Over-The-Air updates



9.1 Updating motor firmware

- 9.1.7 Progress spinner will reach 90%. After a short pause, motor LED will flash red 4x plus motor jog and buzzer noise, confirming firmware update has been completed for that blind.
- 9.1.8 A check mark will appear next to the blind name. App will connect to the next blind and repeat the same process for all remaining blinds.

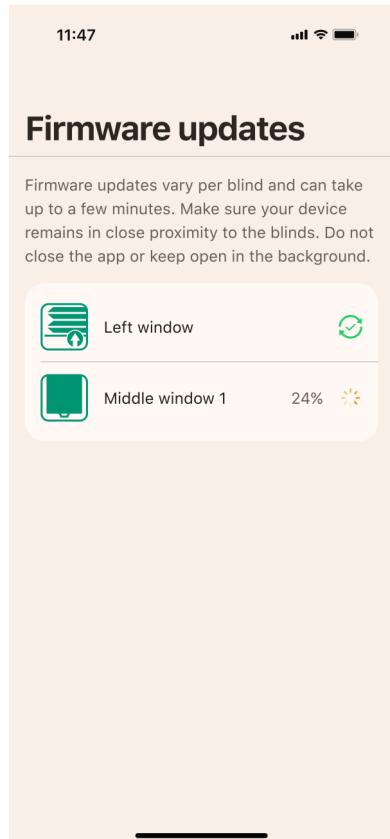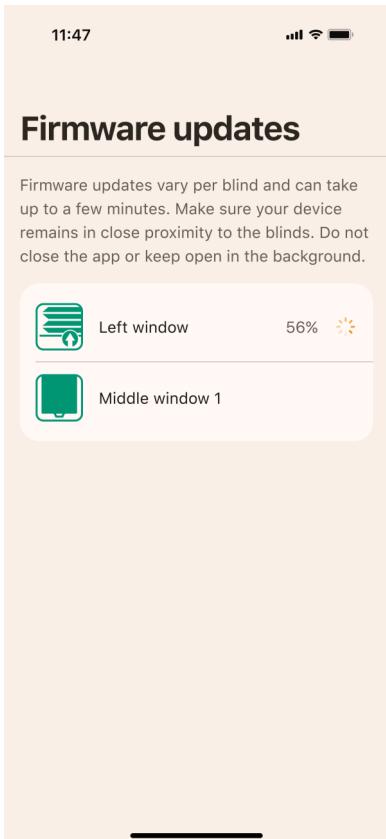



9 Over-The-Air updates



9.1 Updating motor firmware

9.1.9 Tap 'Return'.

9.1.10 Firmware updates screen showing all blinds updated.

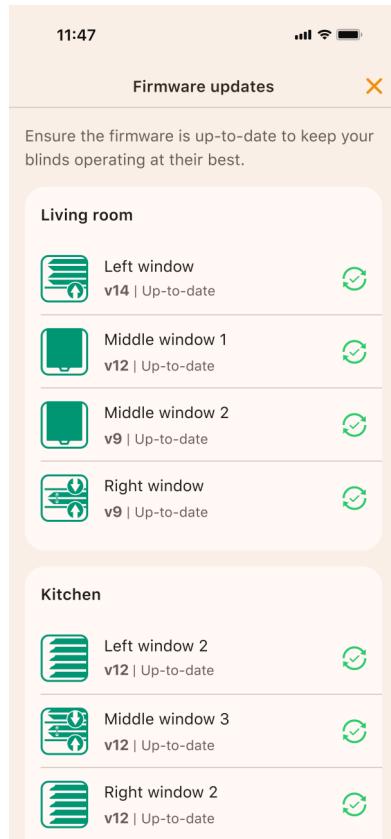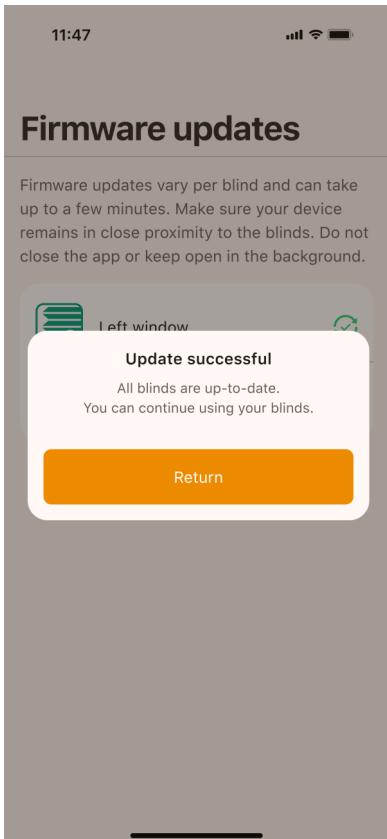


9 Over-The-Air updates



9.1 Updating motor firmware

9.1.11 Notification dot is removed next to 'Firmware updates'. Limited blind functionality is removed and can be used fully again.

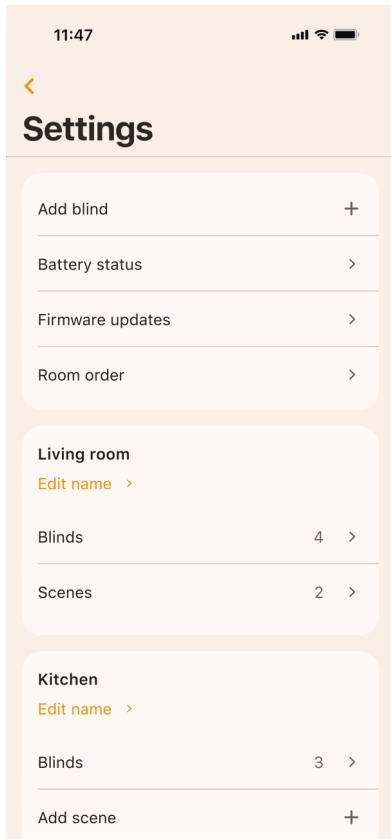

10 Favourite position (Gen 2)



10.1 Change and save to new favourite position

- 10.1.1 Tap the settings gear icon ①.
- 10.1.2 Tap 'Blinds' in room name wanting favourite position updated.

11:47

Bliss

Living room

4 blinds [Select blinds](#)

Open

Close

Night 4 blinds

Sunrise 1 blind

Kitchen

3 blinds [Select blinds](#)

Open

Close

+ Add scene

Bedroom

2 blinds [Select blinds](#)

Open

Close

Morning 2 blinds

Sunset 2 blinds

11:47

Settings

Add blind +

Battery status >

Firmware updates >

Room order >

Living room

Edit name >

Blinds 4 >

Scenes 2 >

Kitchen

Edit name >

Blinds 3 >

Add scene +



10 Favourite position (Gen 2)



10.1 Change and save to new favourite position

10.1.3 Select blind name.

10.1.4 Tap 'Favourite position'.

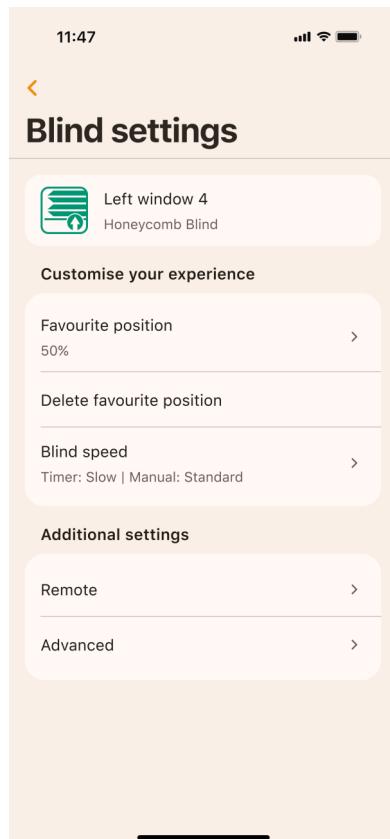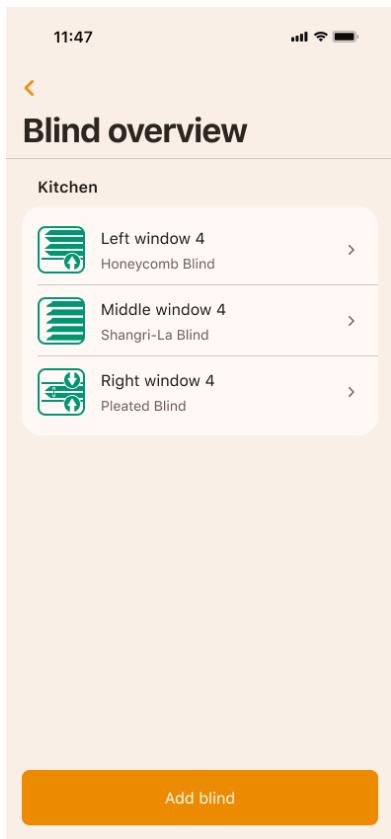

10 Favourite position (Gen 2)




10.1 Change and save to new favourite position (Gen 2)

10.1.5 Operate blind to new desired favourite position by:

- Moving the slider ② up or down.
- Pressing the direction arrow button ③.¹
- Entering a percentage value into precise movement box ④.

10.1.6 Press and hold favourite button ⑤.

¹ Tap button to enable / disable arrow buttons.

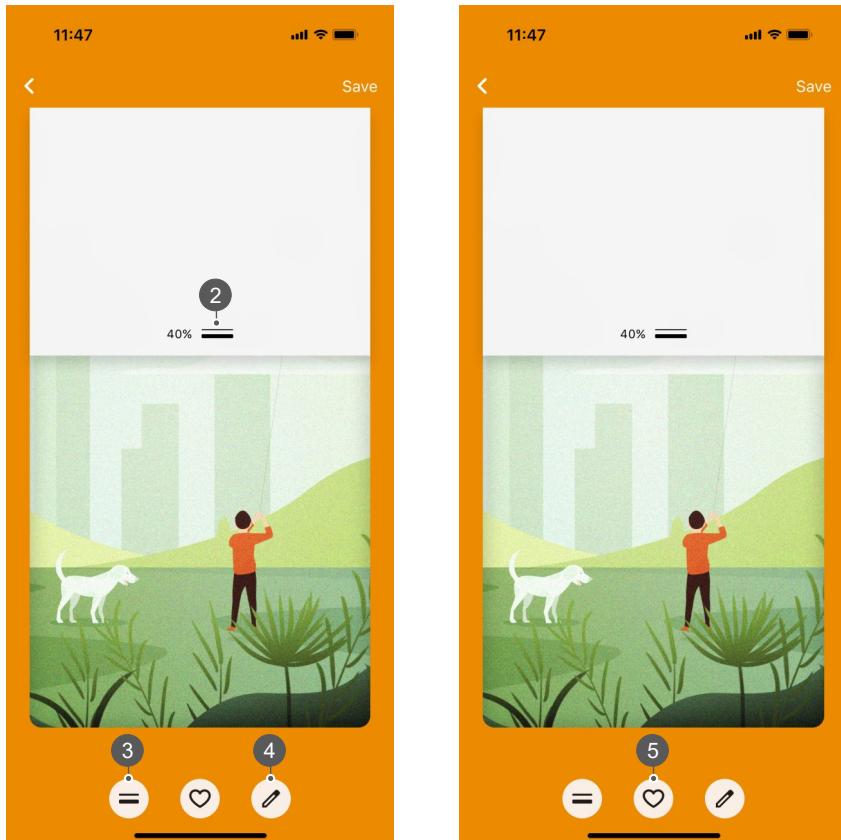

10 Favourite position (Gen 2)





10.1 Change and save to new favourite position (Gen 2)

10.1.7 Tap '**Update**'. Motor will jog plus buzzer noise and 4x green LED to confirm new favourite position is set.²

10.1.8 Updated favourite position shown in blind settings menu.

² If no motor jog or buzzer noise / green LED, updated favourite position is not saved.

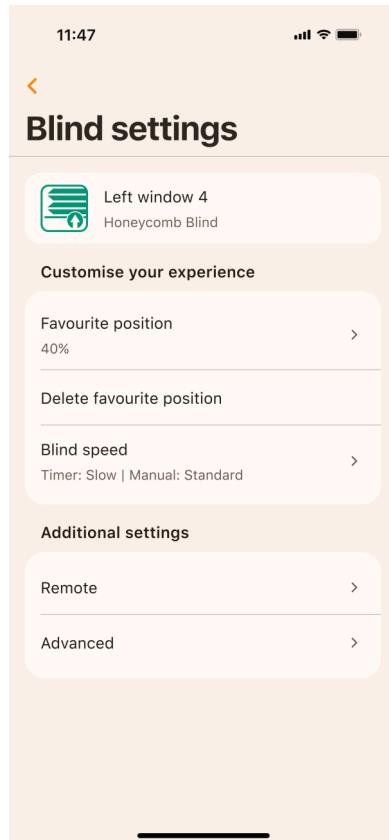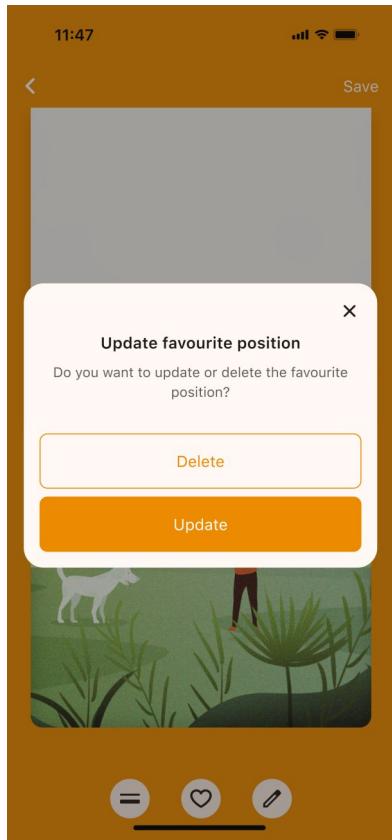



10 Favourite position (Gen 2)



10.2 Delete favourite position - Option 1

10.2.1 Tap the settings gear icon ①.

10.2.2 Tap 'Blinds' in room name wanting favourite position deleted.

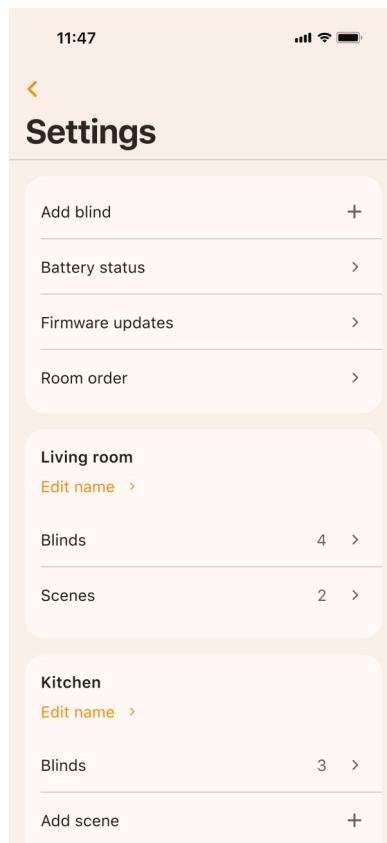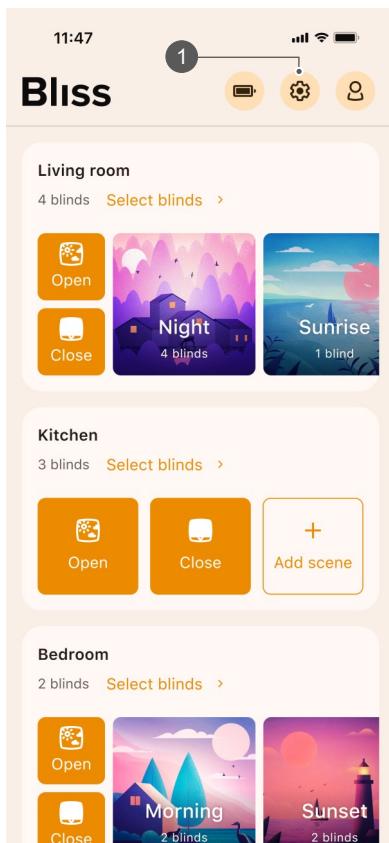



10 Favourite position (Gen 2)



10.2 Delete favourite position - Option 1

10.2.3 Select blind name.

10.2.4 Tap 'Delete favourite position'.

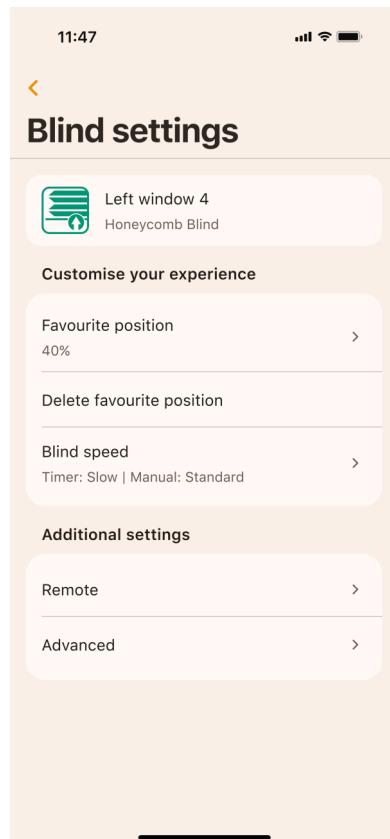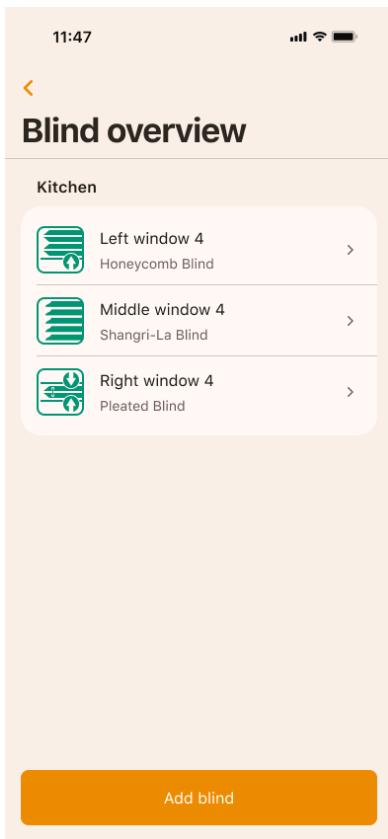

10 Favourite position (Gen 2)





10.2 Delete favourite position - Option 1

10.2.5 Tap '**Delete**'. Motor will jog plus buzzer noise and 4x green LED to confirm favourite position has been deleted.¹

10.2.6 'Not set' shown underneath 'Favourite position'.

¹ If no motor jog or buzzer noise / green LED, favourite position is not deleted.

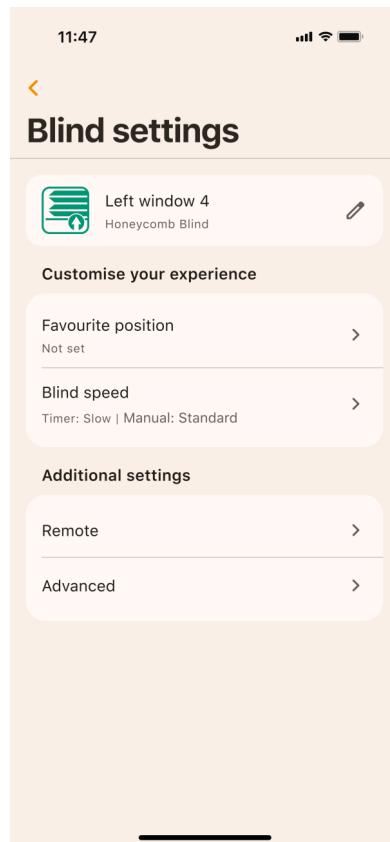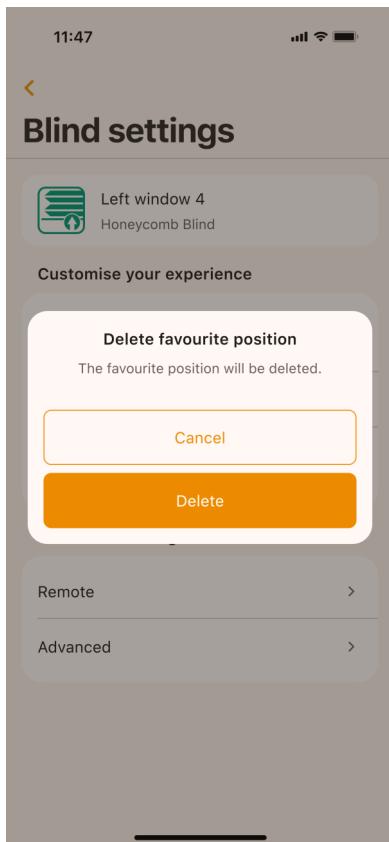



10 Favourite position (Gen 2)



10.3 Delete favourite position - Option 2

10.3.1 Tap the settings gear icon ①.

10.3.2 Tap 'Blinds' in room name wanting favourite position deleted.

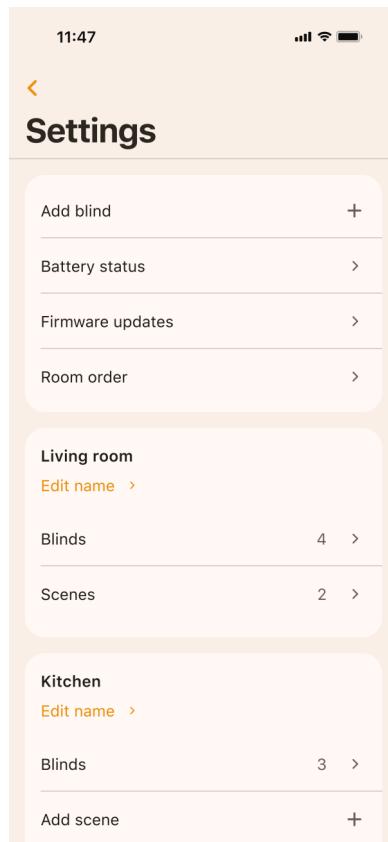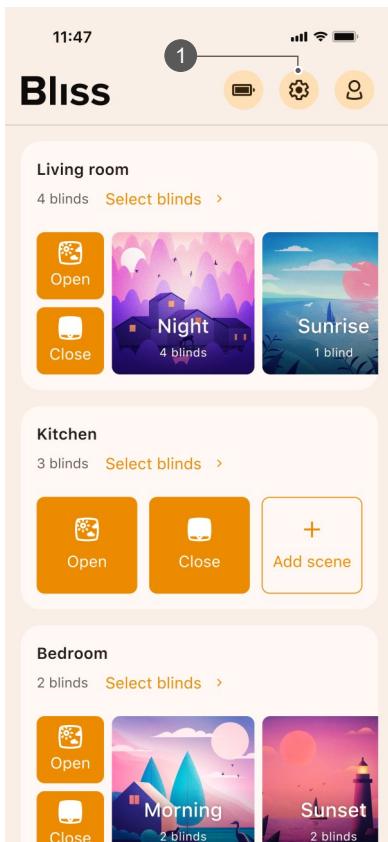



10 Favourite position (Gen 2)



10.3 Delete favourite position - Option 2

10.3.3 Select blind name.

10.3.4 Tap 'Favourite position'.

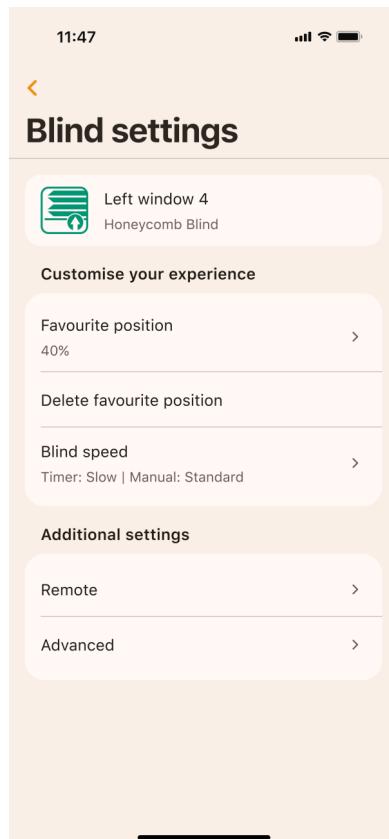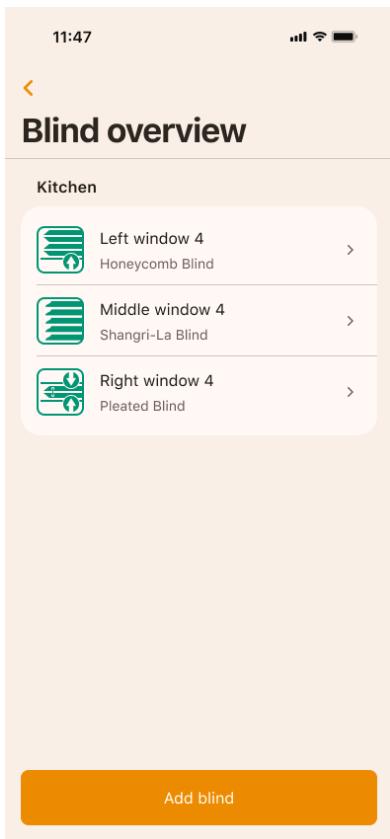

10 Favourite position (Gen 2)




10.3 Delete favourite position - Option 2

10.3.5 Press and hold favourite button ②.

10.3.6 Tap 'Delete'. motor will jog plus buzzer noise and 4x green LED to confirm favourite position has been deleted.¹

¹ If no motor jog or buzzer noise / green LED, favourite position is not deleted.

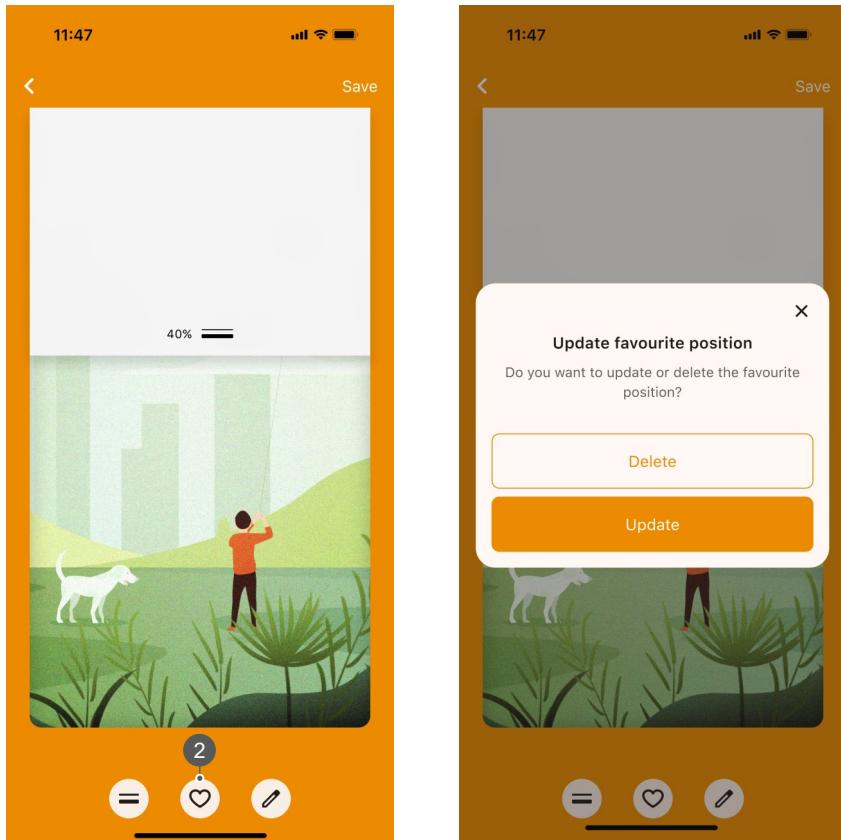


10 Favourite position (Gen 2)



10.3 Delete favourite position - Option 2

10.3.7 'Not set' shown underneath 'Favourite position'.

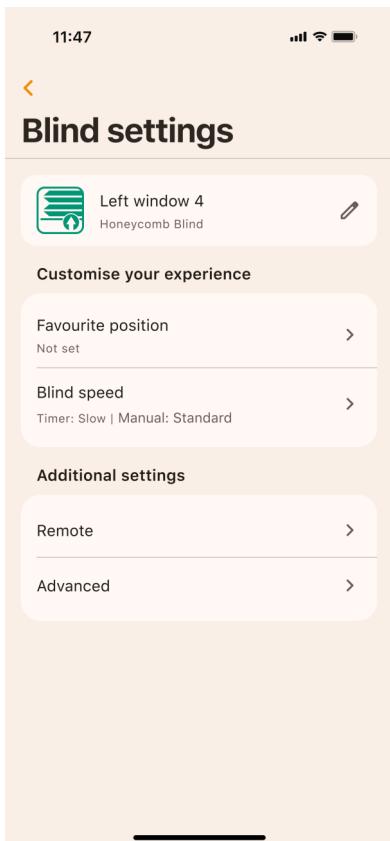

11 End limits



- 11.1 Set new end limit position (Gen 1 and Gen 2)
- 11.1.1 Tap the settings gear icon ①.
- 11.1.2 Tap 'Blinds' in room name wanting end limits set.

11:47

Bliss

Living room

4 blinds [Select blinds](#)

Open

Close

Night 4 blinds

Sunrise 1 blind

Kitchen

3 blinds [Select blinds](#)

Open

Close

+ Add scene

Bedroom

2 blinds [Select blinds](#)

Open

Close

Morning 2 blinds

Sunset 2 blinds

11:47

Settings

Add blind +

Battery status >

Firmware updates >

Room order >

Living room

Edit name >

Blinds 4 >

Scenes 2 >

Kitchen

Edit name >

Blinds 3 >

Add scene +



11 End limits



11.1 Set new end limit position (Gen 1 and Gen 2)

11.1.3 Tap blind name.

11.1.4 Tap 'Advanced'.

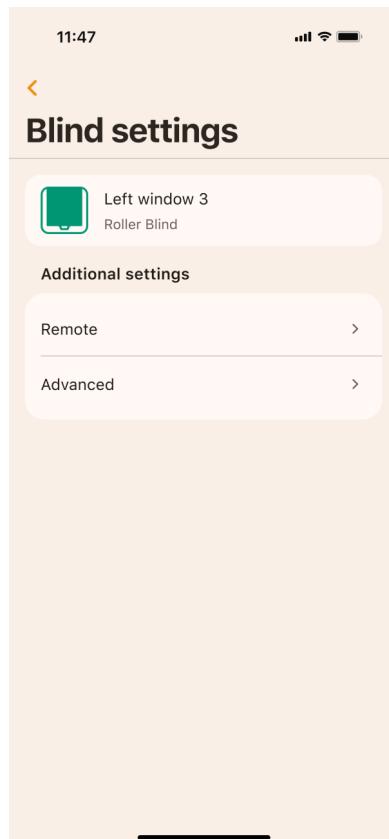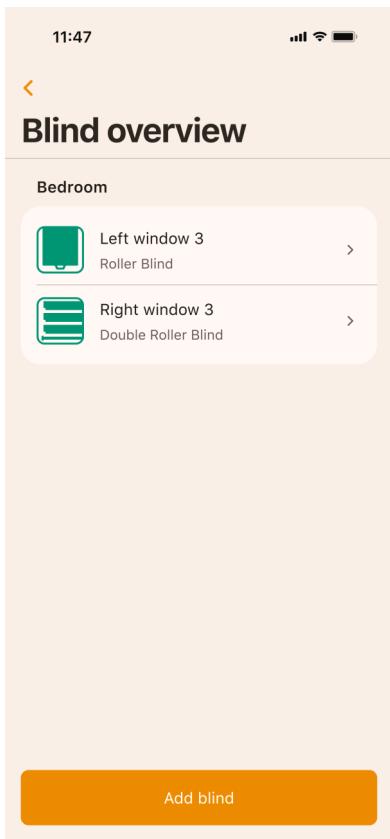

11 End limits





11.1 Set new end limit position (Gen 1 and Gen 2)

11.1.5 Tap 'Set new limits'.¹

11.1.6 App will connect to the blind.

¹ Additional options to adjust the top and bottom limit will also be visible for Gen 2 blinds. Double Roller blinds will only show the options 'Set new limits' and 'Set fabric open position'.

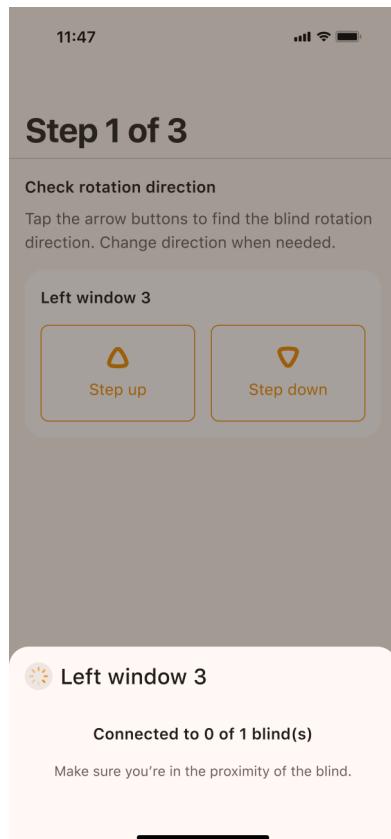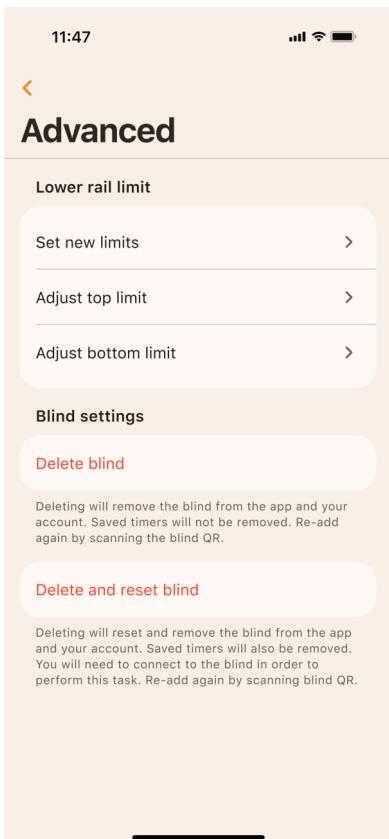

11 End limits





11.1 Set new end limit position (Gen 1 and Gen 2)

11.1.7 Warning message appears. Tap 'OK'.

11.1.8 Check motor direction. Tap 'Next'.¹

¹ 'Step up' = blind moves up, 'Step down' = blind moves down.

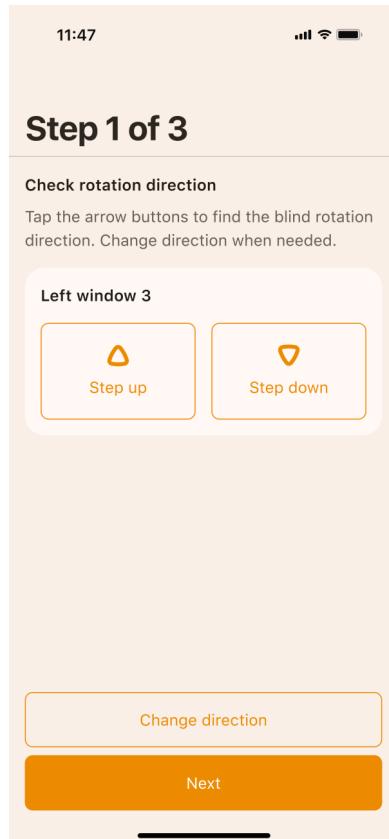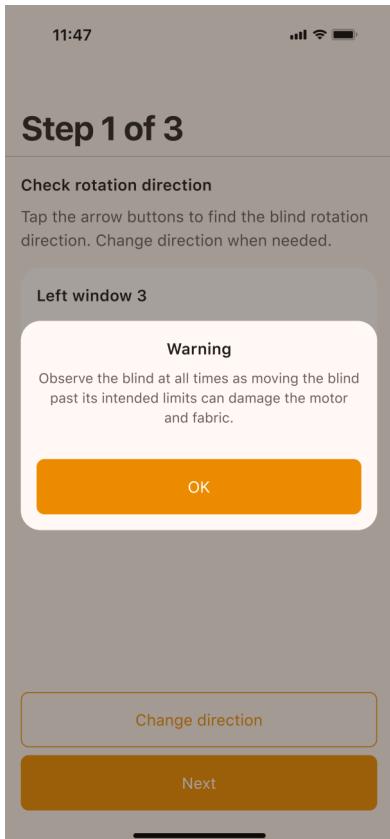

11 End limits





11.1 Set new end limit position (Gen 1 and Gen 2)

11.1.9 Operate blind to desired bottom limit position using the direction arrows. Tap '**Confirm bottom limit**'.

11.1.10 Operate blind to desired top limit position using the direction arrows. Tap '**Confirm top limit**'.²

² To protect motor and components, do not overrun motor / overtighten fabric.

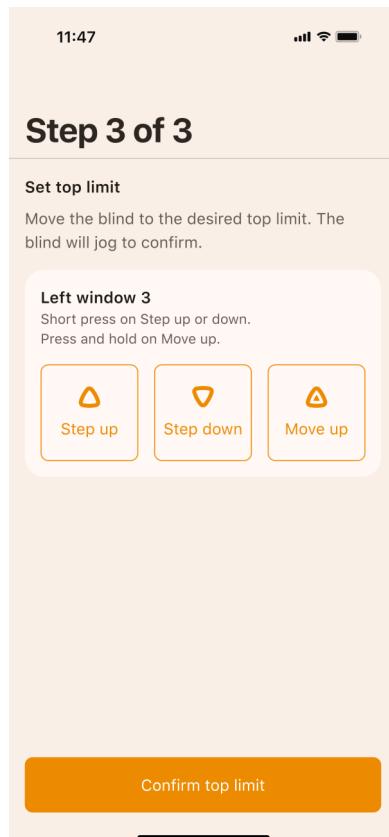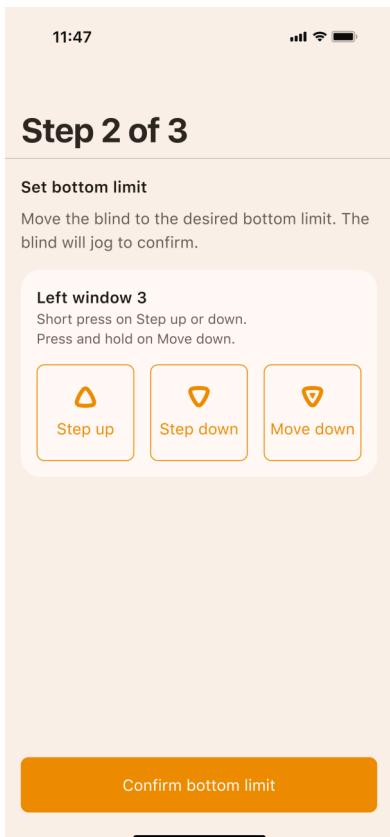

11 End limits



- 11.2 Set fabric open position (Gen 1 and Gen 2)
- 11.2.1 Tap '**Close blind**'. Blind will operate down to saved bottom limit position.¹
- 11.2.2 Press the 'Step up' and 'Step down' buttons to align fabric bands, allowing view-through. Tap '**Confirm position**'.²

¹ If blind is already at bottom limit before pressing 'Close blind' button, blind will not move. App will progress to Step 2.


² Gen 2 motor will jog plus motor buzzer noise to confirm position is saved.

11:47

Step 1 of 2

Move blind down

Before the Fabric open position can be set, the blind needs to be sent down to the bottom position.

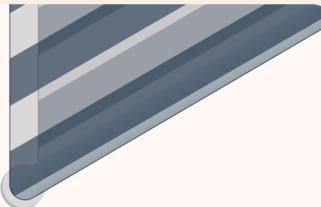


Close blind

11:47

Step 2 of 2

Set fabric open position

The 'fabric open' position is the first position moving upwards where the sheer and solid fabric bands are not overlapping, allowing light to enter the room.

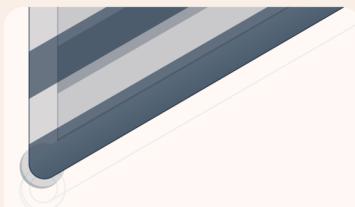

Right window 4
Kitchen

Step up

Step down

Confirm position

11 End limits




11.3 Adjust top limit position (Gen 2)

11.3.1 Tap the settings gear icon ①.

11.3.2 Tap 'Blinds' in room name wanting end limit adjusted.¹

¹ Shangri-La blinds do not have the option to adjust end limit positions.

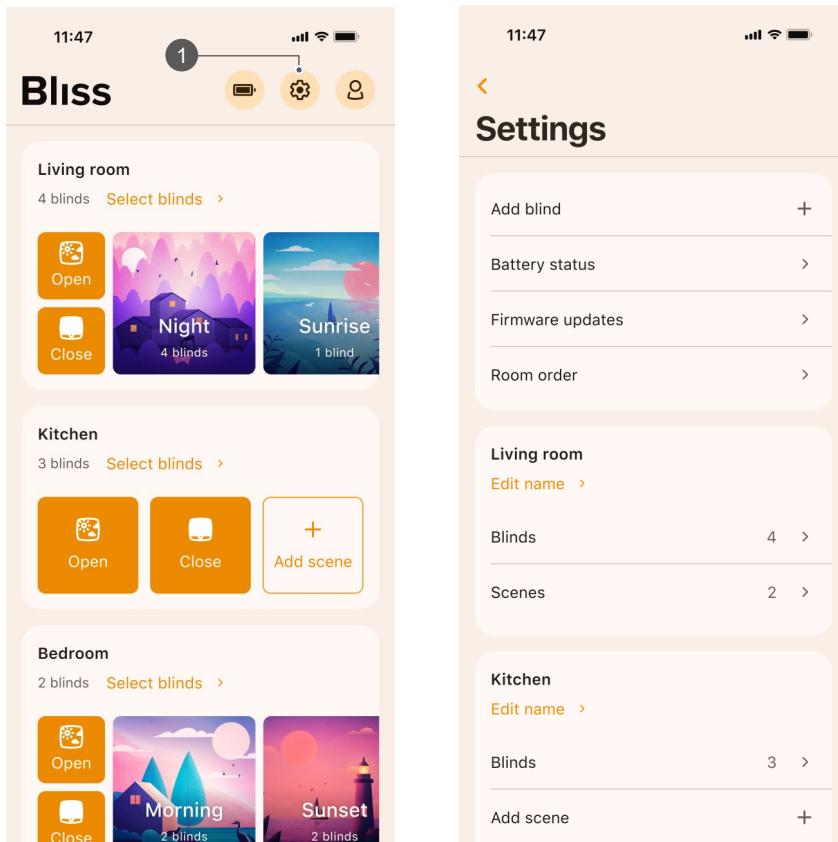



11 End limits



11.3 Adjust top limit position (Gen 2)

11.3.3 Select blind name.

11.3.4 Tap 'Advanced'.

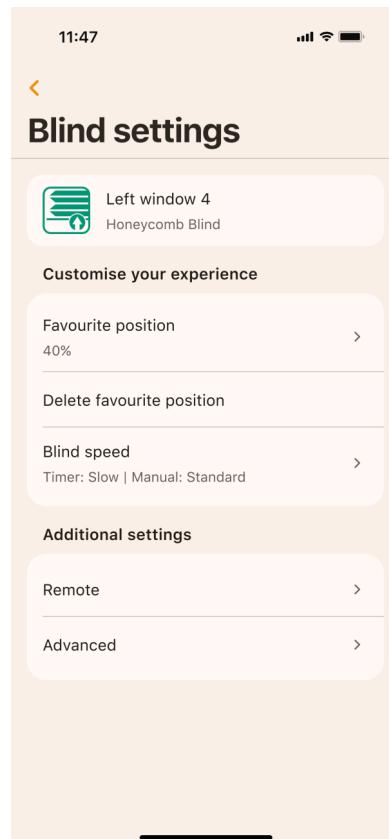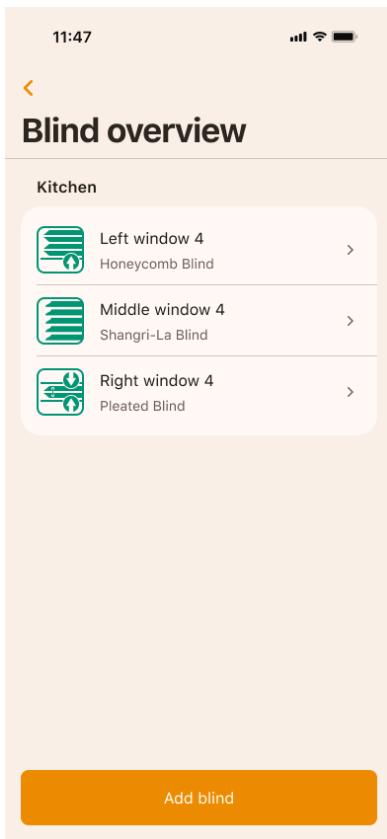



11 End limits



11.3 Adjust top limit position (Gen 2)

11.3.5 Tap 'Adjust top limit'.

11.3.6 Tap 'OK'.

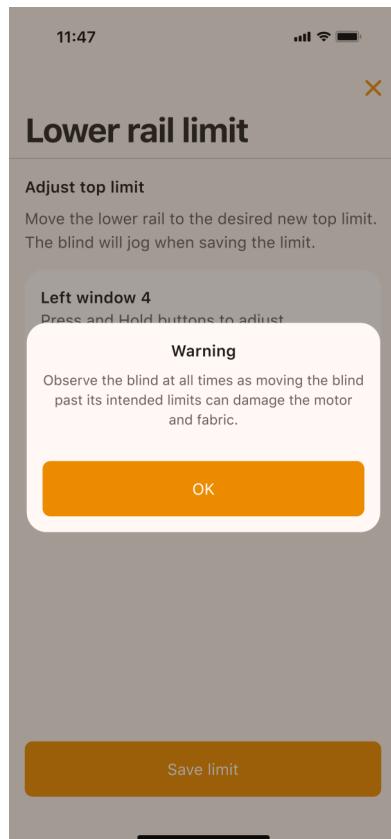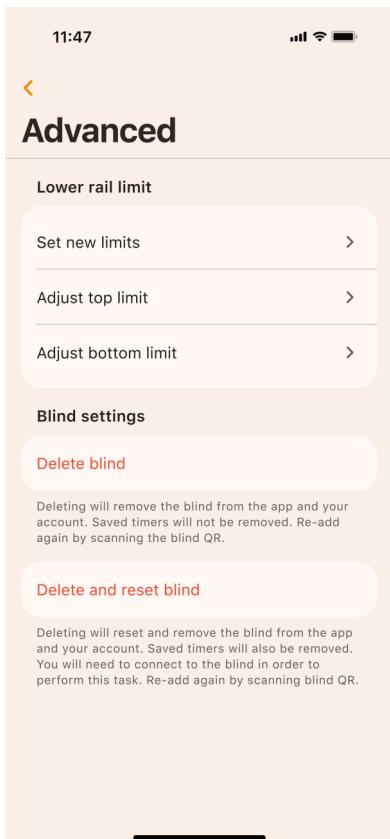

11 End limits





11.3 Adjust top limit position (Gen 2)

11.3.7 Tap 'Continue'.

11.3.8 App will connect to the blind and automatically move to the saved top limit position. Motor will jog plus buzzer noise and 4x red LED.²

² If blind is already at top limit position, motor will jog plus buzzer noise and 4x red LED.

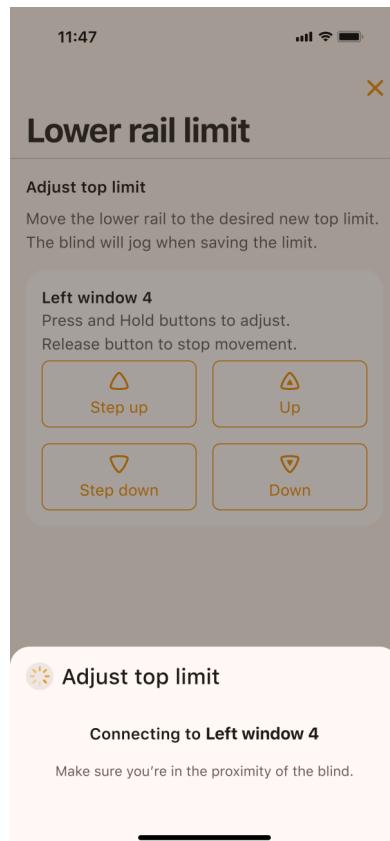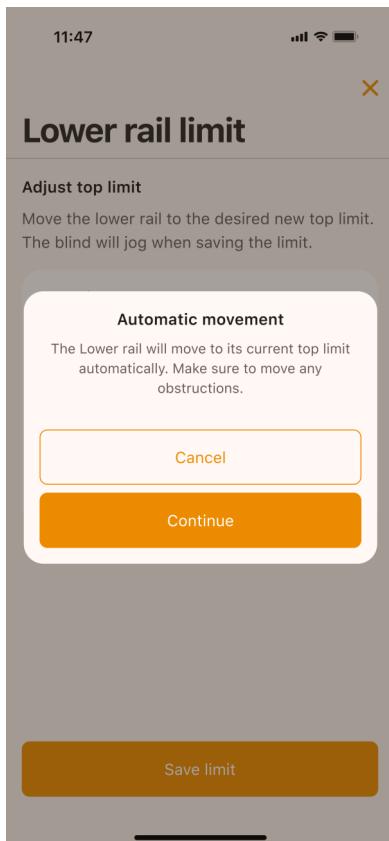

11 End limits




11.3 Adjust top limit position (Gen 2)

11.3.9 Use the on-screen direction arrows to adjust blind to new top limit position.³ Tap 'Save limit'. Motor will jog plus buzzer noise and 4x green LED.⁴

³ To protect the motor and components, do not overrun motor / overtighten fabric.

⁴ If no motor jog or buzzer noise / green LED, new end limit position is not saved.

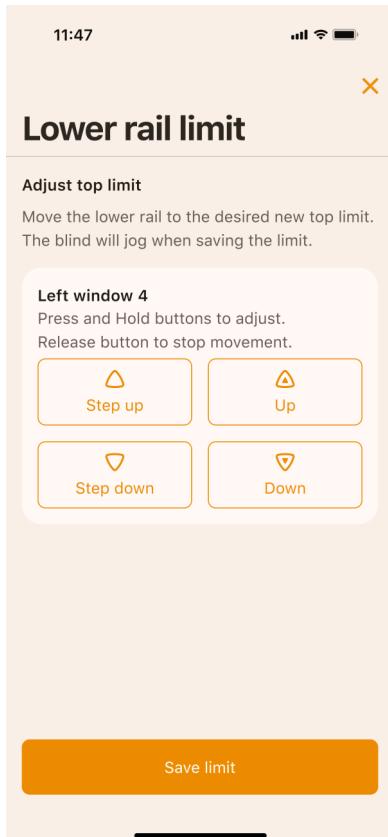

11 End limits




11.4 Adjust bottom limit position (Gen 2)

11.4.1 Tap the settings gear icon ①.

11.4.2 Tap 'Blinds' in room name wanting end limit adjusted.¹

¹ Shangri-La blinds do not have the option to adjust end limit positions.

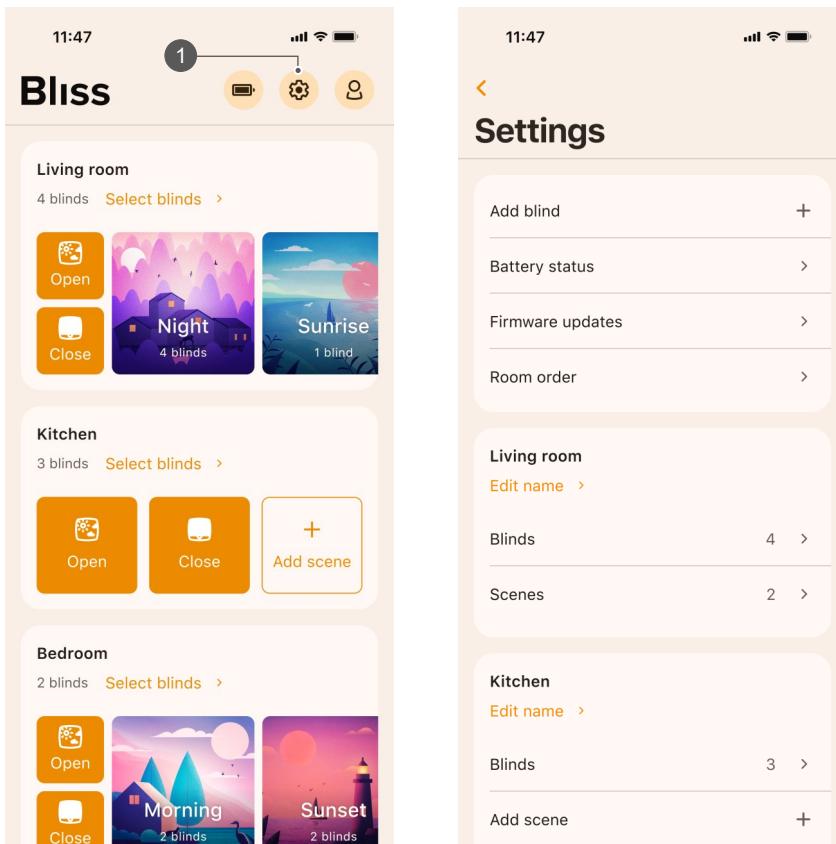



11 End limits



11.4 Adjust bottom limit position (Gen 2)

11.4.3 Select blind name.

11.4.4 Tap 'Advanced'.

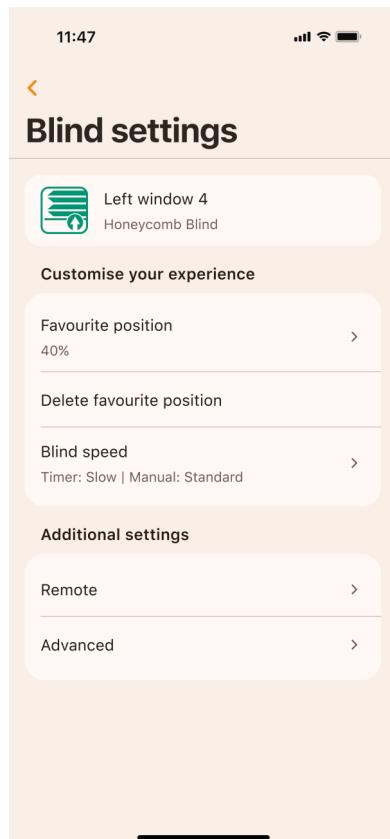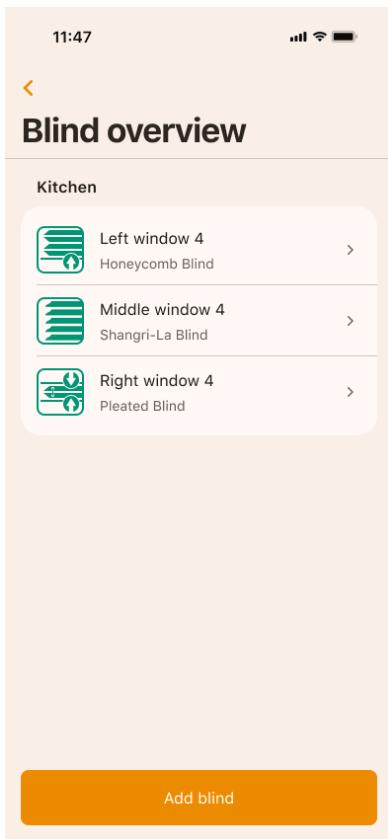



11 End limits



11.4 Adjust bottom limit position (Gen 2)

11.4.5 Tap 'Adjust bottom limit'.

11.4.6 Tap 'OK'.

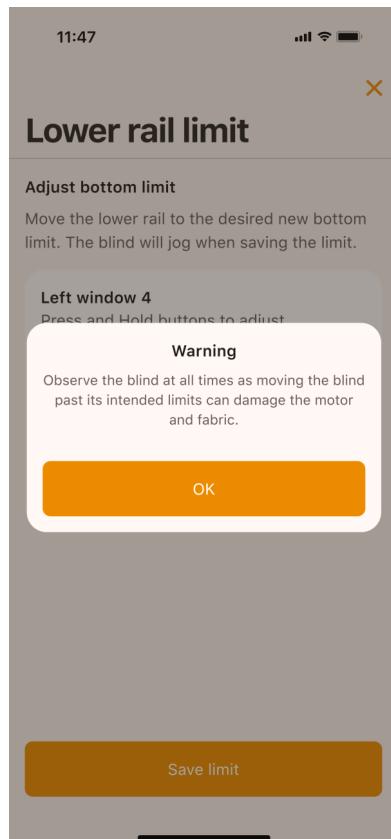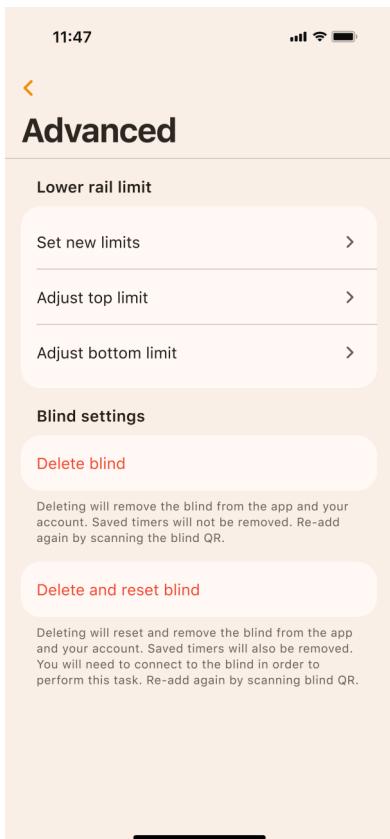

11 End limits





11.4 Adjust bottom limit position (Gen 2)

11.4.7 Tap '**Continue**'.

11.4.8 App will connect to the blind and automatically move to the saved bottom limit position. Motor will jog plus buzzer noise and 4x red LED.¹

¹ If blind is already at bottom limit position, motor will jog plus buzzer noise and 4x red LED.

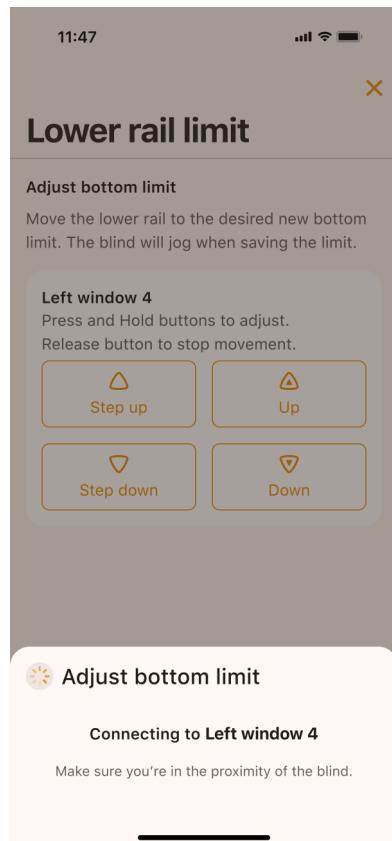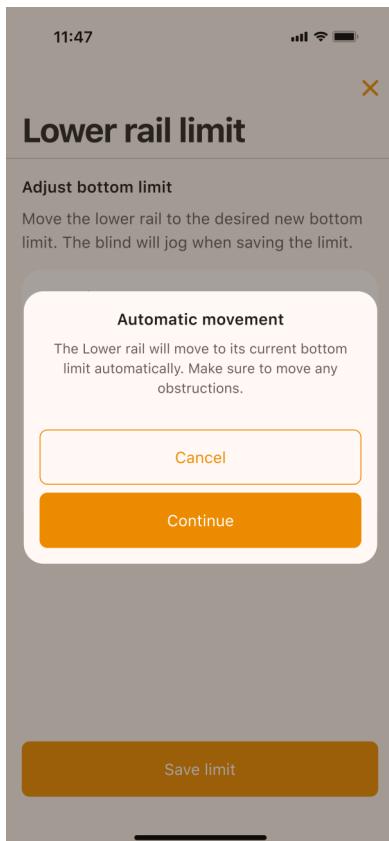

11 End limits




11.4 Adjust bottom limit position (Gen 2)

11.4.9 Use the on-screen direction arrows to adjust blind to new bottom limit position.² Tap 'Save limit'. Motor will jog plus buzzer noise and 4x green LED.³

² Top-Down, Bottom-Up product type will not allow bottom limit adjustment lower than factory set end limit.

³ If no motor jog or buzzer noise / green LED, new end limit position is not saved.

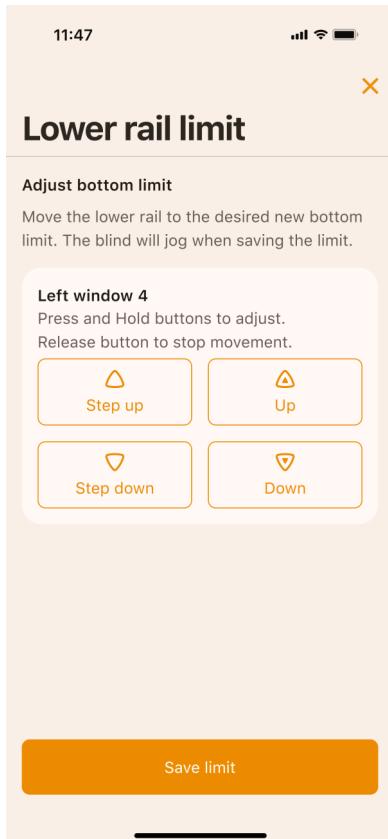



12 Room order



12.1 Change room order appearance

12.1.1 Tap the settings gear icon ①.



12.1.2 Tap 'Room order'.

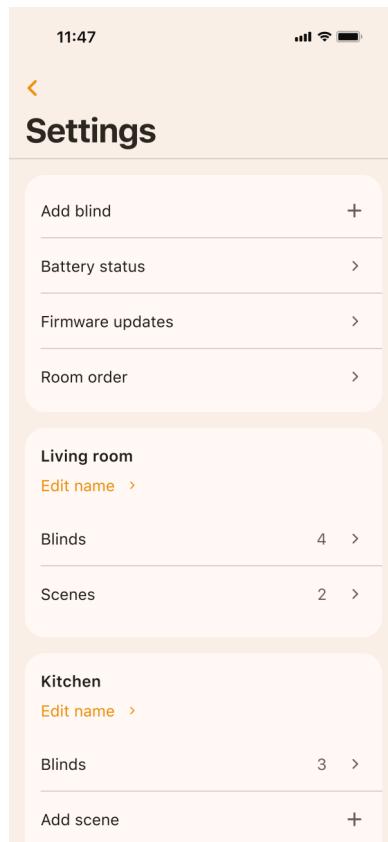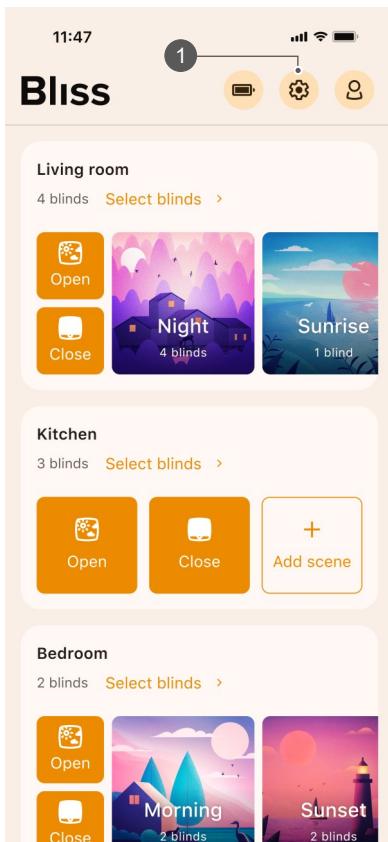

12 Room order



- 12.1 Change room order appearance
- 12.1.3 Current room order shown.
- 12.1.4 Drag room name to new position.

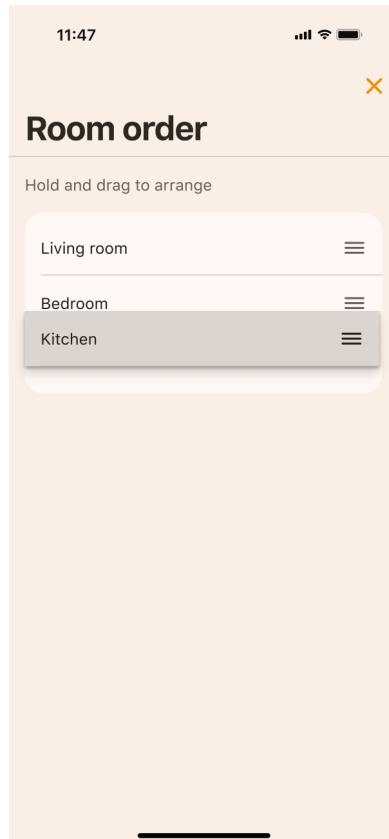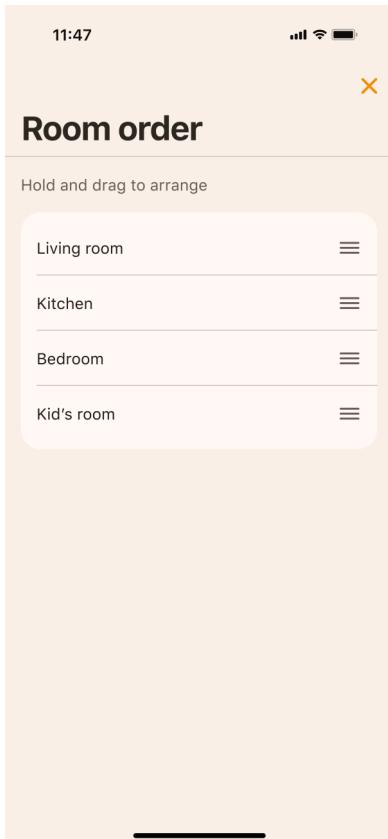


12 Room order



12.1 Change room order appearance

12.1.5 Revised room order shown.¹

¹ Room order displayed on-screen is specific to the device being used, even if two or more devices are signed in to the same account.

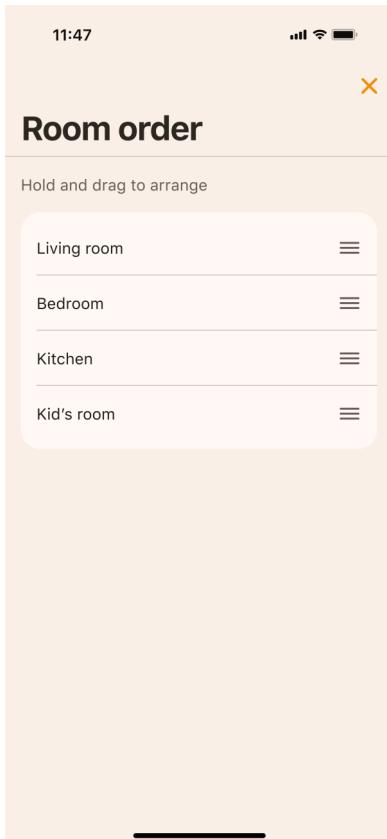



13 Appearance



13.1 Changing between light and dark mode

13.1.1 Tap the profile icon 1.

13.1.2 Tap 'Appearance'.

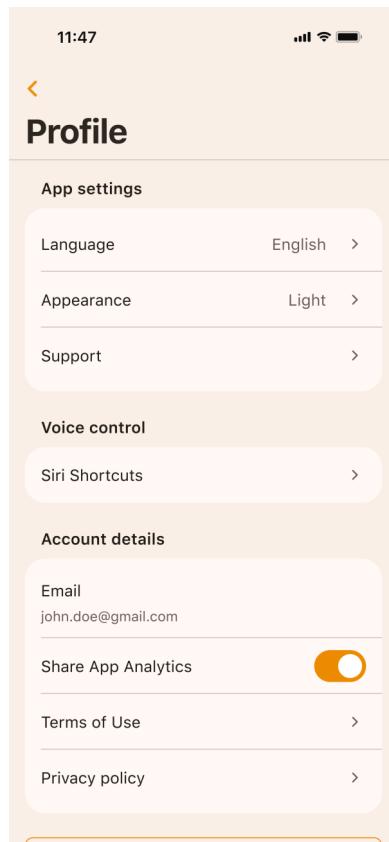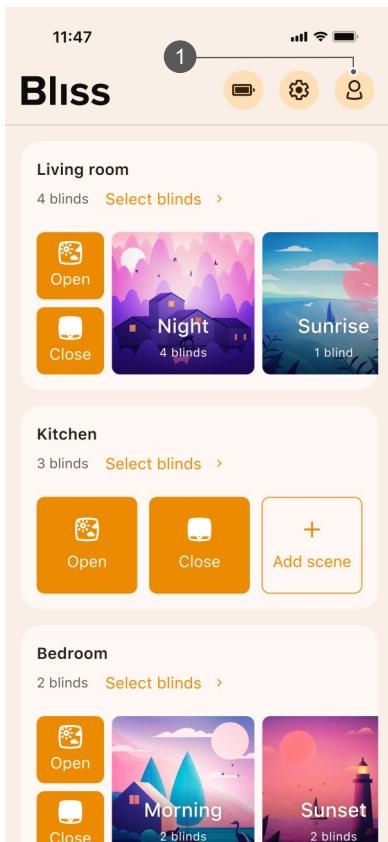


13 Appearance



13.1 Changing between light and dark mode

13.1.3 Select 'Light' or 'Dark' mode option. Alternatively, choose 'System' to automatically change the app's appearance based on the device's light and dark mode setting.

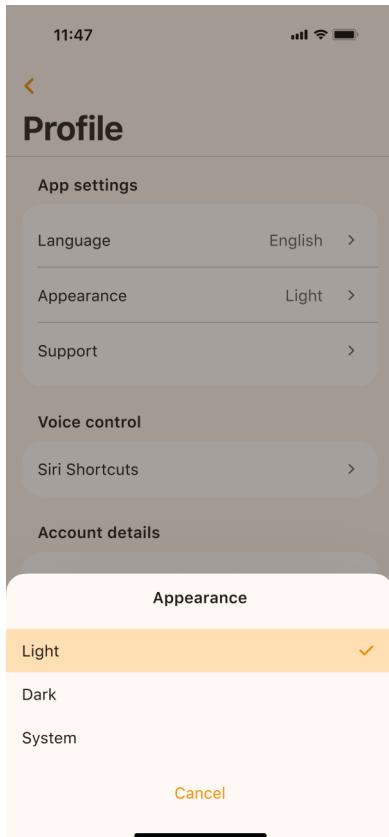



14 Siri Shortcuts



14.1 Creating a Shortcut for blind movement

14.1.1 Tap the profile icon 1.

14.1.2 Tap 'Siri Shortcuts'.

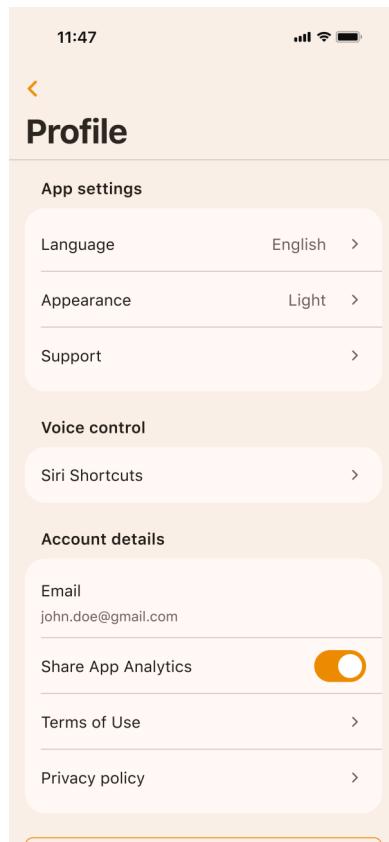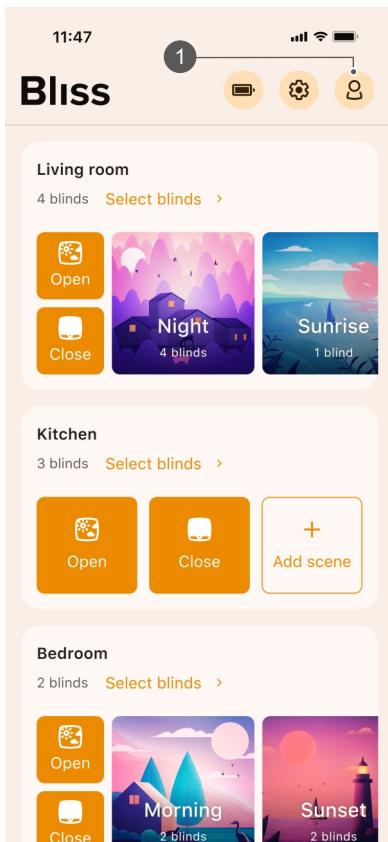


14 Siri Shortcuts



14.1 Creating a Shortcut for blind movement

- 14.1.3 Tap ‘**Add to Siri**’ button next to ‘Move blinds’.
- 14.1.4 Tap ‘**Record Phrase**’ to enter voice command used with the Shortcut. Alternatively, manually type the voice activation command by tapping the screen below ‘Hey Siri’.

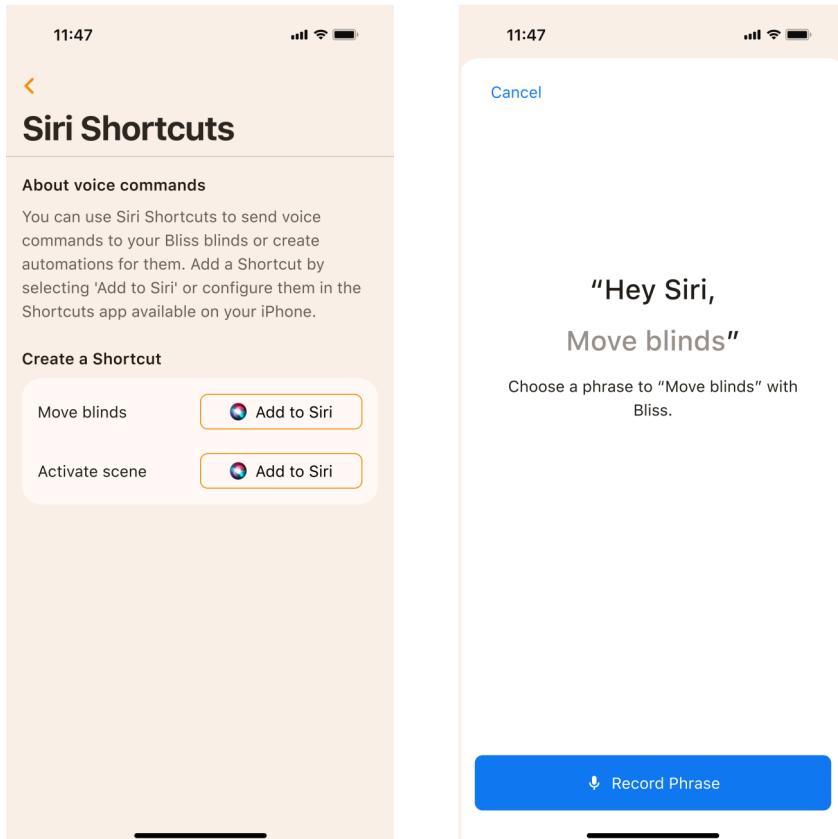


14 Siri Shortcuts



14.1 Creating a Shortcut for blind movement

14.1.5 Tap 'Edit in Shortcuts'.

14.1.6 Tap 'Command'.

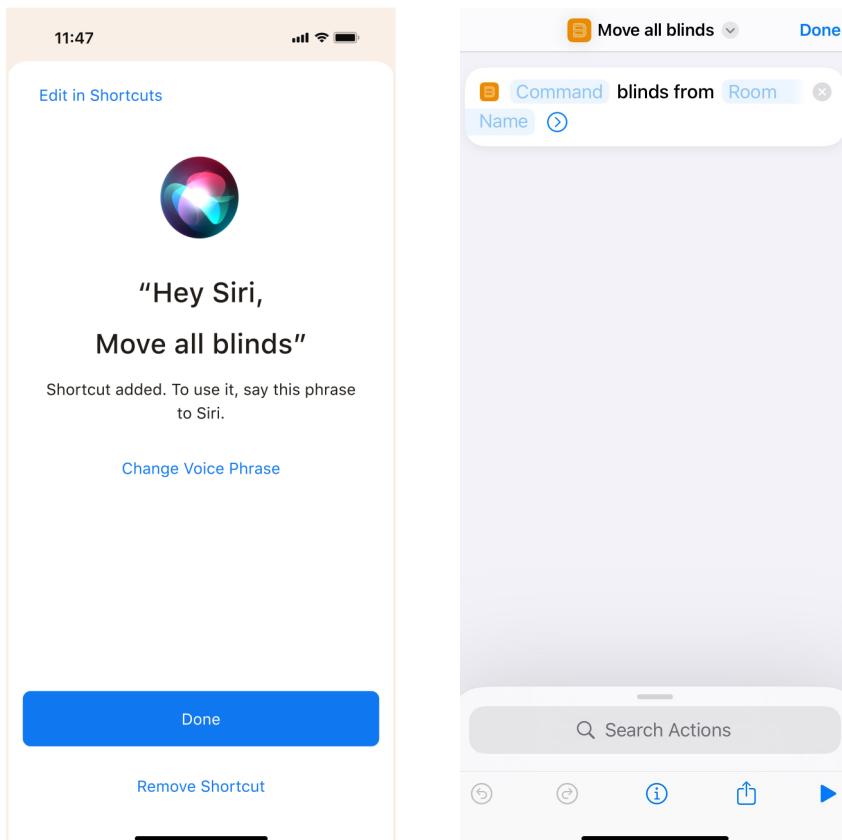



14 Siri Shortcuts



14.1 Creating a Shortcut for blind movement

14.1.7 Select an action name from the list (Open, Close, etc.).

14.1.8 Tap 'Room Name'.

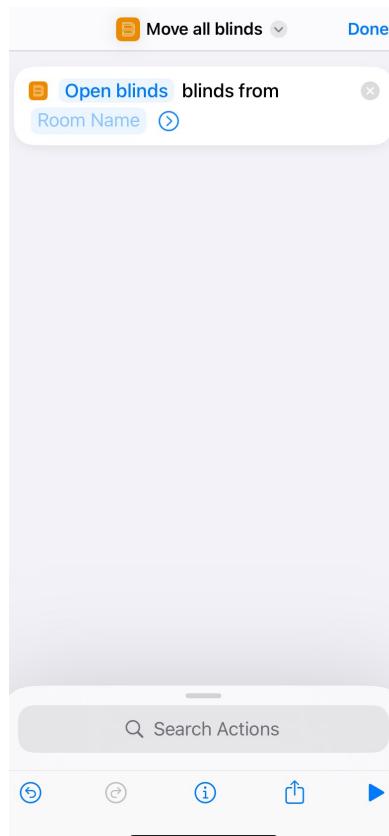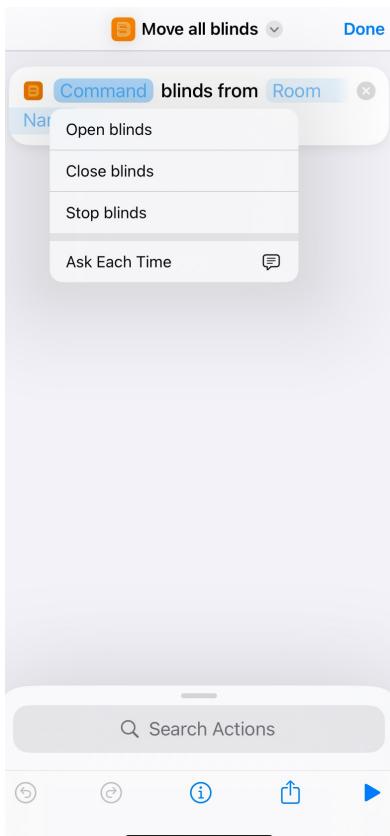


14 Siri Shortcuts



14.1 Creating a Shortcut for blind movement

14.1.9 Select room name from the list.

14.1.10 Shortcut created. Tap 'Done'.

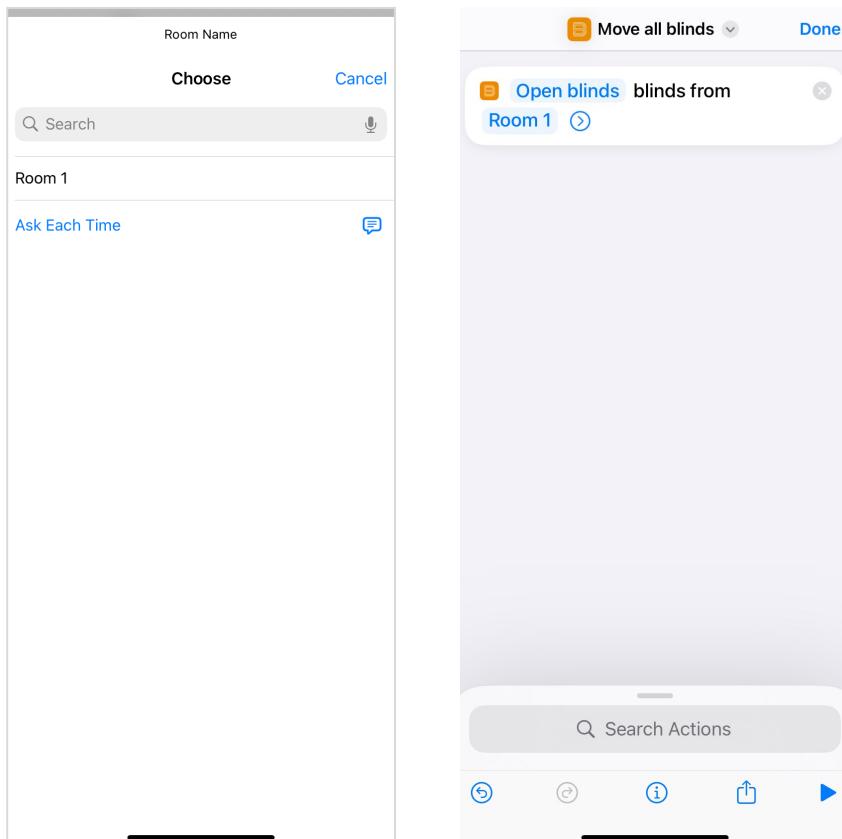


14 Siri Shortcuts



14.1 Creating a Shortcut for blind movement

14.1.11 Shortcut added to the Shortcuts app.

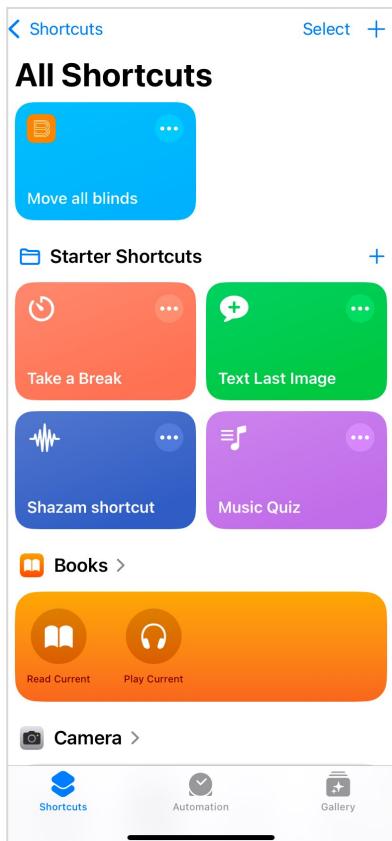


14 Siri Shortcuts



14.2 Creating a Shortcut for scene movement

- 14.2.1 Tap '**Add to Siri**' button next to 'Activate scene'.
- 14.2.2 Tap '**Record Phrase**' to enter voice command used with the Shortcut. Alternatively, manually type the voice activation command by tapping the screen below 'Hey Siri'.

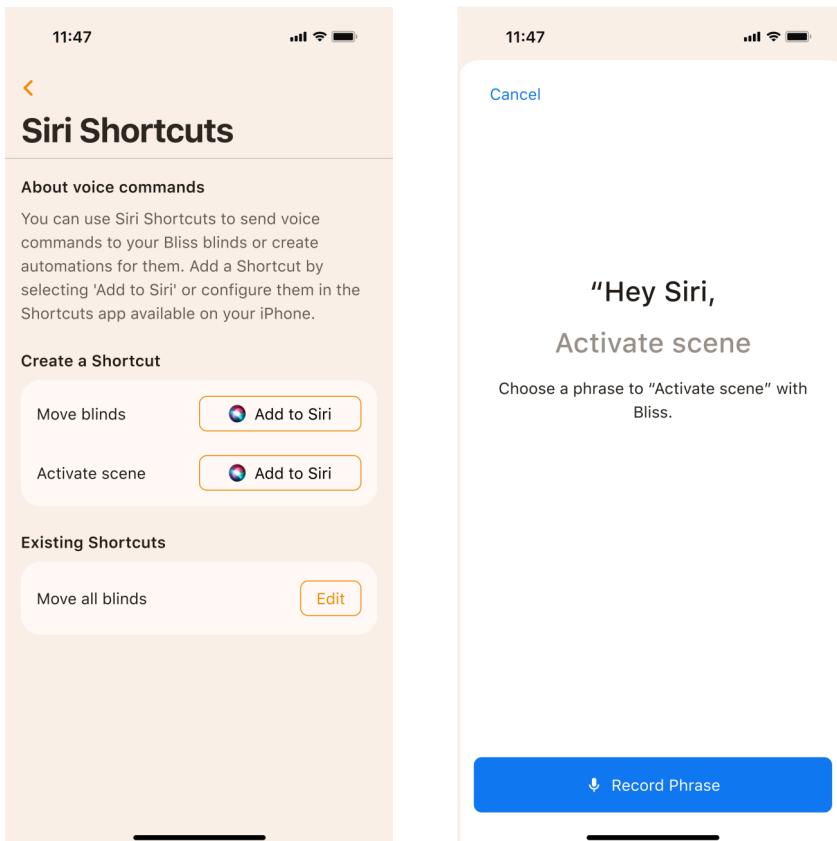


14 Siri Shortcuts



14.2 Creating a Shortcut for scene movement

14.2.3 Tap 'Edit in Shortcuts'.

14.2.4 Tap 'Room Name'.

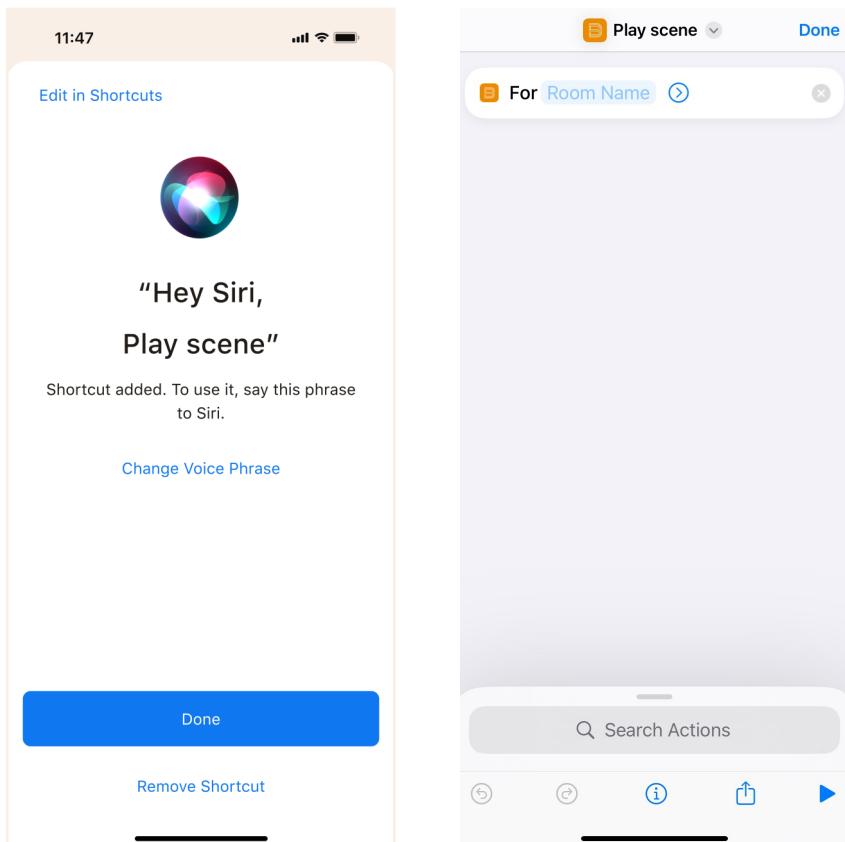



14 Siri Shortcuts



14.2 Creating a Shortcut for scene movement

14.2.5 Select room name from the list.

14.2.6 Tap 'Scene Name'.

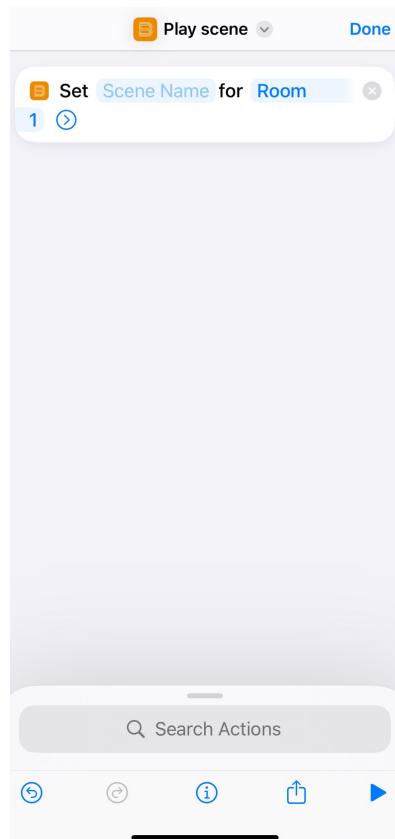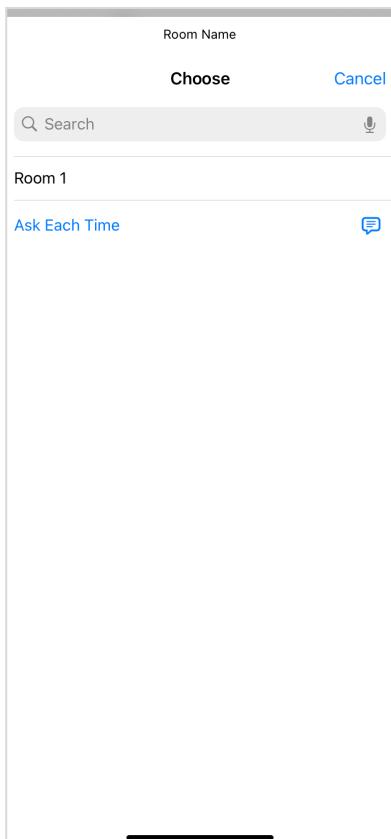



14 Siri Shortcuts



14.2 Creating a Shortcut for scene movement

14.2.7 Select scene name from the list.

14.2.8 Shortcut created. Tap 'Done'.

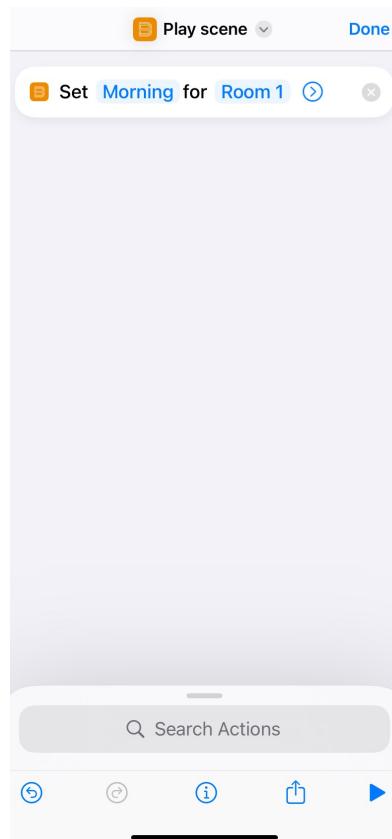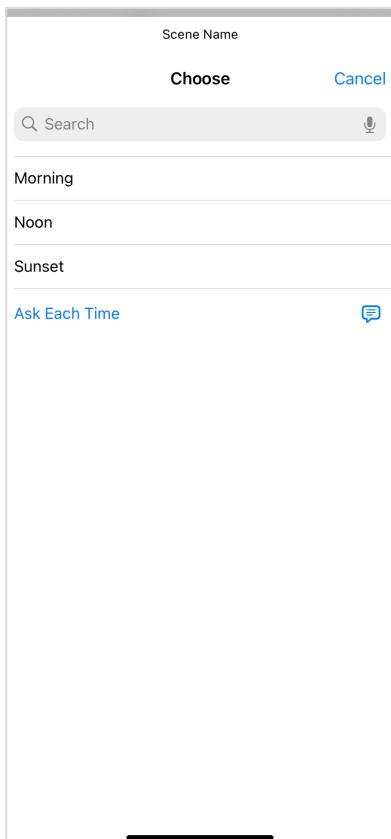


14 Siri Shortcuts



14.2 Creating a Shortcut for scene movement

14.2.9 Shortcut added to the Shortcuts app.

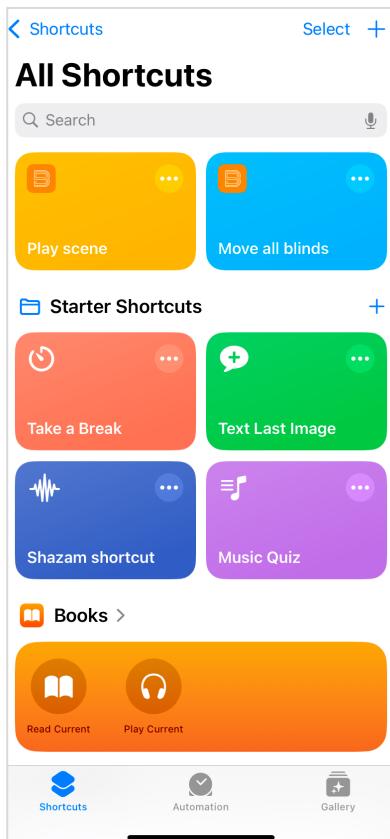


14 Siri Shortcuts



14.3 Operating Shortcuts - manual control

14.3.1 Open Shortcuts app. Tap Shortcut name 1.


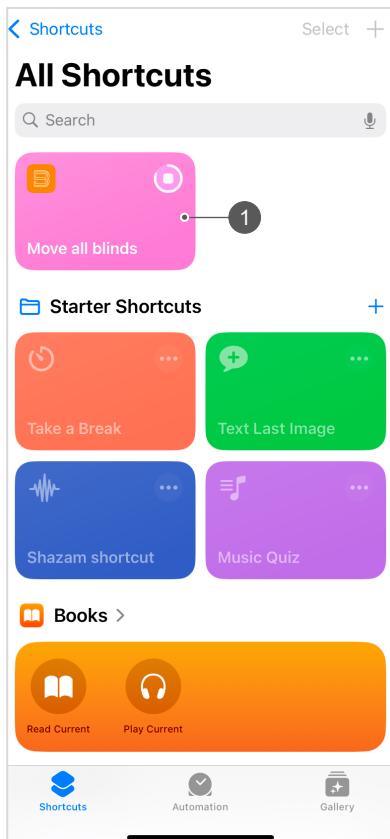


14 Siri Shortcuts



14.4 Operating Shortcuts - voice control

- 14.4.1 Say “Hey Siri...” and then Shortcut name created (e.g. “Move all blinds”).
- 14.4.2 Connection is made and blinds will move to the command position entered for the Shortcut.

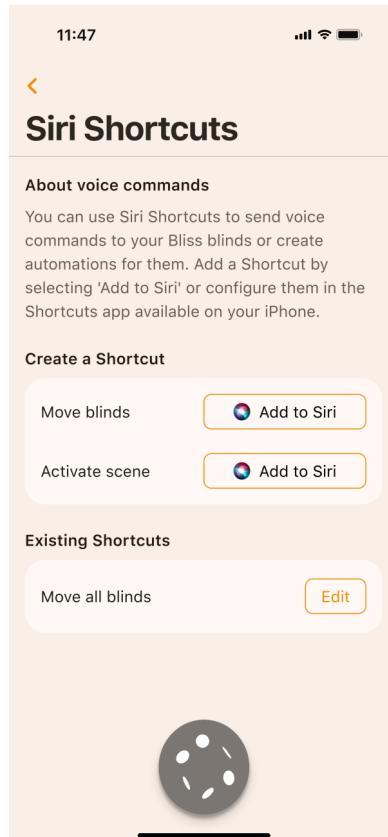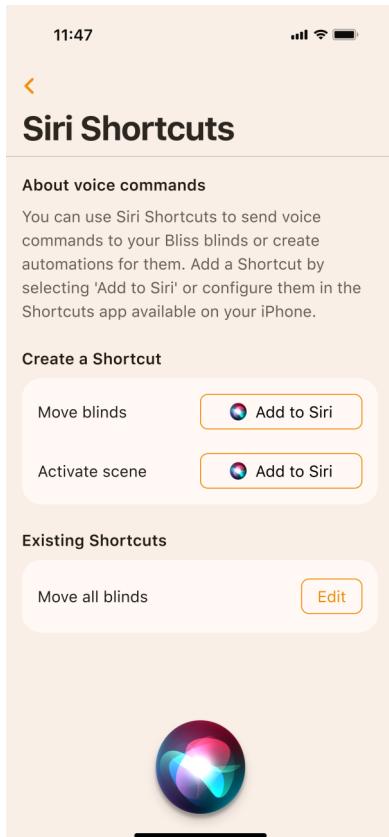


15 Deleting and resetting



15.1 Deleting a remote control

15.1.1 Tap the settings gear icon ①.

15.1.2 Tap 'Blinds' in room name wanting remote control deleted.

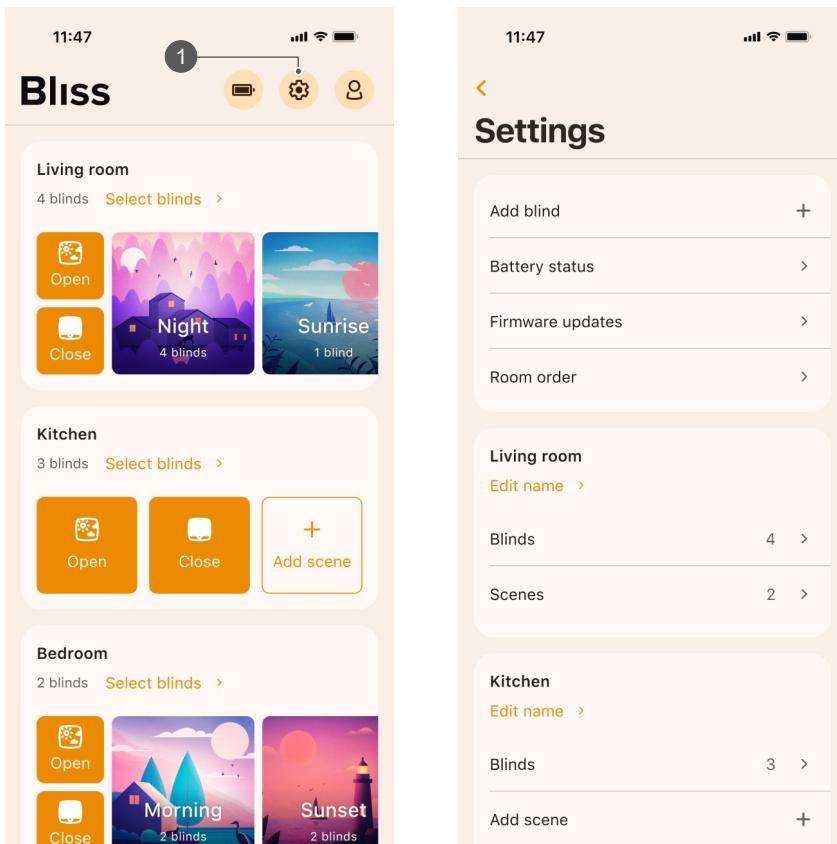



15 Deleting and resetting



15.1 Deleting a remote control

15.1.3 Tap blind name.

15.1.4 Tap 'Remote'.

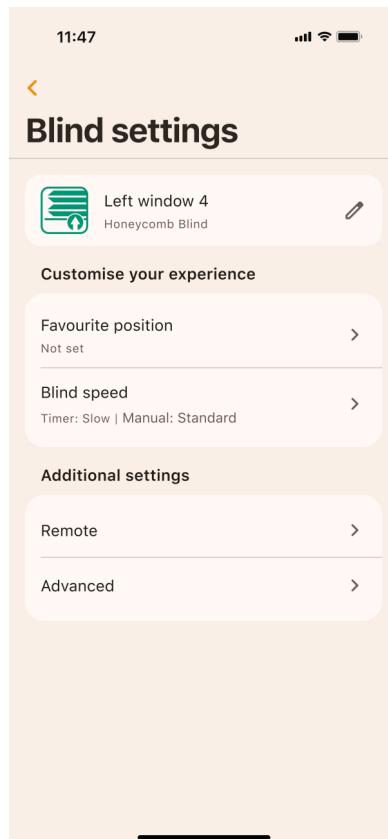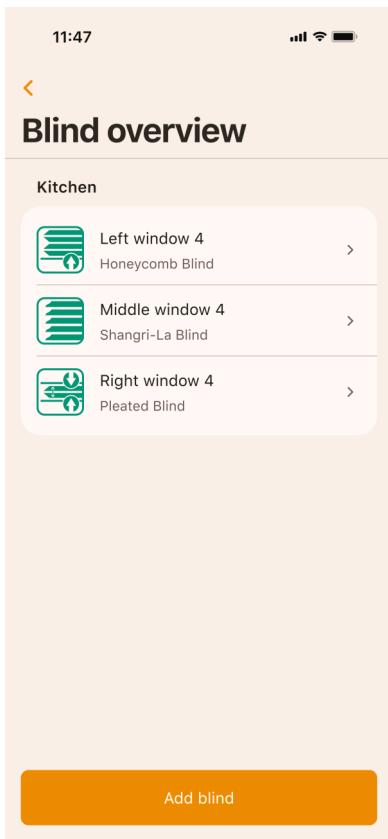

15 Deleting and resetting




15.1 Deleting a remote control

15.1.5 Tap ‘Delete all remotes’.¹

15.1.6 Tap ‘OK’.

¹ All remotes paired to the blind will be deleted.

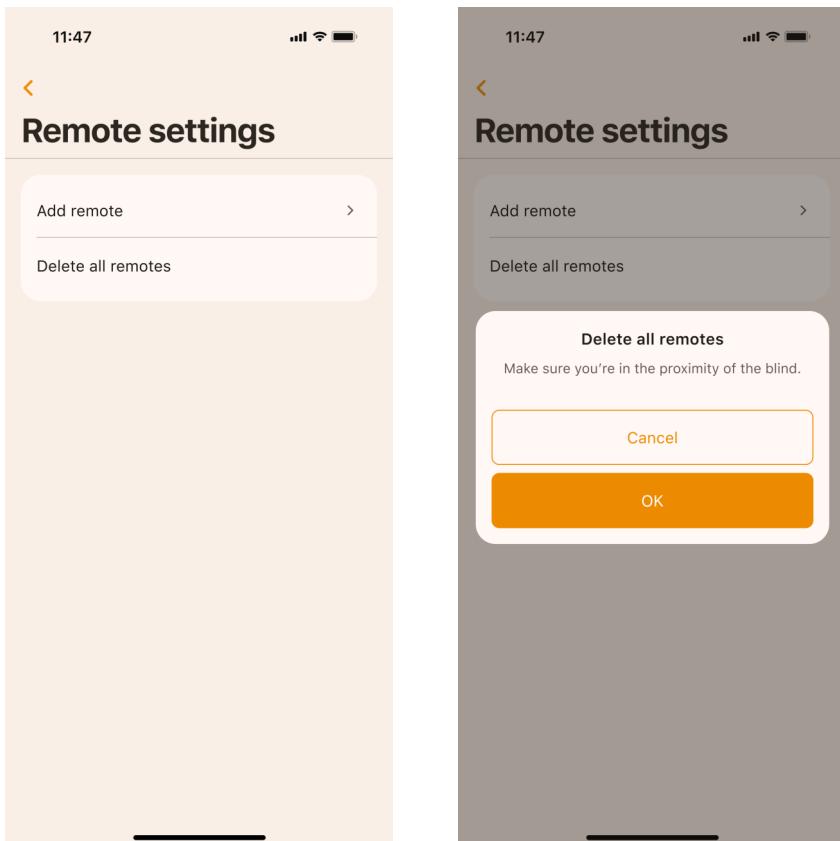

15 Deleting and resetting




15.1 Deleting a remote control

15.1.7 App will connect to the blind.

15.1.8 Motor will jog (Gen 1 / Gen 2) plus buzzer noise and 4x green LED (Gen 2). All remotes deleted from the blind.¹

¹ If no motor jog or buzzer noise / green LED, remote control is not deleted.

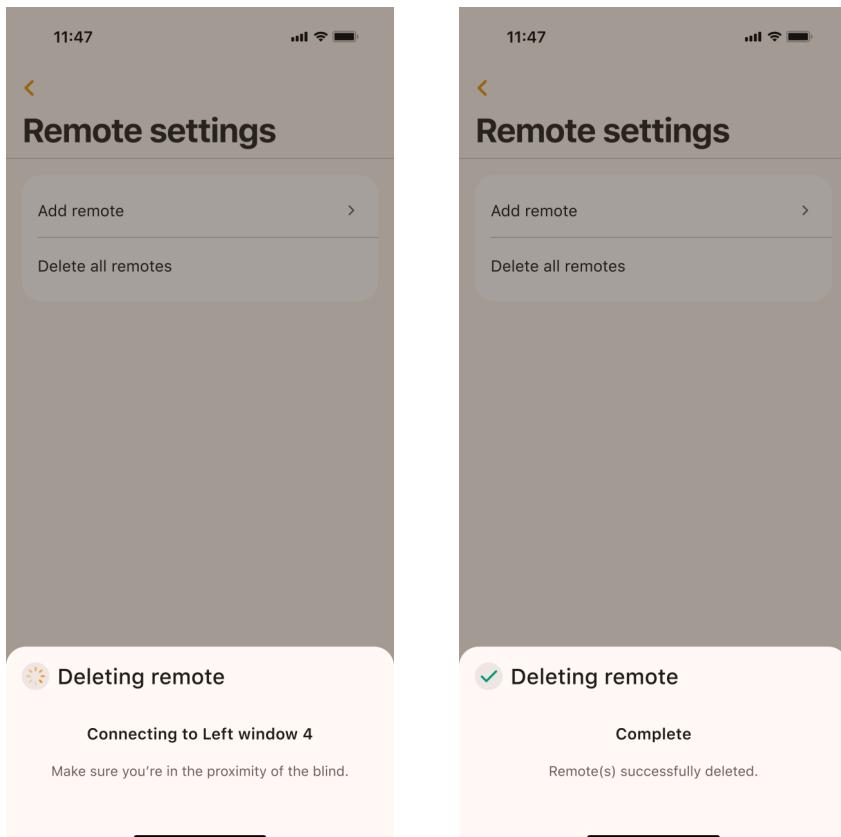


15 Deleting and resetting



15.2 Deleting blinds

- 15.2.1 Tap the settings gear icon ①.
- 15.2.2 Tap 'Blinds' in room name wanting blind deleted.

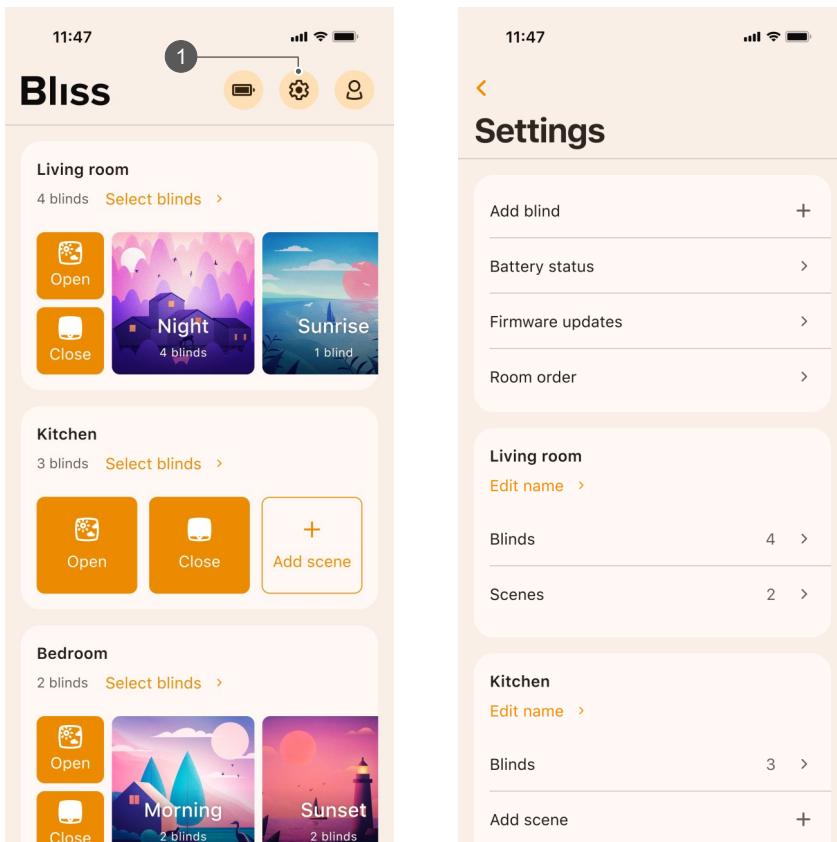



15 Deleting and resetting



15.2 Deleting blinds

15.2.3 Tap blind name.

15.2.4 Tap 'Advanced'.

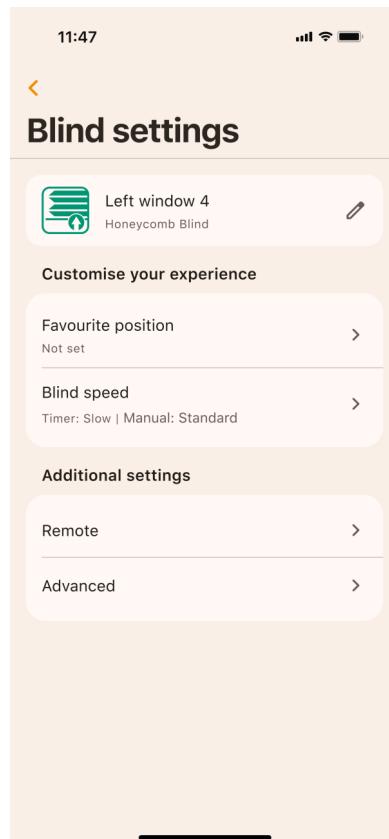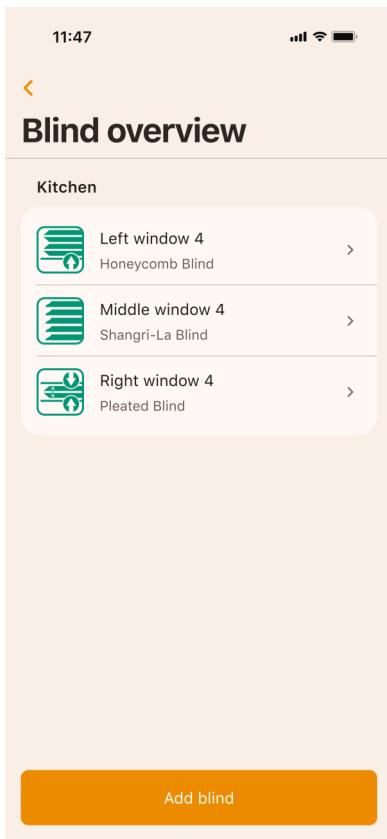

15 Deleting and resetting




15.2 Deleting blinds

15.2.5 Tap 'Delete blind'.

15.2.6 Tap 'Delete'. Blind will be deleted from the app and account being used.¹

¹ Deleting will remove the blind from the app and your account. Saved timers will not be removed. Re-add again by scanning the blind QR.

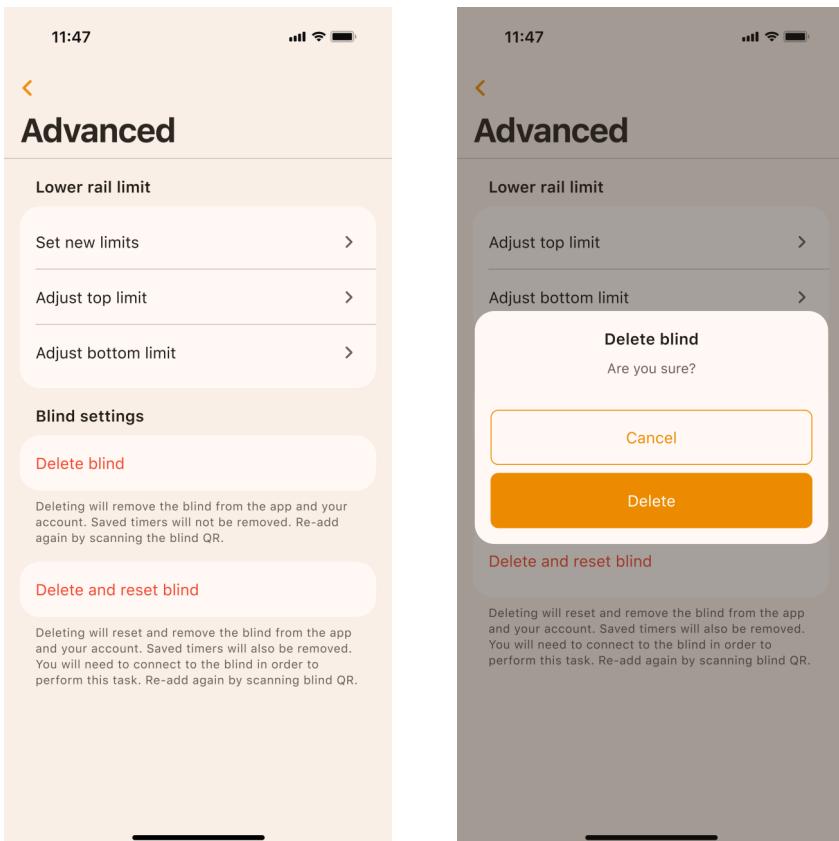



15 Deleting and resetting



15.3 Deleting and resetting blinds

15.3.1 Tap the settings gear icon ①.

15.3.2 Tap 'Blinds' in room name wanting blind deleted.

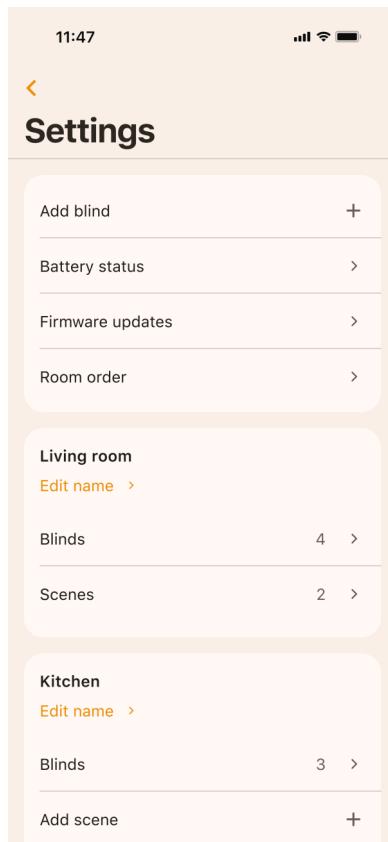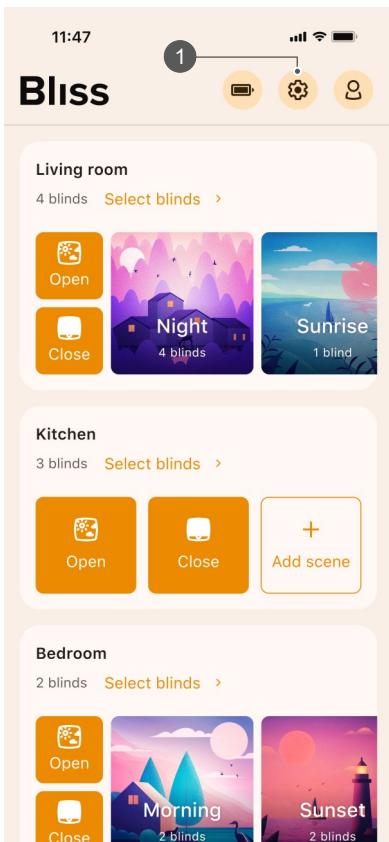



15 Deleting and resetting



15.3 Deleting and resetting blinds

15.3.3 Tap blind name.

15.3.4 Tap 'Advanced'.

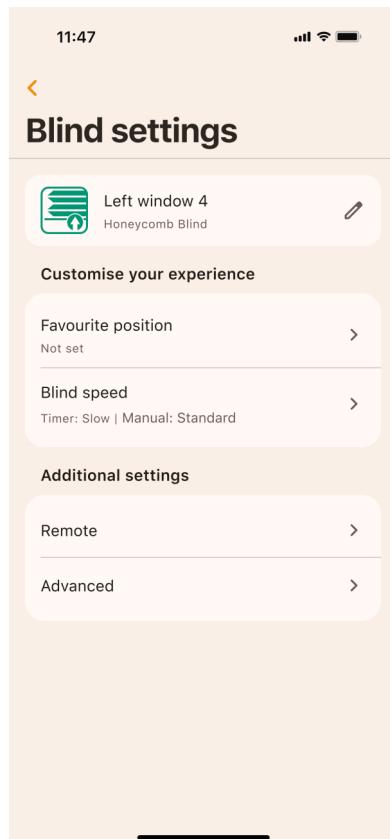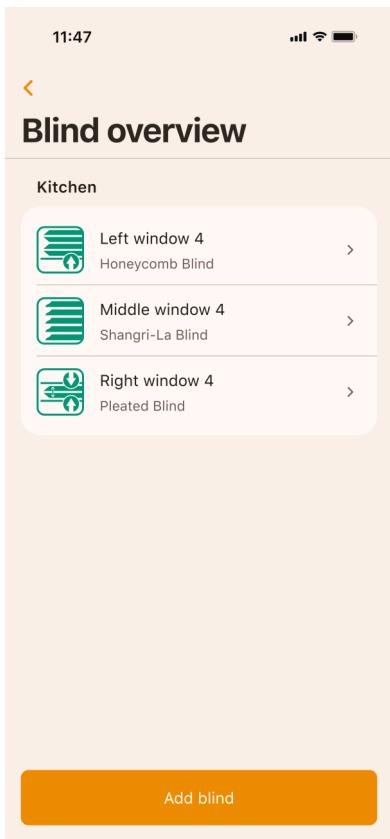

15 Deleting and resetting




15.3 Deleting and resetting blinds

15.3.5 Tap ‘Delete and reset blind’.

15.3.6 Tap ‘Delete’. Blind will be reset and deleted from the app and account being used. Motor will jog (Gen 1 / Gen 2) plus buzzer noise and 4x green LED (Gen 2).¹

¹ Deleting will reset and remove the blind from the app and your account. Saved timers will also be removed. You will need to connect to the blind in order to perform this task. Re-add again by scanning blind QR.

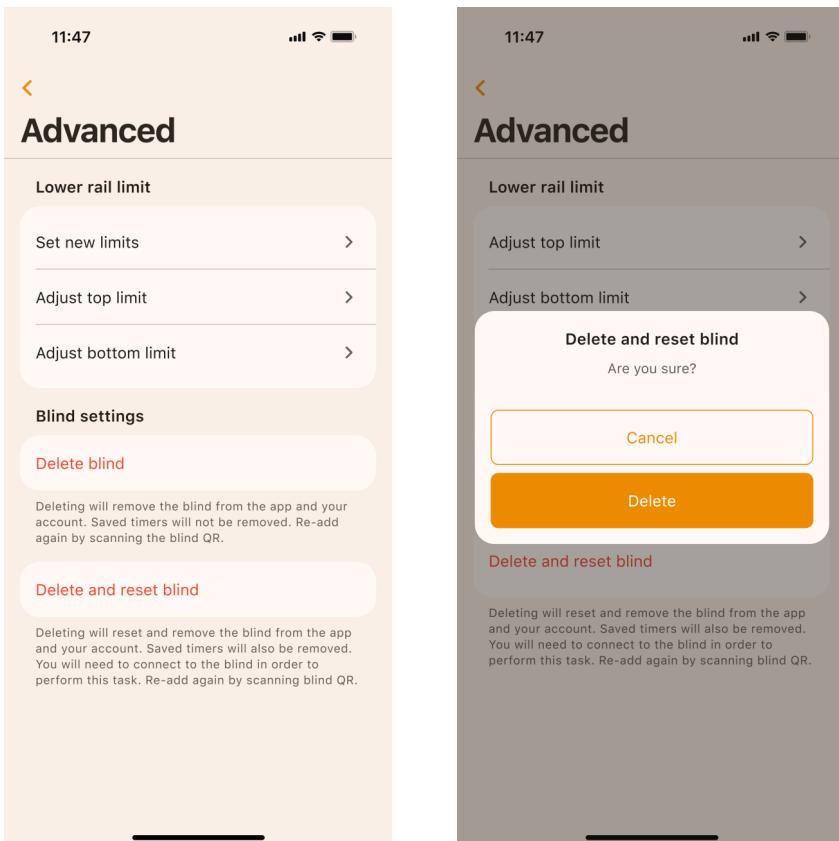



15 Deleting and resetting



15.4 Reset account password

15.4.1 Tap the profile icon 1.

15.4.2 Tap 'Reset password'.

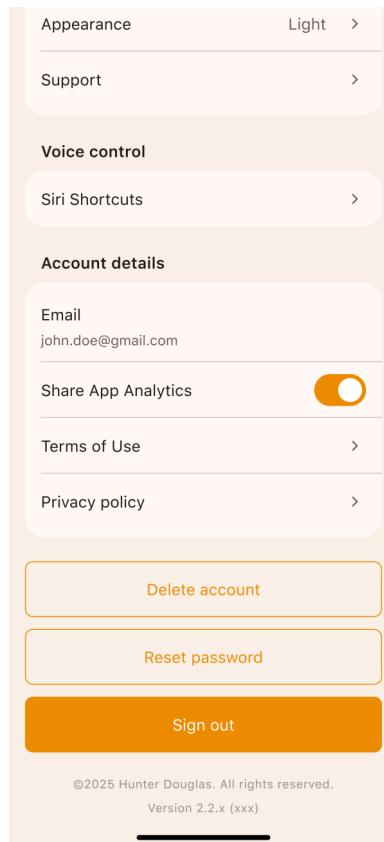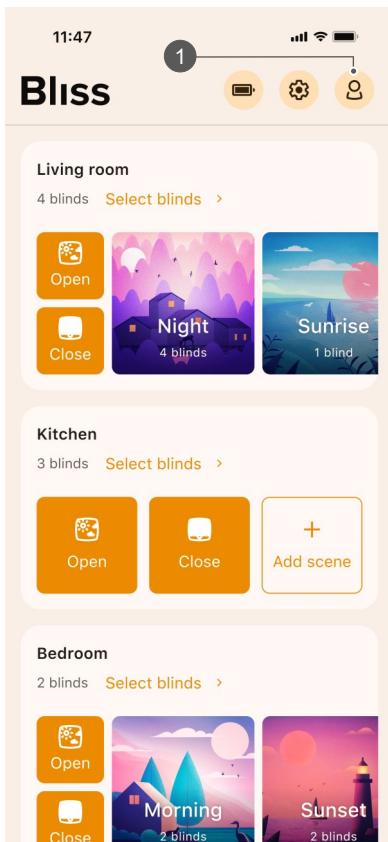


15 Deleting and resetting



15.4 Reset account password

15.4.3 Tap 'Update'.

15.4.4 Tap 'OK'. Follow the email instructions to change account password. App will sign the user out of the account.

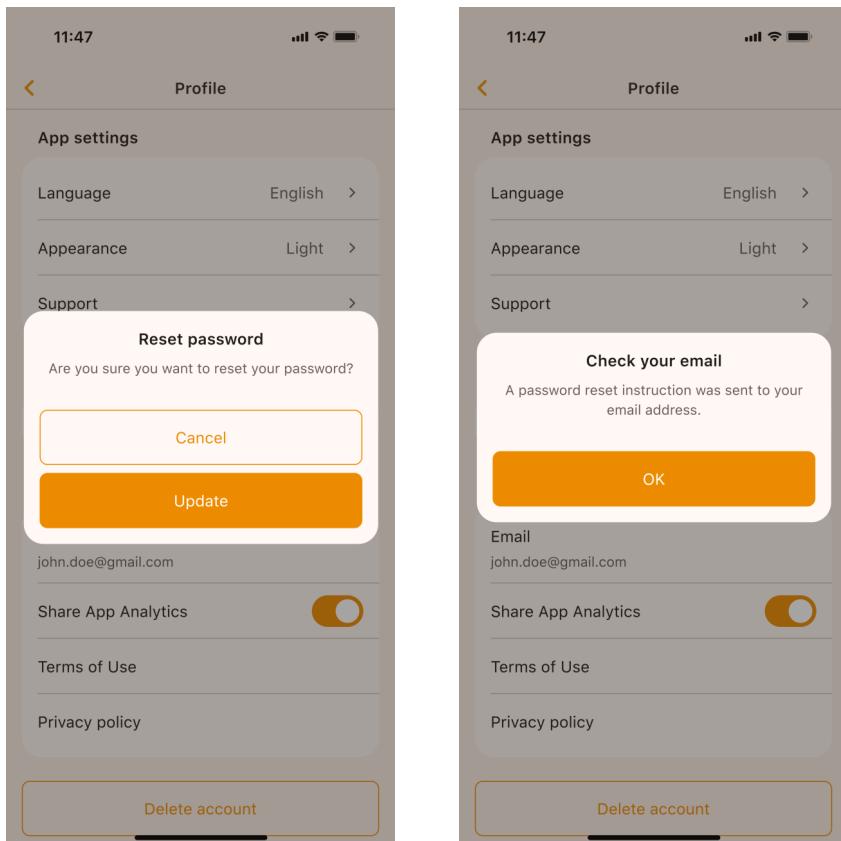

15 Deleting and resetting



15.4 Reset account password

- 15.4.5 Enter and confirm new password. Tap '**Save**'.
- 15.4.6 Tap '**Sign In**'. Enter account name and newly changed password to sign back in again.

**Reset
password**


New password

Please enter a password with more than 8 characters.

Confirm password

Please enter a password with more than 8 characters.

Save

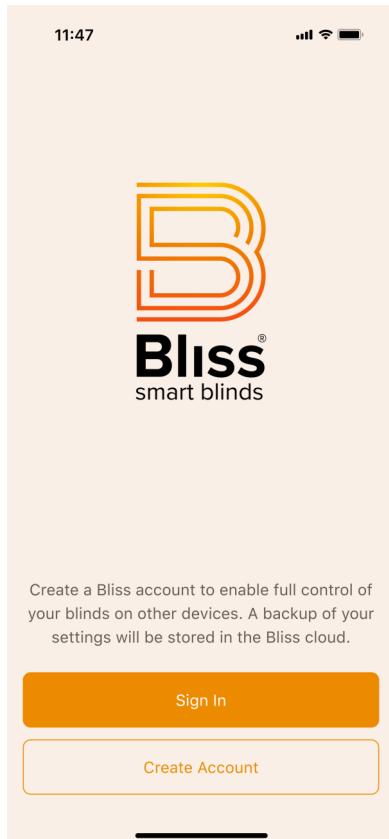



15 Deleting and resetting



15.5 Delete account

15.5.1 Tap the profile icon 1.

15.5.2 Tap 'Delete account'.

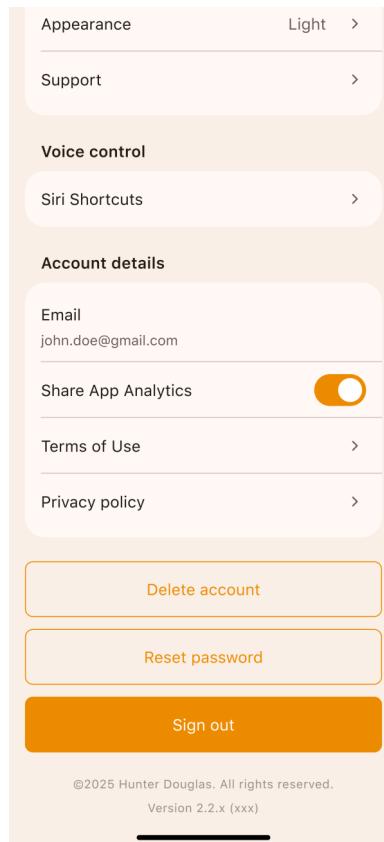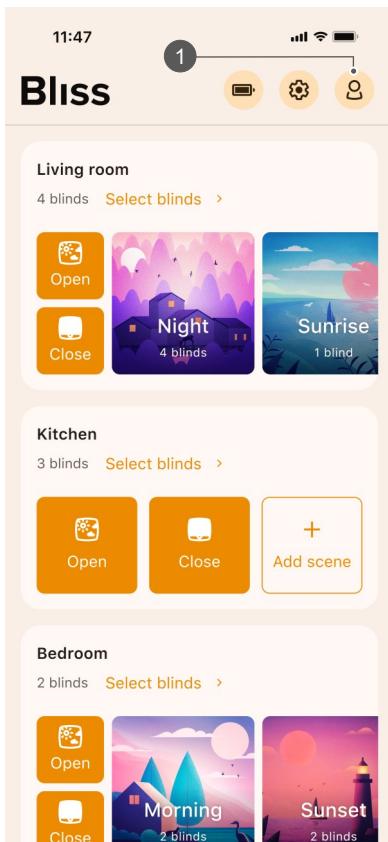

15 Deleting and resetting





15.5 Delete account

15.5.3 Tap 'Delete'.

15.5.4 App will return user to the Sign In screen.¹

¹ A previously deleted email address can be used again when creating a new account.

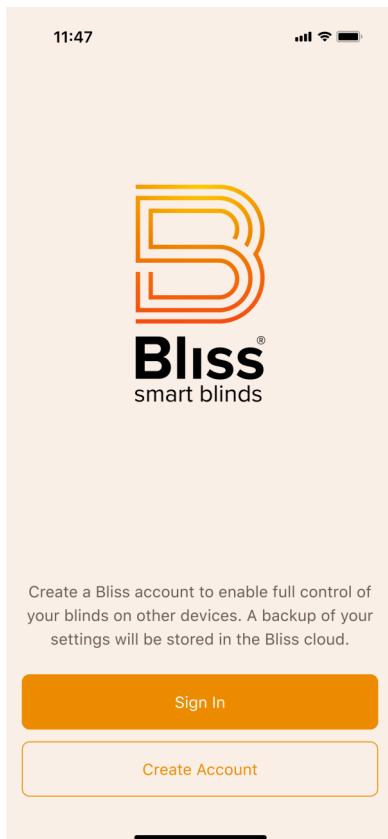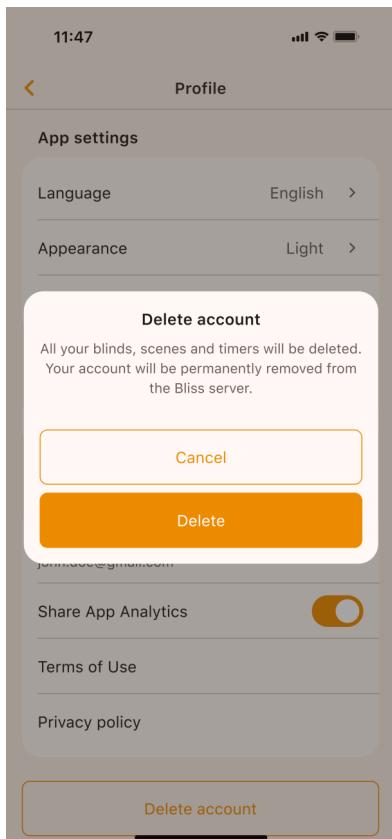


16 Support & troubleshooting



16.1 FAQs

16.1.1 Tap the profile icon 1.

16.1.2 Tap 'Support'.

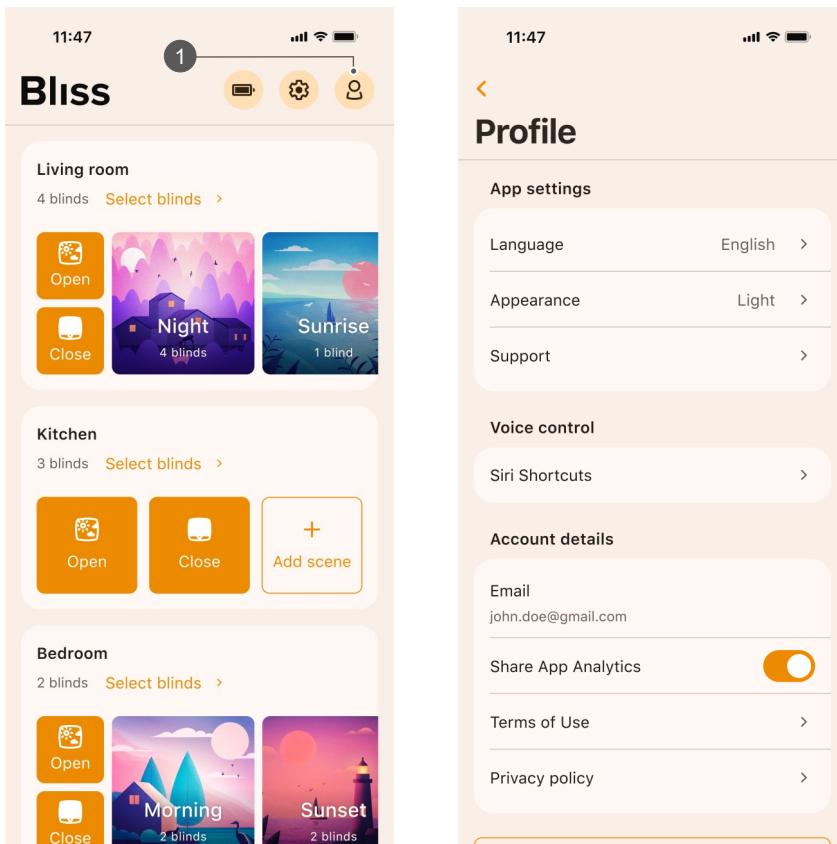



16 Support & troubleshooting



16.1 FAQs

16.1.3 Tap 'FAQs'.

16.1.4 App will direct user to SmartView FAQ pages including general questions, troubleshooting, accounts, motors, remotes etc.

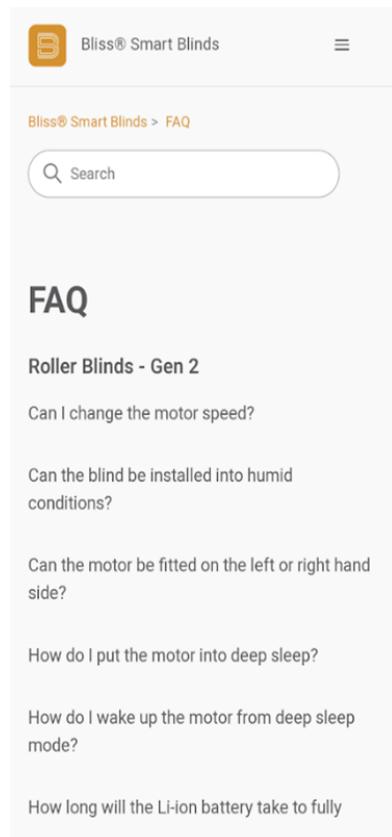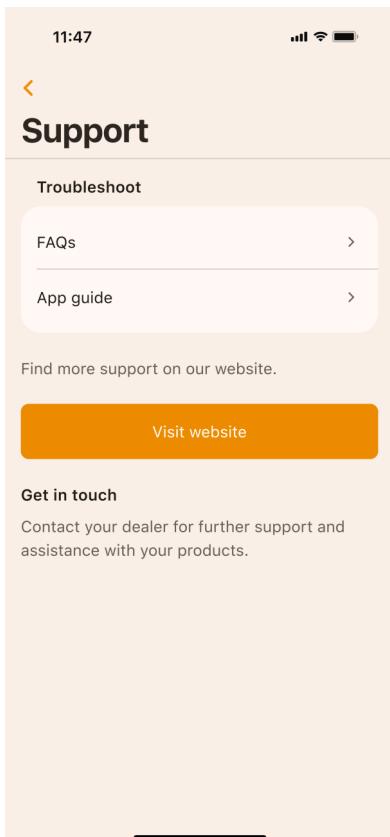

16 Support & troubleshooting



16.1 FAQs

16.1.5 Can I add Gen 1 and Gen 2 into the same Room in the app?

Yes, there are no restrictions to adding both generations of blinds into a Room within the app.

Can I add the same blind to more than one Room using the app?

No. A blind can only be added to one Room in the app.

Can I move a blind from one Room to another using the app?

No. It is not possible to relocate a blind from one room to another in the app.

Can I adjust blind settings without being at home?

No. The app requires the user to be at home and in close proximity to the blind to change settings with an active Bluetooth connection from the smartphone to blind.

Can two different blinds have the same name in the app?

No. Each blind will need to have its own unique name.

How long will it take for the blind to activate / move when using the app?

It will take approx. 1 second for the blind to move, after receiving the command from the app.

16 Support & troubleshooting



16.1 FAQs

16.1.5 How many timers can each blind have?

The maximum number of timers that can be added to an individual blind is 16.

How many timers can each scene have?

Each scene can have one timer.

Do I need to install and power on my blinds one at a time, or can I install and power on all blinds at the same time?

You can power on all blinds at the same time, and use the guided setup process to add blinds to the app as desired. We do recommend installing blinds into the app one room at a time and be within proximity of your blinds to set them up.

Is an internet connection required for using the app?

Yes, an internet connection is required for both account setup and operation of the blinds, using the app.

For more information and FAQs, visit:

<https://hdebliss.zendesk.com>





16 Support & troubleshooting



16.2 App guide

16.2.1 Tap the profile icon 1.

16.2.2 Tap 'Support'.

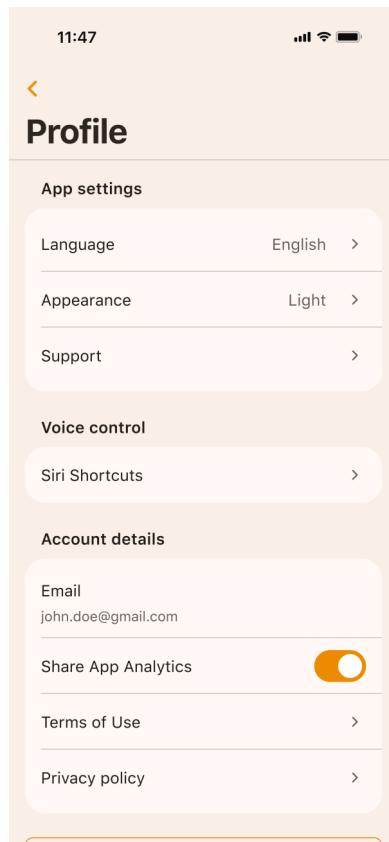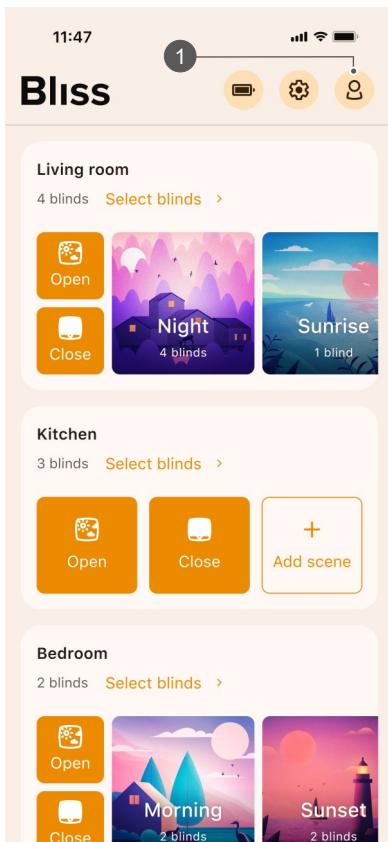



16 Support & troubleshooting



16.2 App guide

16.2.3 Tap 'App guide'.

16.2.4 App will direct user to the SmartView App guide that can be downloaded for future reference.

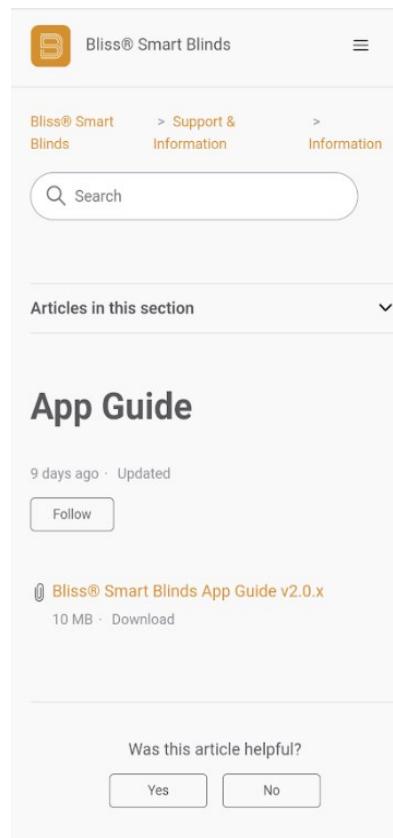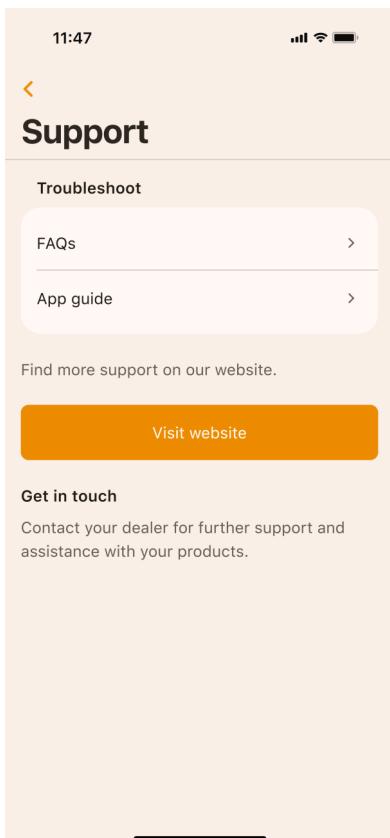

To download the app, visit:
www.bliss-smartblinds.com/app

Or scan the below QR code.



® Registered trademark of Hunter Douglas

™ Trademark of Hunter Douglas